

User Guide

PANTUM

WWW.PANTUM.COM

Pantum CM1100 Series

Color laser multifunction printer (ADF model)



It is recommended that you read this Guide carefully before using the printer

Preface

Welcome to the Pantum Series products!

We heartily appreciate your using of Pantum Series products!

To protect your vital interests, please carefully read the following statements.

Legal Notice

Trademark

Pantum and Pantum logos are registered trademarks of Zhuhai Pantum Electronics Co.,Ltd.

Microsoft®, Windows®, Windows Server® and Windows Vista® are trademarks registered by Microsoft Corporation in the United States or other countries/regions.

Apple, AirPrint and Mac are trademarks of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Mopria®, the Mopria® Logo, and the Mopria Alliance™ word mark and logo are registered and/or unregistered trademarks and service marks of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

Wi-Fi Direct, Wi-Fi Protected Setup(WPS), WPA, WPA2, and Wi-Fi Protected Access are marks of the Wi-Fi Alliance.

The ownership to the names of the software in this User Guide belongs to their respective companies in accordance with corresponding license agreement, and they are referred for instructions only.

All other product and brand names herein may be the registered trademarks, trademarks or service marks of their respective owners, and they are referred for instructions only.

Copyright

The Copyright of this User Guide is owned by Zhuhai Pantum Electronics Co.,Ltd.

It is prohibited to copy, translate, modify and transmit this User Guide by any means or in any form without the prior written consent of Zhuhai Pantum Electronics Co.,Ltd.

Version: V1.0

Disclaimer

For a better user experience, Zhuhai Pantum Electronics Co.,Ltd. reserves the right to make changes to the User Guide. The information contained herein is subject to change without notice. Users are responsible for any damages arising from failing to follow this User Guide. Meanwhile, except the express warranty made in the product maintenance manual or service commitment, Zhuhai Pantum Electronics Co.,Ltd. does not make any express or implied warranty or guarantee to this User Guide (including composing or words).

Using this product to copy, print, scan certain documents or images or make other forms of operations may be prohibited by the local laws. If you are uncertain about the legality of using this product for certain documents or images, you should consult your legal advisor in advance.

The product can only be used safely in the non-tropical areas at an altitude no higher than 2000 meters.

Safety Precautions

Disconnect the power supply

The product should be placed close to or easily accessible to power sockets, so as to allow easy disconnection of power supply!


Laser Safety

The laser radiation is harmful to the human body. Since laser components are completely sealed in the printer, laser radiation will not leak. To avoid laser radiation, please do not randomly disassemble the printer!

The printer follows the provisions of Class 1 laser products under CFR standard. The printer has a Class III b laser diode, which has no laser radiation leakage among laser components. The laser components shall comply with the requirements of: U.S. Code of Federal Regulations, 21 CFR 1040, IEC 60825-1.

Safety Warning

Please note the following safety warnings before using the printer:

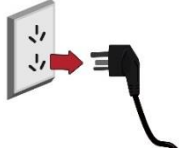 Warning	
 There is high-voltage electrode inside the printer. Before cleaning the printer, make sure the power is turned off!	
 Plugging and unplugging the power cord plug with a wet hand can result in an electric shock.	
 The fuser unit is hot when and after printing. Touching the fuser unit (the shaded area as shown) may cause burns!	
 The fuser unit is attached with a high temperature warning label. Please do not remove or damage this label.	

Safety Information

Conventions

CAUTION: A caution indicates a potentially hazardous situation that could injure you.

Note: A note indicates the information that could help you or something that could damage the product hardware or software.

Different types of caution statements include:



CAUTION - POTENTIAL INJURY: Indicates a risk of injury.



CAUTION - SHOCK HAZARD: Indicates a risk of electrical shock.



CAUTION - HOT SURFACE: Indicates a risk of burn if touched.



CAUTION - TIPPING HAZARD: Indicates a crush hazard.



CAUTION - PINCH HAZARD: Indicates a risk of being caught between moving parts.



CAUTION - ROTATING FAN BLADES: Indicates a risk of being lacerated by moving fan blades.

Disclaimer



CAUTION - POTENTIAL INJURY: To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



CAUTION - POTENTIAL INJURY: To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



CAUTION - POTENTIAL INJURY: Do not use this product with extension cords, multioutlet power strips, multioutlet extenders, or UPS devices. The power capacity of these types of accessories can be easily overloaded by a laser printer and may result in a risk of fire, property damage, or poor printer performance.



CAUTION - POTENTIAL INJURY: Do not use this product with an inline surge protector. The use of a surge protection device may result in a risk of fire, property damage, or poor printer performance.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, do not place or use this product near water or wet locations.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections during a lightning storm.



CAUTION - POTENTIAL INJURY: Do not cut, twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If any of these things happen, it could result in a risk of

fire or electrical shock. Inspect the power cord regularly for signs of such problems. Remove the power cord from the electrical outlet before inspecting it.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, make sure that all external connections (such as Ethernet) are properly installed in their marked plug-in ports.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices after setting up the printer, turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, turn them off as well, and unplug any cables going into the printer.



CAUTION - SHOCK HAZARD: To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.



CAUTION - POTENTIAL INJURY: If the printer weighs more than 18 kg, then it requires two or more trained personnel to lift it safely.



CAUTION - POTENTIAL INJURY: When moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Make sure that all covers and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has casters on its base, then carefully move it to the new location. Use caution when passing over thresholds and breaks in flooring.
- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Keep the printer upright.
- Avoid violent vibrations when moving.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.



CAUTION - HOT SURFACE: The inside of the printer might be hot. To reduce the risk of injury by a hot component, allow the surface to cool before touching it.



CAUTION - HOT SURFACE: Some parts of the printer are still in high temperature within a short time after use. To prevent burns, please don't directly touch places labeled with high temperature warning in contact with internal components after opening the printer's front or rear cover.



CAUTION - PINCH HAZARD: To avoid the risk of a pinch injury, use caution in areas marked with this label. Pinch injuries may occur around moving parts, such as gears, covers, trays, and covers.



CAUTION - ROTATING FAN BLADES: To avoid the risk of laceration from moving fan blades, turn off the printer and unplug the power cord from the electrical outlet before accessing areas marked with this symbol.



CAUTION - POTENTIAL INJURY: This product uses lasers. Use of controls or adjustments or performance of procedures other than those specified in the User's Guide may result in hazardous radiation exposure.

This product is designed, tested, and approved to meet strict global safety standards with the use of specific manufacturer's components. The safety features of some parts may not always be obvious. The manufacturer is not responsible for any adverse consequences caused by using parts of other manufacturers. For services or repairs other than those described in the user document, please contact the Customer Service Center.

This product uses a printing process that heats the print media, and the heat may cause the media to release emissions. Please read and understand the section in your operating instructions that discusses the guidelines for selecting print media properly to avoid the possibility of harmful emissions.

This product may produce a small amount of ozone during normal operation, and may be equipped with a filter designed to limit ozone concentrations to levels well below the recommended exposure limits. To avoid high ozone concentration levels during extensive usage, install this product in a well-ventilated area and replace the ozone and exhaust filters if instructed to do so in the product maintenance instructions. If there are no references to filters in the product maintenance instructions, then it is not required to replace the filter for this product.

Please keep these safety instructions.

Precautions

Precautions before Using the Printer:

1. Read and understand all instructions;
2. Familiarize yourself with the basic principles associated with operating electrical appliances;
3. Comply with all warnings and instructions marked on the equipment or specified in the manual supplied with the equipment;
4. If the operating instructions conflict with the safety information, please refer back to the safety information, as you may have misunderstood the operating instructions. If you cannot resolve the conflicts, please call the Customer Service Hotline or contact a service representative for help;
5. Before cleaning the equipment, remove the power cord from the AC power supply outlet. Do not use liquid or aerosol cleaners;
6. Please make sure that the equipment is put on a stable desktop surface to avoid serious damage caused by the falling of the equipment;
7. Do not put the equipment near a radiator, an air conditioner, or a ventilation pipe;
8. Do not put any articles on the power cord. Do not put the equipment at the place where its power cord could be stepped on by people;
9. Outlets and extension cords must not be overloaded. This may reduce performance and could result in fire or electric shock;
10. Do not allow pets to chew on the AC power cord or the computer interface cable;
11. Do not allow sharp objects piercing equipment slot, so as to avoid contact with the high-voltage device, which otherwise may result in fire or electric shock. Take care not to spill liquids onto the equipment;
12. Do not disassemble the equipment so as to avoid the risk of electric shock. Necessary repairs may only be carried out by professional maintenance personnel. Opening or removing the cover could result in an electric shock or other potential hazards. Incorrect disassembly and assembly could also result in an electric shock during future use;
13. If any one of the following occurs, disconnect the equipment from the computer and pull out the power cord from the AC wall socket and contact a qualified member of the service personnel for maintenance:
 - Liquid has been spilled into the equipment.
 - The equipment has been exposed to rain or water.
 - The equipment falls, or the cover is damaged.
 - Significant changes in the equipment's performance.
14. Only adjust the control mentioned in the instructions. Incorrect adjustment of other controls may result in damage and mean that professional maintenance personnel need to spend more time fixing it;
15. Do not use the equipment in a thunderstorm so as to avoid the risk of an electric shock. If possible, pull out the AC power cord during a thunderstorm;
16. If you continuously print multiple pages, the surface of the tray will become very hot. Take care not to touch this surface, and keep children away from this surface;
17. The signal wire of the device connected with the printer can not be connected to the outdoors;
18. Please ensure timely ventilation in case of a prolonged use or printing huge amounts of documents in a poorly ventilated room;

-
19. In standby status, the product will automatically enter into the power saving (sleep) mode if it does not receive any job order for a while (such as 1 minute); and it can realize zero power consumption only if it has not been connected with any external input power supply;
 20. As the Class 1 equipment, the product must be connected to the power supply outlet with protective grounding line when using;
 21. This product should be placed according to the shipping marks on the product package box during delivery;
 22. This product is a kind of low-voltage equipment. When using this product below the specified voltage range, please refer to the product precautions or call Pantum Aftersales Service Centre, if the toner comes off the printed contents, or the equipment starts slowly;
 23. This product is sold as a complete machine. The consumers can go to Pantum Aftersales Service Centre to purchase parts they need. If the product sold is inconsistent with the package list, please go to the specified Aftersales Service Centre to solve the problem;
 24. Install this product in a place with the temperature between 10°C and 35°C and the relative humidity between 20% and 80%;
 25. For security and other reasons the printer may switch to intermittent printing after a certain amount of continuous printing;
 26. Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 27. The power consumption of the product with wireless function is 1.733W / without wireless function is 1.4W in networked standby if all wired network ports are connected and all wireless network ports are activated.
 28. Please keep this User Guide properly.

Legal Information



This symbol indicates that, at the end of your product's life, it must not be discarded as domestic waste. Instead, you should dispose of your used equipment at a designated collection point for the recycling of waste electrical and electronic equipment. Ref: EU Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). Please contact your distributor / supplier for further information.



This product is suitable for indoor use only.



European Community (EC) directives conformity

This product complies with the protection requirements of EC directives 2014/30/EU and 2014/35/EU on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility and safety of electrical equipment designed for use within certain voltage limits.

Radio Equipment directive 2014/53/EU only for models ending with suffix "W".

The manufacturer of this product is: Zhuhai Pantum Electronics Co.,Ltd., No.3883, Zhuhai Avenue, Zhuhai, Guangdong, China 519060.

A declaration of conformity to the requirements of the Directives is available upon request from the Authorized Representative.

This product satisfies the Class B limits of EN 55032 / EN 55035 and safety requirements of EN 62368-1.



This printer is fully compliant with the RoHS Directive 2011/65/EU for managing toxic and hazardous substances.

Table of Content

1. Before Using the Printer	1
1.1. Product series introduction	1
1.2. Supplied Accessories	2
1.3. Product View	3
1.4. Control Panel	6
1.4.1. Overview of control panel	6
1.4.2. Home screen	7
1.4.3 Touch screen button	8
1.4.4. Function of power indicator	9
2. Paper and Print Media	10
2.1. Selecting paper	10
2.1.1. Paper guidelines	10
2.1.2. Paper characteristics	10
2.1.3. Unacceptable paper	11
2.1.4. Saving paper	11
2.2. Paper Specification	12
2.3. Special Paper	13
2.4. Einlegen von Papier	14
2.4.1. Loading into the Automatic Feeder Tray	14
2.4.2. In manuellen Karton legen	17
2.5. Paper and Manuscript Use Process	18
2.5.1. Scanning With Tablet	18
2.5.2. Scan with the automatic document feeder (ADF)	21
2.6. Non-printing Area and Non-scanning Area	22
3. Driver installation and uninstallation	23
3.1. How to install Windows printer driver	23
3.1.1. One-click Installation	23
3.1.2. Manual installation	39
3.1.3. Method of driver unistallation	47
3.2. macOS system driver installation	48
3.2.1.Driver installation	48
3.3. Add printer to macOS system	51
3.3.1. Add up the printer via USB	51
3.3.2. Add up the printer via wireline connection	51
3.3.3. Add up the printer via wireless connection	51
3.3.4. Add AirPrint printer	52
4. Wired network setup (applicable to wired network models)	53
4.1. Set IP Address	53
4.1.1. Automatic Setting	53
4.1.2. Manual Setting	53
5. Wireless network setup (applicable to Wi-Fi models)	54
5.1. Basic structure mode	54
5.1.1. Wireless network setup tools	54

5.1.2. Wi-Fi Protected Setup (WPS) setup	59
5.1.3. How to disable the Wi-Fi network connected.....	60
5.2. Wi-Fi Direct mode	60
5.2.1. Preliminary preparations	60
5.2.2. Wi-Fi Direct connection	60
5.2.3. How to disable the Wi-Fi Direct	62
5.3. Wireless network setup FAQs	62
6. Web server	64
6.1. Visit the embedded Web server	64
6.2. Use Web server to manage printer.....	64
6.2.1. IP address setup	65
6.2.2. Wireless setup	66
6.2.3. Machine setup.....	67
6.2.4. Recover factory settings via Web server	70
7. Print	71
7.1. Print Function.....	71
7.2. Print Settings	72
7.2.1. Setting the printing parameters	72
7.2.2. Print quality settings.....	73
7.2.3. Duplex	76
7.2.4. Booklet printing	79
7.2.5. Set transfer print parameters.....	80
7.2.6. Open Help Document.....	82
7.3. Printing Mode.....	83
7.3.1. Printing with the Automatic Feeder Tray.....	83
7.3.2. Printing with manual feed tray	84
7.4. Cancel printing	84
8. Copying.....	85
8.1. Copying function	85
8.2. Copying method.....	85
8.3. Common copying setting.....	85
8.3.1. Image quality	86
8.3.2. Intensity	86
8.3.3. Resizing	86
8.3.4. Multipage	87
8.3.5. Clone	88
8.3.6. Poster	89
8.3.7. Collated copy	89
8.3.8. Duplex copying	90
8.4. ID copy settings	92
8.4.1. Arrangement mode	92
8.4.2. Intensity	93
8.4.3. Paper Size	93
8.5. Receipt setting	93
8.5.1. Intensity	94
8.5.2. Paper dimension	94

8.6. Copying cancel	94
9. Scan	95
9.1. Scanning mode	95
9.1.1. Windows system scan.....	95
9.1.2. macOS System Scan	103
9.1.3. Push Scan	107
9.2. Scan	109
9.2.1. Manual duplex scan	109
9.3. Cancel scanning	112
10. Mobile Print/Scan (for models with WiFi function only)	113
10.1. "Pantum" APP	113
10.1.1. Operating systems supported	113
10.1.2. How to download Pantum App	113
10.1.3. How to use this "Pantum" APP	113
10.2. Mopria mobile print.....	114
10.2.1. The operating systems and applications which support Mopria mobile printing .	114
10.2.2. How to download Mopria Print Service.....	115
10.2.3. Preliminary preparations	115
10.2.4. How to use Mopria mobile printing	115
10.3. AirPrint mobile print.....	116
10.3.1. Operating systems supported by AirPrint mobile print	116
10.3.2. Preliminary preparations	116
10.3.3. How to use AirPrint mobile printing	116
11. General Settings	117
11.1. System Setting.....	117
11.1.1. Language Setting	117
11.1.2. Sleep Time Setting.....	118
11.1.3. Ink saving setting	119
11.1.4. Restore Factory Settings.....	119
11.1.5. Mute printing	120
11.1.6. Screen brightness	120
11.1.7. Auto shut-off setting	121
11.1.8. Panel energy saving settings	122
11.2. Print Settings.....	123
11.2.1. Print Density.....	123
11.2.2. Color Calibration	124
11.2.3. Transfer Print Settings	125
11.3. Network Settings	126
11.4. Network Information	126
11.5. Online upgrade	127
11.6. Information report.....	128
11.7. Consumable information	129
11.8. Configure the e-mail address book.....	130
11.9. Configure the FTP address book.....	132
12. Routine Maintenance	134
12.1. Cleaning the Printer	134

12.1.1. Please use mild detergents	134
12.1.2. ADF cleaning	136
12.2. Replacing parts and consumables	138
12.2.1. Replacing the toner cartridge	139
12.2.2. Replacing the waste toner bottle	143
12.2.3 Replace the tray	144
12.3. Move the printer	145
12.3.1. Move the printer to another location	145
12.3.2. Transporting the printer	145
13. Troubleshooting	146
13.1. Avoiding jams.....	146
13.1.1. Correct loading of paper.....	146
13.1.2. Use recommended paper.....	147
13.2. Locate jammed paper	148
13.3. Cleaning Jammed Paper.....	149
13.3.1. Paper jam in the automatic tray.....	149
13.3.2. Paper jam in the manual tray	151
13.3.3. Paper jam in the rear cover	153
13.3.4. Paper jam in the automatic document feeder (ADF)	156
13.4. Software Failure.....	159
13.5. Error Message	159
13.6. Common Troubleshooting	161
13.6.1. Common Problems	161
13.6.2. Image Defects.....	163
14. Product Specifications.....	169
14.1. Overview of the Specifications	169
14.2. Print Specifications.....	170
14.3. Copy Specifications.....	170
14.4. Scan Specifications.....	170

1. Before Using the Printer

1.1. Product series introduction

Product series parameters		CM1100ADN Series	CM1100ADW Series
Interface type	USB	●	●
	NET	●	●
	Wi-Fi		●
Print Language	PDL	●	●
Control Panel	Touch screen	●	●
Print Speed	A4 18ppm	●	●
	Letter 19ppm	●	●
Printing function	Automatic Two-Sided Printing	●	●
	Color Printing	●	●
Copy	Manual duplex copy	●	●
	Color Copy	●	●
Scan	Manual duplex scan	●	●
	Chromoscan	●	●
Tablet (FB)		●	●
Automatic document feeder (ADF)		●	●

(●: Support; Blank: Unsupport)



Note: • This product series is subject to additions or changes without prior notice.
• For this user manual, the "ADF" is short for automatic document feeder.

1.2. Supplied Accessories


Name	Parts
Laser Toner Cartridge	
Waste toner bottle	
USB Interface Cable	
Power Cord	
CD	
Quick Setup Guide	
Pantum Warranty	



Note: • The Pantum Warranty may not be attached in some regions.

1.3. Product View

Side view

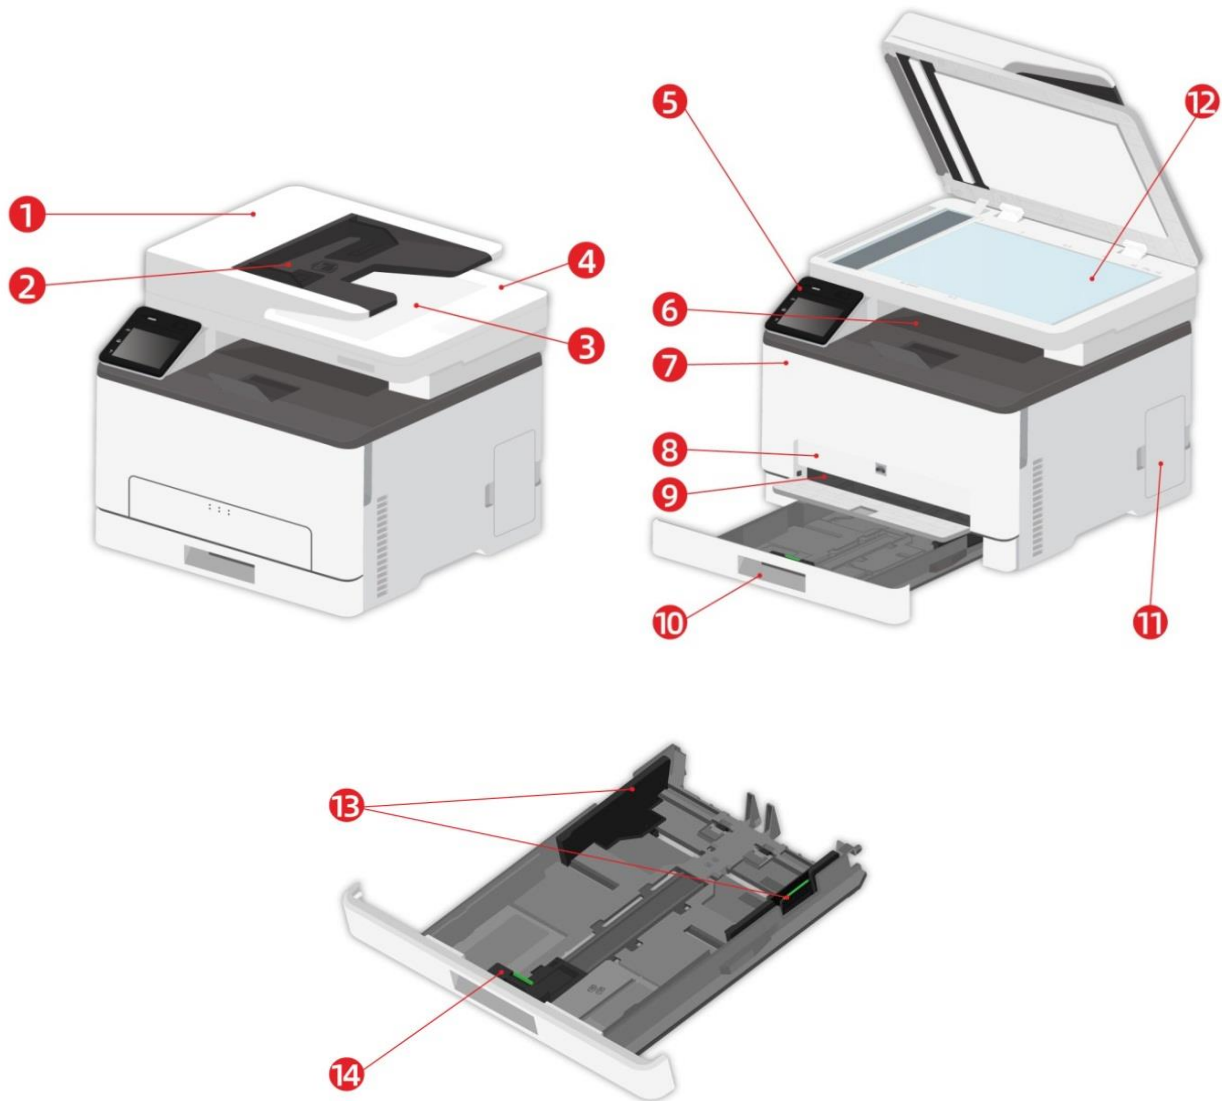

1	Cover of automatic document feeder	This is used to remove the paper jammed in scanning for the ADF.
2	Feed tray of automatic document feeder	This is used to place originals scanned from the ADF.
3	Exit tray of automatic document feeder	Prevent originals scanned from falling off.
4	Cover of scanner	Open the cover of scanner to place the scanned originals on its glass plate.

5	Control Panel	Indicate printer status to conduct set operation.
6	Standard exit	For storing the printed paper.
7	Front Cover	To open the front cover to take out the laser toner cartridge.
8	Manual feed tray	For placing mediums that are printed in manual feed tray.
9	Manual tray width guide	Slide paper deflector to adapt to paper width.
10	Automatic Feeder Tray	For placing mediums that are printed in auto feed tray.
11	Waste toner bottle	Store the waste toner produced in printing.
12	Glass Platen	To put the original of tablet PC for scan.
13	Paper width deflector of auto feed tray	Slide paper deflector to adapt to paper width.
14	Paper length deflector of auto feed tray	Slide paper length deflector to adapt to paper length.



Note: • Printer appearance may vary depending on the printer model and configuration; the schematic diagram is for reference only.

Rear View



: To avoid the risk of electrical shock, do not set up this product or make any electrical or cabling connections during a lightning storm.



: To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.



: Do not cut, twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If any of these things happen, it could result in a risk of fire or electrical shock. Inspect the power cord regularly for signs of such problems. Remove the power cord from the electrical outlet before inspecting it.



: To avoid the risk of electrical shock, make sure that all external connections (such as Ethernet) are properly installed in their marked plug-in ports.



: To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



Note: • To avoid loss of data or printer malfunction, do not touch the USB cable, any wireless network adapter, or the printer in the areas shown in the printing process.



1	Network Interface(applicable to models supporting network function)	For connecting product to network with network cable.
2	USB Interface	For connecting product to computer with USB cable.
3	Power Interface	For connecting product to power with power cord.




Note: • Printer appearance may differ because of various models and functions, so the schematic diagram is only for your reference.

1.4. Control Panel

1.4.1. Overview of control panel


Layout of touch screen buttons of printer control panel is shown as below:

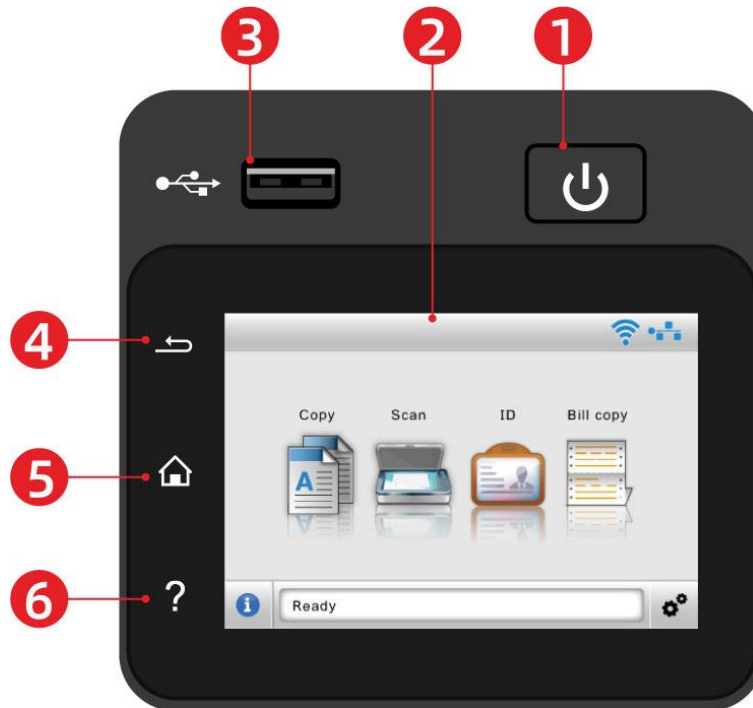

No.	Name	Functions
1	Power switch	Turn the power on or off and press this button under Ready state to enter energy-saving mode. Press and hold this button for more than 2s to turn the printer power off.
2	Color touch screen	• Check printer status and message. • Set and operate printer.
3	Front USB interface	Scan into the USB flash disk.
4	Return button	Return to the previous menu.
5	Home button	Go to the home screen.
6	Help button	• Access to Help system of control panel. • It describes how to use each screen and eliminate faults.

1.4.2. Home screen


The layout of the main screen is shown below:

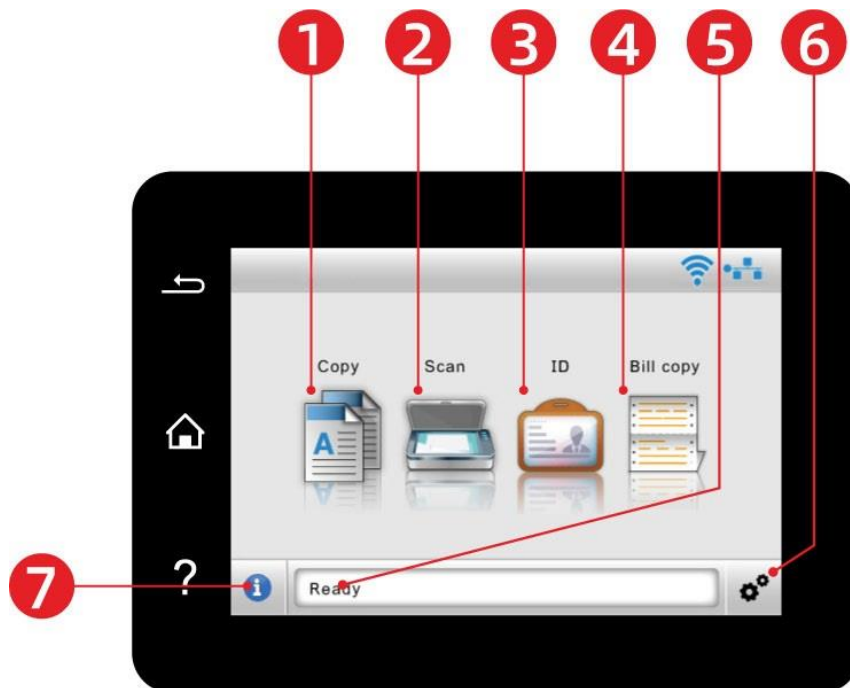

No.	Name	Functions
1	Copy	Access to “Copy” menu and make a copy.
2	Scan	Access to “Scan” menu and scan document.
3	ID copy	Access to “ID copy” menu and make an ID card copy.
4	Bill copy	Access to “Bill copy” menu and make a bill copy.
5	Status message bar	Display the current printer status.
6	“Setting” button	Open menu setting interface.
7	Status icon	• View supplies information in ready state. • View printer error status information in error status.


1.4.3 Touch screen button

Layout of touch screen buttons of printer control panel is shown as below:

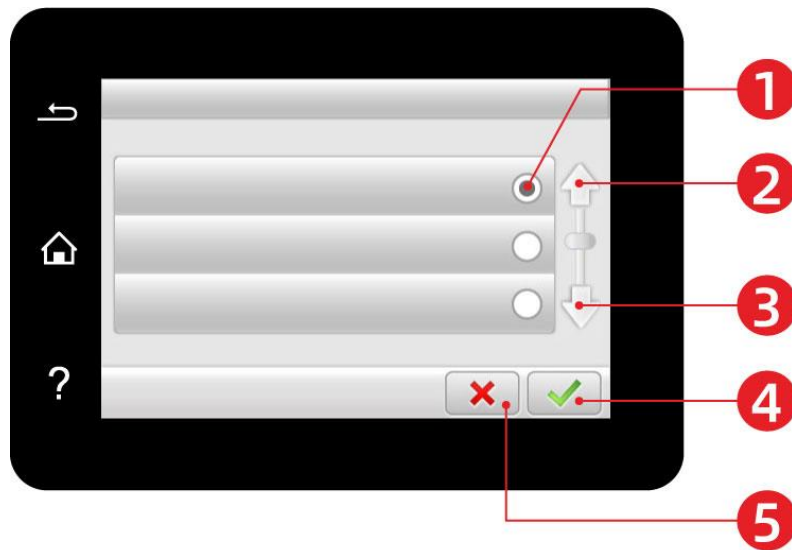

No.	Name	Functions
1	Radio button	Select or delete an item.
2	Up arrow	Scroll up.
3	Down arrow	Scroll down.
4	Acceptance button	Save setting.
5	Cancel button	Cancel selection.

1.4.4. Function of power indicator

No.	Status displayed by power indicator	Status	Status Description
1		Die out	The printer is powered off.
2		Always on	Printer is not in sleep state (printer ready, printing, processing, etc).
3		Blink	The printer is in sleep state.

2. Paper and Print Media

2.1. Selecting paper

2.1.1. Paper guidelines

Use appropriate paper to prevent paper jam and ensure trouble-free printing.

- It is recommended to use new, undamaged paper.
- Before loading paper, know the recommended printable side of the paper. This information is usually indicated on the paper package.
- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, types, or weights in the same tray; mixed use can cause paper jams.
- Do not use coated paper unless they are specifically designed for electrophotographic printing.

2.1.2. Paper characteristics

The following paper characteristics affect print quality and reliability. Consider these factors before printing.

Weight

The tray can feed grain long paper with a weight of 60-200 g/m². Paper lighter than 60 g/m² may not be stiff enough to feed properly, and may cause paper jams.

Curl

Curl is the tendency of paper to curl at its edges. Excessive curl can cause paper feeding problems. Curl can occur after the paper passes through the printer, where it is exposed to high temperatures. Storing paper unpacked in hot, humid, cold, or dry conditions can contribute to paper curling before printing and can cause feeding problems.

Smoothness

Paper smoothness directly affects print quality. If paper is too rough, toner cannot fuse to it properly. If paper is too smooth, it can cause paper feeding or print quality problems.

Moisture content

The amount of moisture in paper affects both print quality and the printer ability to feed the paper correctly. Leave paper in its original wrapper until you use it. Change in the moisture content caused by paper exposure can degrade its performance.

Store paper in its original wrapper in the same environment as the printer for 24 to 48 hours before printing. Extend the time several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.

Grain direction

Grain refers to the alignment of the paper fibers in a sheet of paper. Grain is either grain long, running the length of the paper, or grain short, running the width of the paper. For 60-200 g/m² paper, grain long paper is recommended.

Fiber content

Most high-quality xerographic paper is made from 100% chemically treated pulped wood. This content provides the paper with a high degree of stability, leading to fewer paper feeding problems and better print quality. Paper containing fibers such as cotton can negatively affect paper handling.

2.1.3. Unacceptable paper

The following paper types are not recommended for use with the printer:

- Chemically treated paper used to make copies without carbon paper, also known as carbonless papers, carbonless copy paper (CCP), or no carbon required (NCR) paper.
- Preprinted paper with chemicals that may contaminate the printer.
- Preprinted paper that can be affected by the temperature in the printer fuser.
- Preprinted paper that require a positioning accuracy (the precise print location on the page) greater than ± 2.3 mm, such as optical character recognition (OCR) forms. In some cases, you can use software applications to adjust the positioning to successfully print on these forms.
- Coated paper (erasable bond paper), synthetic paper, thermal paper.
- Rough-edged, rough or heavily textured surface paper, or curled paper.
- Paper weighing less than 60 g/m².
- Multiple-part forms or documents.

2.1.4. Saving paper

Use these paper storage guidelines to help avoid jams and uneven print quality:

- Store paper in its original wrapper in the same environment as the printer for 24 to 48 hours before printing.
- Extend the time several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.
- For best results, store paper where the temperature is 21°C and the relative humidity is 40%.
- Most label manufacturers recommend printing in an environment with a temperature of 18-24 °C and a relative humidity of 40~60%.
- Store paper in cartons, on a pallet or shelf, rather than on the floor.
- Store individual packages on a flat surface.
- Do not store anything on top of individual paper packages.

- Take paper out of the carton or wrapper only when you are ready to load it in the printer. The carton and wrapper help keep the paper clean, dry, and flat.

2.2. Paper Specification

Automatic Feeder Tray	Media Type	Plain paper(70~105g/m ²),thin paper(60~70g/m ²)
	Media size	A4,A5, A6,Legal,Letter,JIS-B5, ISO B5, Executive , Folio , Oficio , Statement ,16K,32K, Big 16K, Big 32K, B6,Customize paper
	Media weight	60~105 g/m ²
	Maximum capacity of the tray	250 pages(80 g/m ²)
Manual feed tray	Media Type	Plain paper(70~105g/m ²),thin paper(60~70g/m ²),thick paper(105~200g/m ²),transparent film,carton paper,label paper, envelope
	Media size	A4, A5, A6, Legal, Letter, JIS-B5, ISO B5, Executive , Folio , Oficio , Statement ,16K,32K, Big 16K, Big 32K, No.10 Env., Monarch Env, DL Env, C5 Env, C6 Env, ZL, Janpanese Postcard, Yougata4, Younaga3, Nagagata3, Yougata2, Postcard, B6, Customize paper
	Media weight	60~200 g/m ²
	Maximum capacity of the tray	1 pages



- Note:**
- 80 g/m² standard paper is recommended for this printer.
 - It is not recommended to use special paper extensively, which may affect the service life of the printer.
 - The print media that does not meet the guidelines listed in this User Guide may result in poor print quality, increased paper jam and excessive wear of the printer.
 - Properties such as weight, composition, texture and humidity are important factors affecting the printer performance and output quality.

Please note the following matters when selecting the print media:

1. Desired print effect: The print media selected should meet the requirement of the print tasks.
2. Surface smoothness: The smoothness of the print media may affect the sharpness of the print outcome.
3. Some print media may meet all the use guidelines contained herein, but they still can not bring satisfactory effect. This may be due to incorrect operation, inappropriate temperature and humidity, or other factors beyond the control of Pantum. Before purchasing large quantities of print media, make sure that the print media meets the specifications specified in this User Guide.

2.3. Special Paper

This printer supports using the special paper for printing. Special paper includes: label paper, envelope, transparent film, thick paper, carton paper, thin paper.



Note: • When using special paper or print media, be sure to select matched print type and size in the print settings so as to get the best print effect.

Please observe the following standards:

Types of Print Media	Correct Practices	Incorrect Practices
Label Paper	Use labels with no exposed lining paper only. Labels shall be put flat when using. Use labels of full sheet only. There is no guarantee that all the labels in the market can meet corresponding requirements.	Use wrinkled, blistered or damaged label papers.
Envelope	Envelopes should be loaded evenly.	Use wrinkled, nicked, stuck or damaged envelopes. Use envelopes with clips, snaps, windows, or coated linings. Use envelopes with self-adhesive stickers or other synthetic materials.
Transparent Film	Only use transparent films approved for use in laser printers.	Use transparent print media that is not suitable for laser printers.

Thick Paper, carton
paper

Only use heavy paper that is
approved for use in laser printers
and meets the weight specifications
of this printer.

Use the paper whose weight is more
than the specification of the media
recommended for this printer, unless
the paper is approved for use in this
printer.

2.4. Einlegen von Papier



Note: • Druckeraussehen konnte unterschiedlich wegen seine Modelle sein. Die schematische Darstellung ist nur zum Informationszwecken.

2.4.1. Loading into the Automatic Feeder Tray



:To avoid the risk of electrical shock, if you are accessing the controller board or installing optional hardware or memory devices after setting up the printer, turn the printer off, and unplug the power cord from the electrical outlet before continuing. If you have any other devices attached to the printer, turn them off as well, and unplug any cables going into the printer.




:To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1. Slide out the automatic feeder tray from the printer.




Note: • To avoid paper jams, do not remove the tray while the printer is busy.

2. Flex, fan out and align the paper edges before loading.

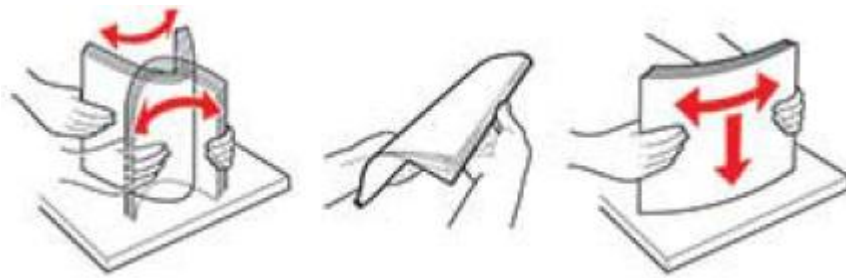


3. Load the paper with the printable side facing up.

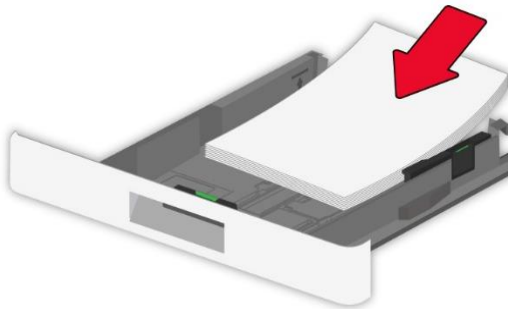


Note:

- For single-sided printing, load the paper with the printing side facing up and the header facing the inside of the tray.
- Do not slide paper into the tray.
- To avoid paper jams, make sure that the stack height is below the maximum paper fill indicator.

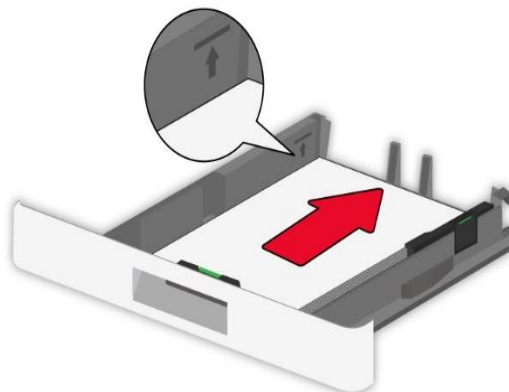

4. Adjust the guide to match the size of the loaded paper.

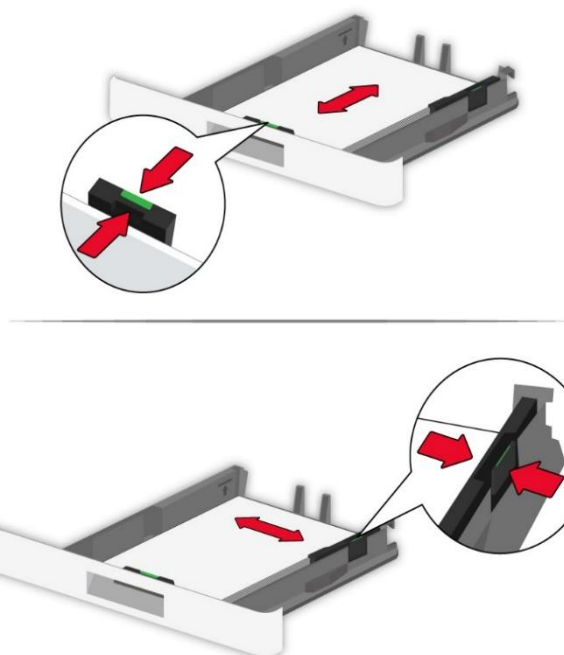

5. Insert the tray.

2.4.2. In manuellen Karton legen

1. Adjust the guide to match the size of the loaded paper.



2. Load a sheet of paper with the printable side facing up.



Note: • For single-sided printing, load the paper with the printable side facing up and the top edge going into the printer first.
• For better printing effect, it is recommended to use new, undamaged paper.



3. Feed the paper until its front edge is pulled in.



Note: • To avoid paper jams, do not force paper into the manual tray.

2.5. Paper and Manuscript Use Process

Manuscript requirements:

Source	Type	Size
Automatic document feeder (ADF)	Plain paper	A4, A5, B5, A6, Letter, Folio, Executive, Legal
Platen	—	A4, A5, A5L, A6, Executive, JIS B5, Letter, Full Platen, Custom

2.5.1. Scanning With Tablet




Note: • Druckeraussehen konnte unterschiedlich wegen seine Modelle sein. Die schematische Darstellung ist nur zum Informationszwecken.

Steps of Use:


1. Lift up the scanner cover.



2. Load the manuscript face down.

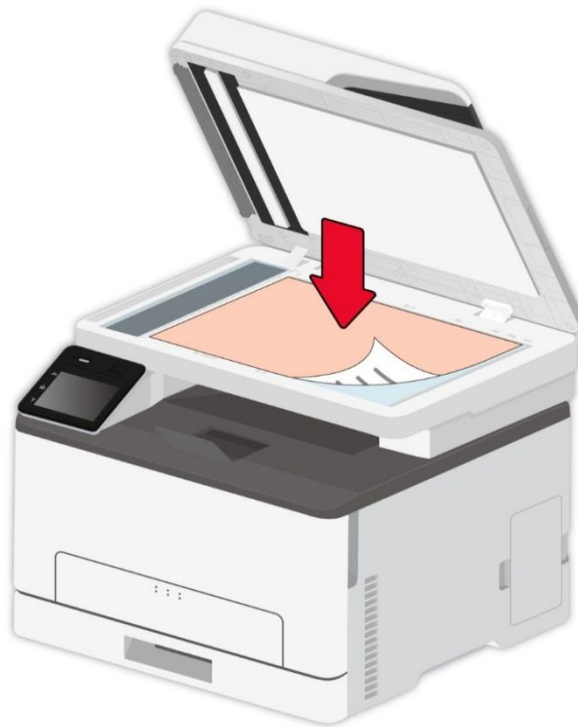

3. Align the manuscript to match the appropriate paper size.

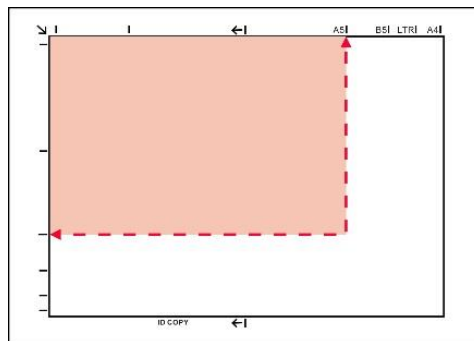

Note:• If the manuscript does not match with any size marker, please align the upper-left corner of the manuscript with the arrow.

- Make sure there is no document in the ADF. If a document is detected in the ADF, it will be more preferential than that on glass platen.

4. Close the scanner cover gently.



Note: • Please put the paper or document on the scanner glass after the glue, ink or correction fluid are completely dried.

- Rough textured, uneven, oil stained and extremely smooth paper will make printing effect poor.
 - Please make sure that there is no dust, fluff, etc. on the paper.
 - Paper shall be put on a flat surface and stored under a cool and dry environment.
 - To avoid influencing the definition, please don't open the scanner cover during scanning with the platen.
-

2.5.2. Scan with the automatic document feeder (ADF)

The document feeder supports single-sided and manual double-sided scanning. See ([Section 9](#)) for details.

1. Put the original into the ADF with its front upward and top fed first.




2. Adjust the document guide till it gets close to the paper stack.



 **Note:** • The ADF supports feeding 50 pieces of paper at most that should be fed one by one.

2.6. Non-printing Area and Non-scanning Area

The shaded part indicates the non-printing area and non-scanning area.

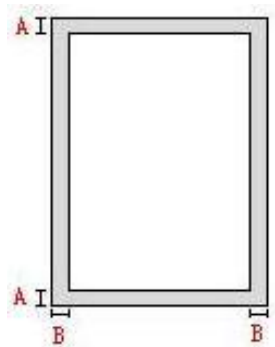

Usage	Paper Size	Top and bottom margins (A)	Left and right margins (B)
Printing	A4	5mm(0.197inch)	5mm(0.197inch)
	Letter	5mm(0.197inch)	5mm(0.197inch)
Scan	A4	5mm(0.197inch)	5mm(0.197inch)
	Letter	5mm(0.197inch)	5mm(0.197inch)

3. Driver installation and uninstallation

3.1. How to install Windows printer driver

Windows driver installation software provides two installing methods: one-click installation and manual installation. We recommend one-click installation, which can help to install driver automatically in a faster and more convenient way. If you have any difficulty in using one-click installation, please try manual installation.



Note: • Driver installation interface may differ because of different models and functions, so the schematic diagram is only for your reference.

3.1.1. One-click Installation

One-click installation provides three methods of installation: connect the printer via USB cable, connect the printer via wired network, and connect the printer via wireless network. You can choose one of them according to your habit.

3.1.1.1. Method I: Connect the printer via USB cable


1. Connect the printer to computer via USB cable, power the printer and computer on.
2. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
 - Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
 - Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

3. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.

4. Click on the "One-click installation" button in Method I and enter into the installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

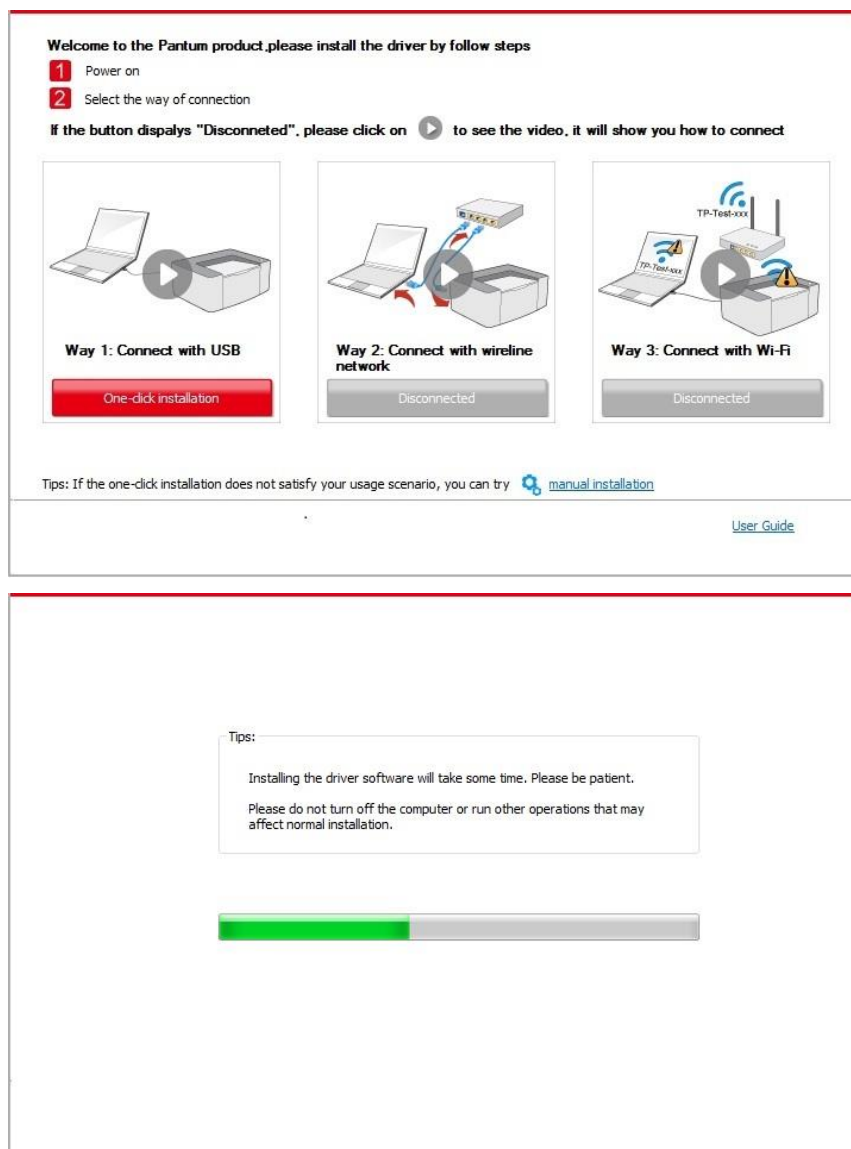

5. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.2. Method II: Connect the printer via wired network

1. Turn the power of printer and computer on.
2. Connect the computer to wired network.
3. Connect network cable to the network interface of printer, to make sure the printer is connected to computer network (please refer to [Chapter 4](#) for network setup).
4. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.

- Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
- Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
- Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.


5. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
6. Please click on the "One-click installation" button in Method II and install driver software.



Note: • You can put your mouse cursor in the "One-click installation" button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.

- You can check the printer IP address through "Network configuration page" (Please see [Chapter 11.6](#) for how to print)

- Click on the "One-click installation" button to enter installation process if your software has searched only one printer. The process may need some time, and the duration is related to your computer configuration. Please wait patiently.

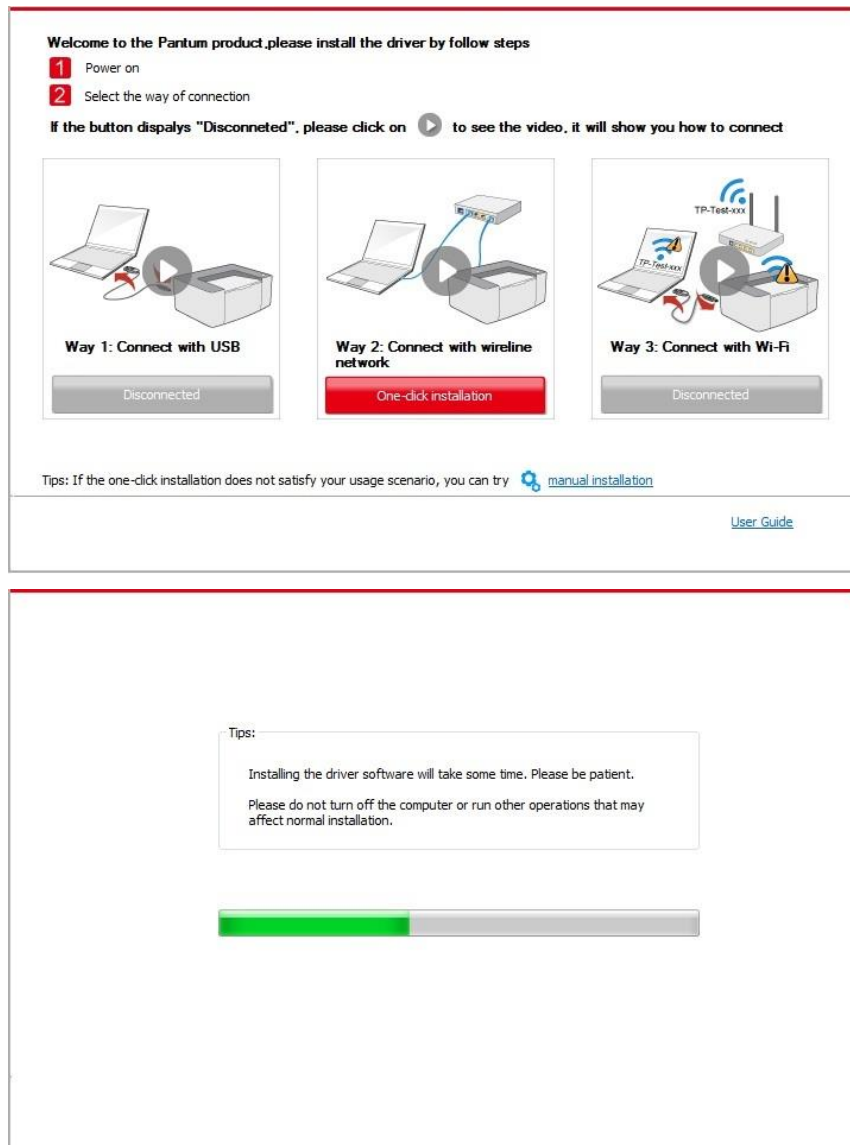

- If your software has searched several printers, click on the "One-click installation" button, and the printer list interface will pop up. Please select the printer that you need according to your printer wired network IP address or host ID.

Welcome to the Pantum product, please install the driver by follow steps

- 1 Power on
- 2 Select the way of connection

If the button displays "Disconnected", please click on to see the video, it will show you how to connect

Way 1: Connect with USB

Disconnected

Way 2: Connect with wireline network

One-click installation

Way 3: Connect with Wi-Fi

Disconnected

Tips: If the one-click installation does not satisfy your usage scenario, you can try [manual installation](#)

[User Guide](#)

Please select the printer you would like to install

☐ Configure and install Wi-Fi via USB

Printer Name	Port

☒ Wireline network printer

Printer Name	IP Address	Host name
☒ X X X Series PCL6 0001	10.10.148.119	X X X -04B2E7
☐ X X X Series PCL6 0002	10.10.148.155	X X X -04B304

☒ Install the printer from the list with a hostname

Tips: If your printer is not in the list, please check the printer network status and see if it is in the same network as the current PC

- Note:** • If the printer you need is not shown in the list, please click "Refresh" button to search again. If it is not found, please check if the printer and computer are in the same network. (Please see [Chapter 5.3](#) for how to check).
- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

7. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.3. Method III: Connect the printer via wireless network

Please check if the printer is connected with wireless network when installing the printer driver software. If disconnected, please install it with reference to [Chapter 3.1.1.3.1](#). If connected, please install it with reference to [Chapter 3.1.1.3.2](#).



Note: • You can print "Network configuration page" to confirm printer network connection status to see if printer is connected with network (Please see [Chapter 11.6](#) for how to print).

3.1.1.3.1. The printer is not connected with wireless network

3.1.1.3.1.1. Configure wireless network via USB cable and install driver

Since some computers are not provided with wireless network function, this section is divided into "Connect computer to router via Wi-Fi" and "Connect computer to router via wired connection" to introduce installation process.

I. Connect computer to router via Wi-Fi

1. Computer is already connected to router via Wi-Fi.
2. Connect the printer to computer via USB cable, then power the printer on.
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
 - Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
 - Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.



4. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
5. Click the "One-click installation" button in Method III to install driver software.





Note:• You can put your mouse cursor in the "One-click installation" button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.

- You can check the printer IP address through "Network configuration page" (Please see [Chapter 11.6](#) for how to print)

- Click "One-click installation" button if your software has searched only one printer, and enter into installation process to complete automatic network configuration and driver installation.

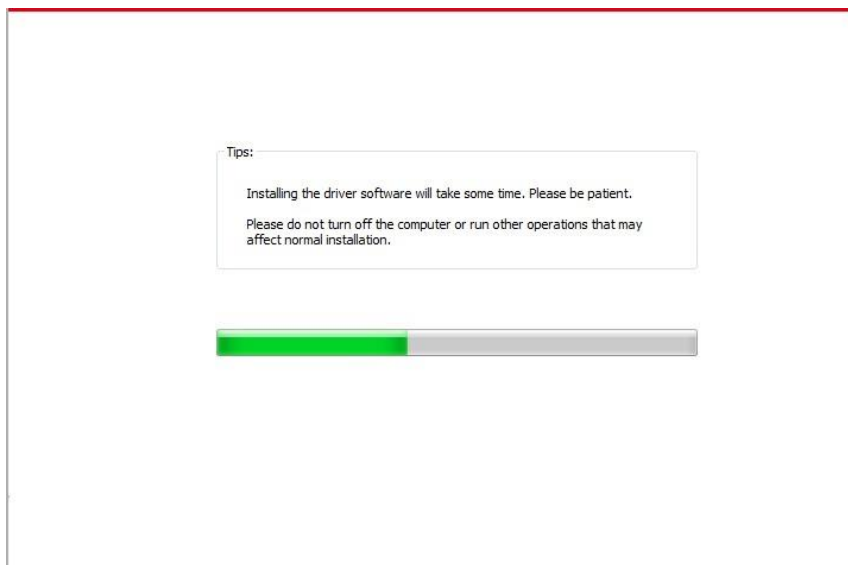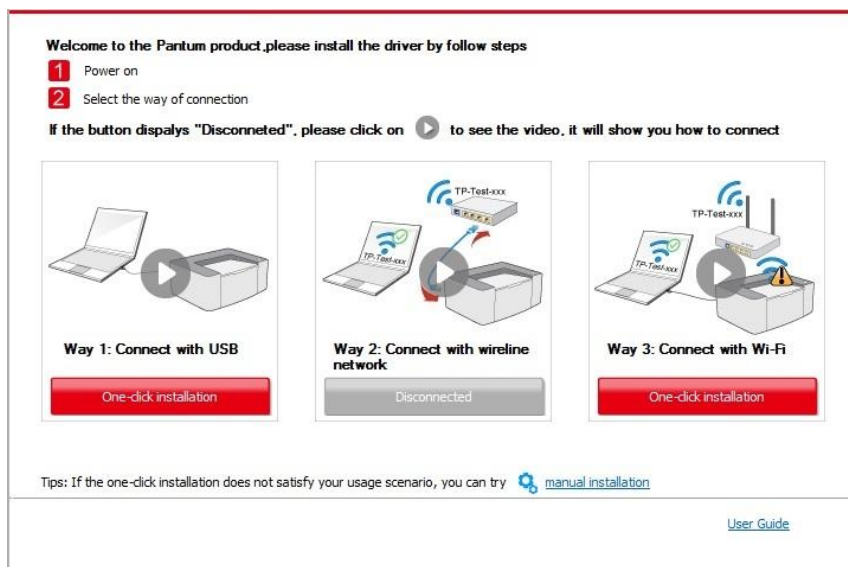

- If your software has searched several printers, click "One-click installation" button, and the printer list interface will pop up. Please select "Configure printer with Wi-Fi via USB and install" and select USB printer, click "Confirm" button and enter into installation process to complete automatic network configuration and driver installation.

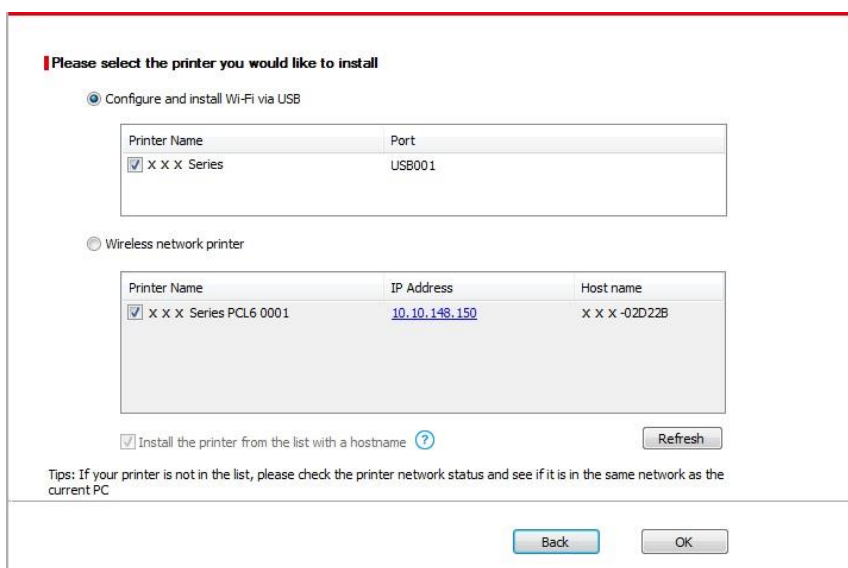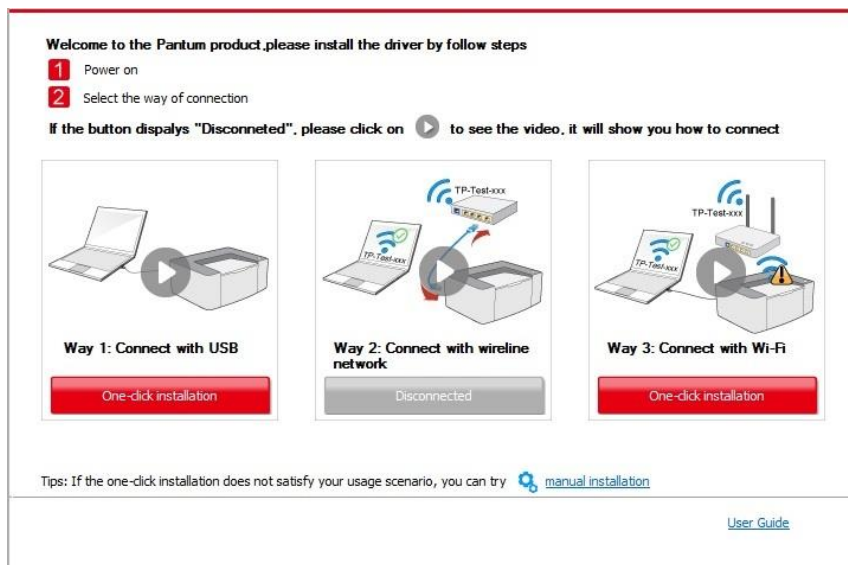

Note:• When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

6. After the installation, click "Print &Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

II. Connect computer to router via network cable

1. Connect computer to router via network cable.
2. Connect the printer to computer via USB cable, then power the printer on.
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
 - Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
 - Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.

 **Note:** • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

4. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
5. Please click on the "One-click installation" button in Method III and install driver software.

 **Note:** • You can put your mouse cursor in the "One-click installation" button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.

- You can check the printer IP address through "Network configuration page" (Please see [Chapter 11.6](#) for how to print).

- Click on the "One-click installation" button if your software has only searched only one printer, and the wireless network configuration interface will pop up, input the SSID and password that you need, then click "Confirm" button, and enter into installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

Welcome to the Pantum product, please install the driver by follow steps

- 1 Power on
- 2 Select the way of connection

If the button displays "Disconnected", please click on  to see the video, it will show you how to connect



Way 1: Connect with USB

One-click installation



Way 2: Connect with wireless network

Disconnected



Way 3: Connect with Wi-Fi

One-click installation

Tips: If the one-click installation does not satisfy your usage scenario, you can try [manual installation](#)

[User Guide](#)

1. Please click on "Printing wireless network information page" to get the network name and encryption method. Please skip this step if you already know the network name and encryption method.

[Printing wireless network information page](#)

2. Please enter wireless network user name and password.

Network Name(SSID):

Test-AP2

Encryption method:

WPA/WPA2

Password:

••••••••

☐ Show password:

[Back](#) [OK](#)

- If your software has searched more than one printers, the printer list interface will pop up. You need to configure the current printer which is connected via USB cable to wireless network and install driver. Please select "Configure the print via USB and install" on the printer list interface and check the USB printer option. Click the "Confirm" button, and the wireless network configuration interface will pop up. Input the wireless SSID and password that you need, then click "Confirm" button, and enter into installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

Welcome to the Pantum product, please install the driver by follow steps

- 1 Power on
- 2 Select the way of connection

If the button displays "Disconnected", please click on  to see the video, it will show you how to connect



Way 1: Connect with USB

One-click installation



Way 2: Connect with wireline network

Disconnected



Way 3: Connect with Wi-Fi

One-click installation

Tips: If the one-click installation does not satisfy your usage scenario, you can try [manual installation](#)

[User Guide](#)

Please select the printer you would like to install

☒ Configure and install Wi-Fi via USB

Printer Name	Port
☒ X X X Series	USB001

☐ Wireless network printer

Printer Name	IP Address	Host name
☒ X X X Series PCL6 0001	10.10.148.150	X X X -02D22B

☒ Install the printer from the list with a hostname  Refresh

Tips: If your printer is not in the list, please check the printer network status and see if it is in the same network as the current PC

Back OK

1. Please click on "Printing wireless network information page" to get the network name and encryption method. Please skip this step if you already know the network name and encryption method.

[Printing wireless network information page](#)

2. Please enter wireless network user name and password.

Network Name(SSID):

Encryption method:

Password:

☐ Show password:

[Back](#) [OK](#)

 **Note:**• When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

6. After the installation, click "Print &Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.3.1.2. Connect computer to printer via Wi-Fi direct and install the driver


Connect the computer to printer via a direct Wi-Fi connection. It is applicable to wireless network without infrastructure mode, but it still needs scenario of temporary use of printer via wireless network. You can directly connect the computer that has wireless function to the printer to realize printing function.

1. Turn the power of printer and computer on.
2. Connect computer to the Wi-Fi Direct network of the printer (please refer to [Chapter 5.2.2](#) for setup method).
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
 - Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
 - Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note:• Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

4. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
5. Click on the "One-click installation" button in Method III, and enter into installation process. The process may need some time, and the duration is related to your computer configuration, please wait patiently.

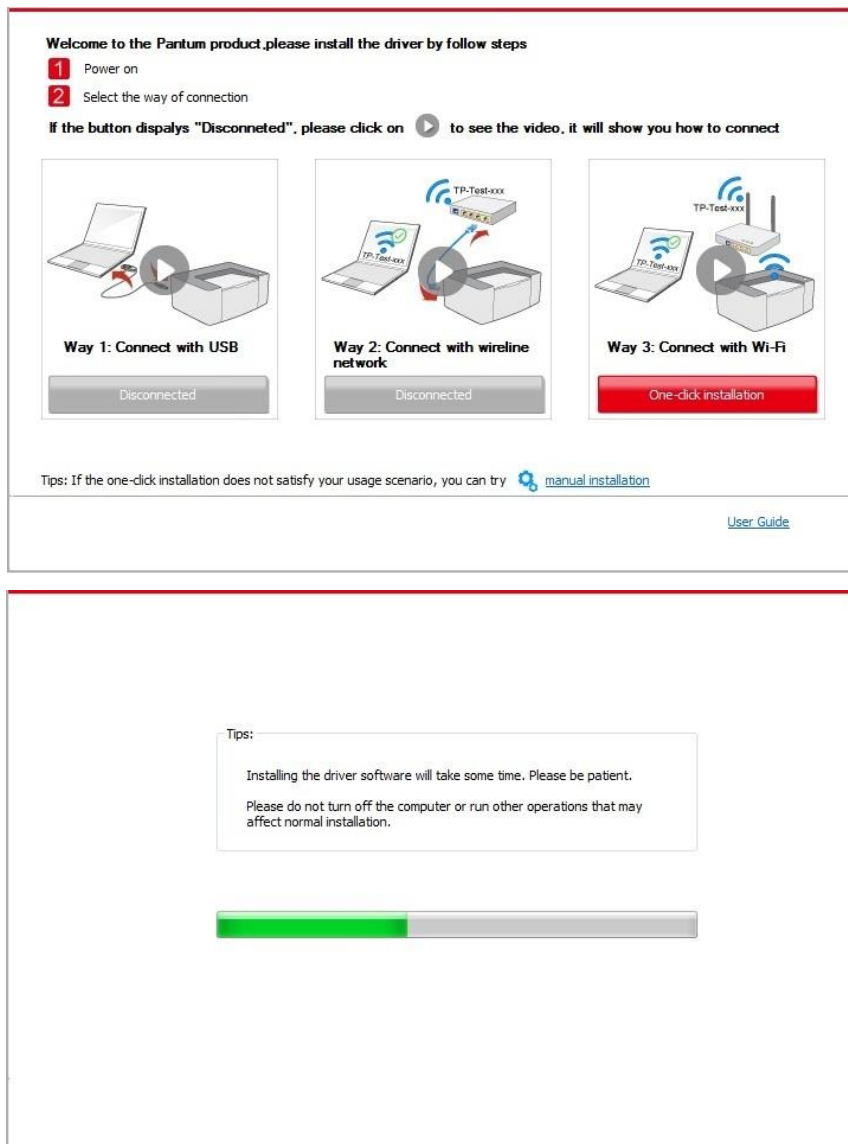

6. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.1.3.2. The printer is already connected to wireless network

1. The printer is already connected to wireless network, you can print the "Network configuration page" to check. (See [Chapter 11.6](#) to for how to print).
2. Connect the computer to printer network.
3. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
 - Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
 - Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

4. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
5. Click the "One-click installation" button in Method III to install driver software.



Note: • You can put your mouse cursor in the "One-click installation" button to check the popup information in order to confirm if the current printer is the one you need to install through IP address before you click the button.

- You can check the printer IP address through "Network configuration page" (Please see [Chapter 11.6](#) for how to print)

- Click on the "One-click installation" button to enter installation process if your software has searched only one printer. The process may need some time, and the duration is related to your computer configuration. Please wait patiently.

Welcome to the Pantum product, please install the driver by follow steps

- 1 Power on
- 2 Select the way of connection

If the button displays "Disconnected", please click on  to see the video, it will show you how to connect



Way 1: Connect with USB

Disconnected



Way 2: Connect with wireline network

Disconnected



Way 3: Connect with Wi-Fi

One-click installation

Tips: If the one-click installation does not satisfy your usage scenario, you can try [manual installation](#)

[User Guide](#)

Tips:

Installing the driver software will take some time. Please be patient.

Please do not turn off the computer or run other operations that may affect normal installation.

- If the software has searched several printers, the printer list interface will pop up. Please select the printer you need according to your printer wired network IP address or host ID .

Welcome to the Pantum product, please install the driver by follow steps

- 1 Power on
- 2 Select the way of connection

If the button displays "Disconnected", please click on to see the video, it will show you how to connect

Way 1: Connect with USB

Disconnected

Way 2: Connect with wireline network

Disconnected

Way 3: Connect with Wi-Fi

One-click installation

Tips: If the one-click installation does not satisfy your usage scenario, you can try [manual installation](#)

[User Guide](#)

Please select the printer you would like to install

☐ Configure and install Wi-Fi via USB

Printer Name	Port

☒ Wireless network printer

Printer Name	IP Address	Host name
☒ X X X Series PCL6 0001	10.10.148.150	X X X -02D22B
☐ X X X Series PCL6 0002	10.10.148.152	X X X -02D94A

☒ Install the printer from the list with a hostname

[Refresh](#)

Tips: If your printer is not in the list, please check the printer network status and see if it is in the same network as the current PC

[Back](#) [OK](#)



Note:• If the printer you need is not shown in the list, please click "Refresh" button to search again. If it is not found, please check if the printer and computer are in the same network. (Please see [Chapter 5.3](#) for how to check).

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".

6. After the installation, click "Print &Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.2. Manual installation

- Before installing the drive, you need to learn about printer model by printing printer information page out and check the product name (please refer to [Chapter 11.6](#) for printing methods).

3.1.2.1. Installation via USB connection


1. Connect the printer to computer via USB cable, power the printer and computer on.
2. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
 - Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
 - Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

3. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
4. Click on the "Manual installation" at the bottom of driver installation interface, and enter into manual installation interface.
5. Please select installation language and printer model.

6. Select "Connect via USB" and click on "Install".

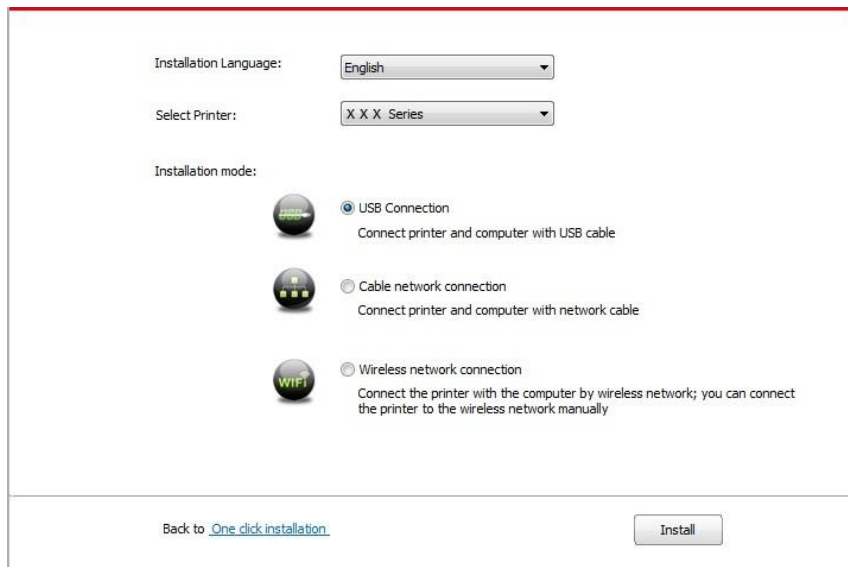

7. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.

8. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.2.2. Installation via wired network connection

1. Turn the power of printer and computer on.
2. Connect the computer to wired network.
3. Connect network cable to the network interface of printer, to make sure the printer is connected to computer network (please refer to [Chapter 4](#) for network setup).
4. Place the attached installation CD in the computer CD-ROM:
 - Windows XP system: automatically run the installation procedure.
 - Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
 - Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
 - Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note:• Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.

5. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
6. Click on the "Manual installation" at the bottom of driver installation interface, and enter into manual installation interface.
7. Please select installation language and printer model.
8. Select "Wireline network connection" and click on "Install".

The screenshot shows a printer installation window. At the top, there are two dropdown menus: "Installation Language:" set to "English" and "Select Printer:" set to "X X X Series". Below these, the "Installation mode:" section offers three options, each with a circular icon and a radio button. The first option is "USB Connection" with a USB icon and the text "Connect printer and computer with USB cable". The second option, "Cable network connection", is selected with a blue dot and has the text "Connect printer and computer with network cable". The third option is "Wireless network connection" with a "WIFI" icon and the text "Connect the printer with the computer by wireless network; you can connect the printer to the wireless network manually". At the bottom left, there is a link "Back to [One click installation](#)". At the bottom right, there is an "Install" button.

9. The installation software will search the printer automatically and the searching process may need some time.

10. After finishing searching, select the printer that needs to be connected and click “Next”.

Printer Name	IP Address	Host name
X X X Series PCL6 0001	10.10.148.140	X X X -7798BB

☒ Install the printer from the list with a hostname

☐ Add the IP address or hostname manually

 **Note:** • If the printer you need to connect is not in the list of printers searched, please click “Refresh” to search again.

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".
- If IP address or host name is added manually, you need to know the IP address of the printer connected or host name. If they are not made clear, please print the “NetConf Pg” and view “IP Address” and “Host name” (Please refer to [Chapter 11.6](#)).

11. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.

12. After the installation, click "Print &Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.2.3. Installation by wireless network connection mode

Wireless network connection type is divided into basic structure mode and Wi-Fi Direct mode (please refer to [Chapter 5](#) for details).

3.1.2.3.1. Installation in basic structure mode

1. Connect computer to access point (wireless router).
 2. Connect the printer to computer via USB cable, then power the printer on.
 3. Place the attached installation CD in the computer CD-ROM:
- Windows XP system: automatically run the installation procedure.

- Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click "Autorun.exe" to run the installation procedure.
- Windows 8 system: When the "DVD RW driver" window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.
- Windows 10 system: When the "DVD RW driver" window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click "Autorun.exe" to run the installation program.



Note: • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.


4. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the "Next" button in the lower right corner of the interface to enter the driver installation interface.
5. Click on the "Manual installation" at the bottom of driver installation interface, and enter into manual installation interface.
6. Please select installation language and printer model.
7. Select "Wireless network connection" and click on "Install".

The screenshot shows a printer installation window with the following fields and options:

- Installation Language:** A dropdown menu set to "English".
- Select Printer:** A dropdown menu set to "X X X Series".
- Installation mode:** Three radio button options:
 - USB Connection:** Connect printer and computer with USB cable.
 - Cable network connection:** Connect printer and computer with network cable.
 - Wireless network connection:** Connect the printer with the computer by wireless network; you can connect the printer to the wireless network manually. This option is selected.

At the bottom, there is a link "Back to [One click installation](#)" and an "Install" button.

8. Select “Yes, I want to configure the printer's wireless network” on the wireless setup window popped out, and operate according to the prompts to set up the printer to wireless network (please refer to [Chapter 5.1.1](#) for setup method).

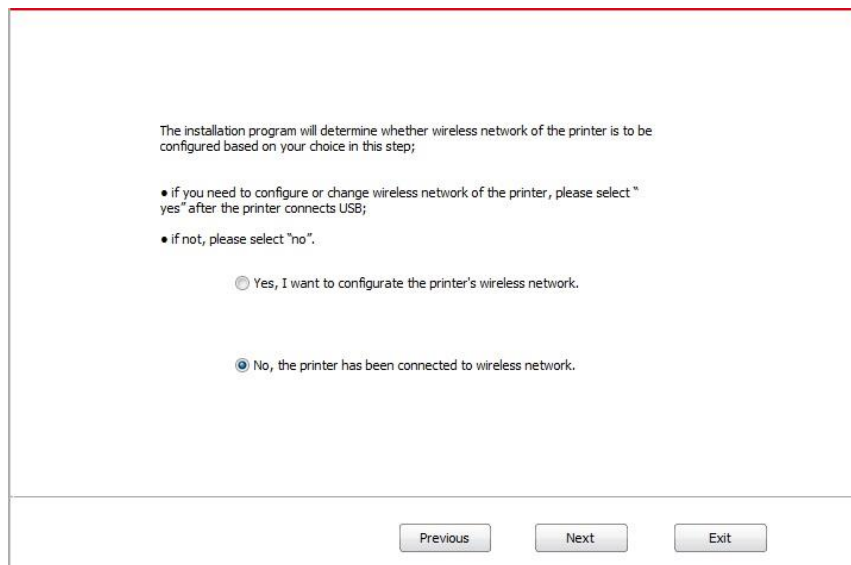

The installation program will determine whether wireless network of the printer is to be configured based on your choice in this step;

- if you need to configure or change wireless network of the printer, please select “yes” after the printer connects USB;
- if not, please select “no”.


☐ Yes, I want to configure the printer's wireless network.

☒ No, the printer has been connected to wireless network.

Previous Next Exit

9. The installation software will search the printer automatically after wireless network is configured successfully. The search process may need some time.

10. Select the printer needs to be connected and click “Next”.

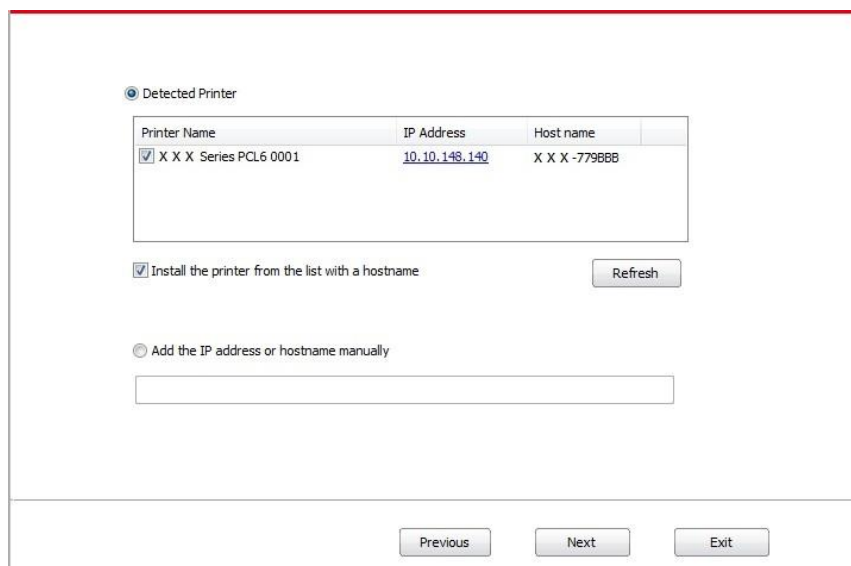

☒ Detected Printer

Printer Name	IP Address	Host name
☒ X X X Series PCL6 0001	10.10.148.140	X X X -7798BB

☒ Install the printer from the list with a hostname Refresh

☐ Add the IP address or hostname manually

Previous Next Exit



-
- Note:** • If the printer you need to connect is not in the list of printers searched, please click “Refresh” to search again.
- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".
 - If IP address or host name is added manually, you need to know the IP address of the printer connected or host name. If they are not made clear, please print the “NetConf Pg” and view “IP Address” and “Host name” (Please refer to [Chapter 11.6](#)).
-

11. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.

12. After the installation, click "Print & Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.2.3.2. Installation in Wi-Fi Direct mode

1. Turn the power of printer and computer on.

2. Connect computer to the Wi-Fi Direct network of the printer (please refer to [Chapter 5.2.2](#) for setup method).

3. Place the attached installation CD in the computer CD-ROM:


- Windows XP system: automatically run the installation procedure.
- Windows 7/Vista/Server 2008 system: Pop up "Autoplay" interface, click “Autorun.exe” to run the installation procedure.
- Windows 8 system: When the “DVD RW driver” window pops up from the right top corner of Computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation program.
- Windows 10 system: When the “DVD RW driver” window pops up from the lower right corner of Computer desktop, click anywhere in the pop-up window, then click “Autorun.exe” to run the installation program.




-
- Note:** • Some computers may be unable to auto play the CD because of system configuration. Please double click "Computer" icon, find "DVD RW driver", then double click "DVD RW driver" to run the installation procedure.
-

4. Read and agree to the terms contained in the End User License Agreement and the Privacy Policy, click the “Next” button in the lower right corner of the interface to enter the driver installation interface.

5. Click on the "Manual installation" at the bottom of driver installation interface, and enter into manual intallation interface.
6. Please select installation language and printer model.
7. Select "Wireless network connection" and click on "Install".

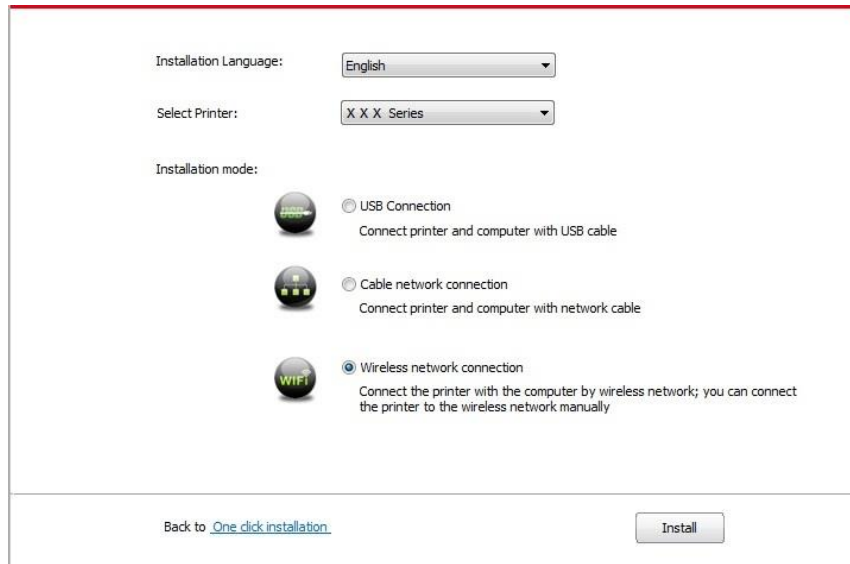

8. Select "No, the printer has been connected to wireless network" on the wireless setup window popping out, and then click "Next".

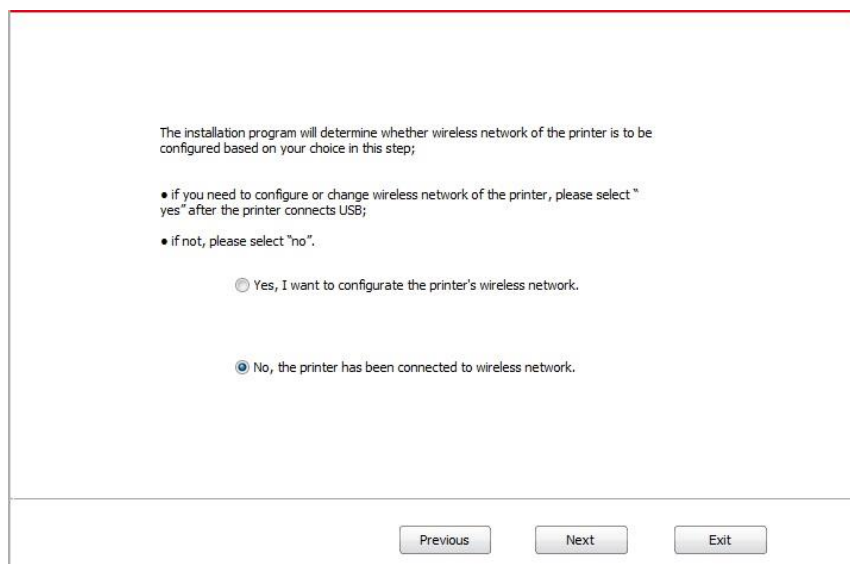

9. The installation software will search the printer automatically and the searching process may need some time.

10. Select the printer needs to be connected and click “Next”.

Printer Name	IP Address	Host name
X X X Series PCL6 0001	10.10.148.140	X X X -7798BB

☒ Install the printer from the list with a hostname

☐ Add the IP address or hostname manually



Note: • If the printer you need to connect is not in the list of printers searched, please click “Refresh” to search again.

- When the printer IP address changes under printer driver installed with host ID , you can also directly print without re-installing the driver. If you need to install the printer driver with the host ID, please check the option "Install the printer in the list with host ID".
- If IP address or host name is added manually, you need to know the IP address of the printer connected or host name. If they are not made clear, please print the “NetConf Pg” and view “IP Address” and “Host name” (Please refer to [Chapter 11.6](#)).

11. The software installs the driver automatically and the installation process may need some time. The duration is related to your computer configuration, please wait patiently.

12. After the installation, click "Print &Test Page" button. If your printer prints the test page successfully, it means that you have installed the driver correctly.

3.1.3. Method of driver uninstallation

Windows 7 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.

1. Click the Start menu of computer and then click All programs.

2. Click Pantum, and then Click Pantum XXX Series.

Pantum XXX Series where XXX represents product model.

3. Click uninstall to delete the driver according to instructions on uninstall window.

4. Restart computer after finishing unloading.

3.2. macOS system driver installation

- Driver installation under macOS system is divided into 2 steps, driver installation and adding a printer. If you are going to print in AirPrint mode, there is no need to install a driver and you just need to add a printer directly.
- When you are installing a driver with wired or wireless network, you may need to know the Bonjour name of printer. Please print the “Network setup page” to view it. (Please refer to [Chapter 11.6](#)).

3.2.1.Driver installation


macOS 10.14 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.

1. Turn the power of printer and computer on.
2. Insert the CD accompanying with printer in the CD driver of your computer, and double click Pantum XXX Series installation package. (XXX in Pantum XXX Series represents product model.)




3. Click “Continue”.

4. Read licensing agreement and then click "Continue".

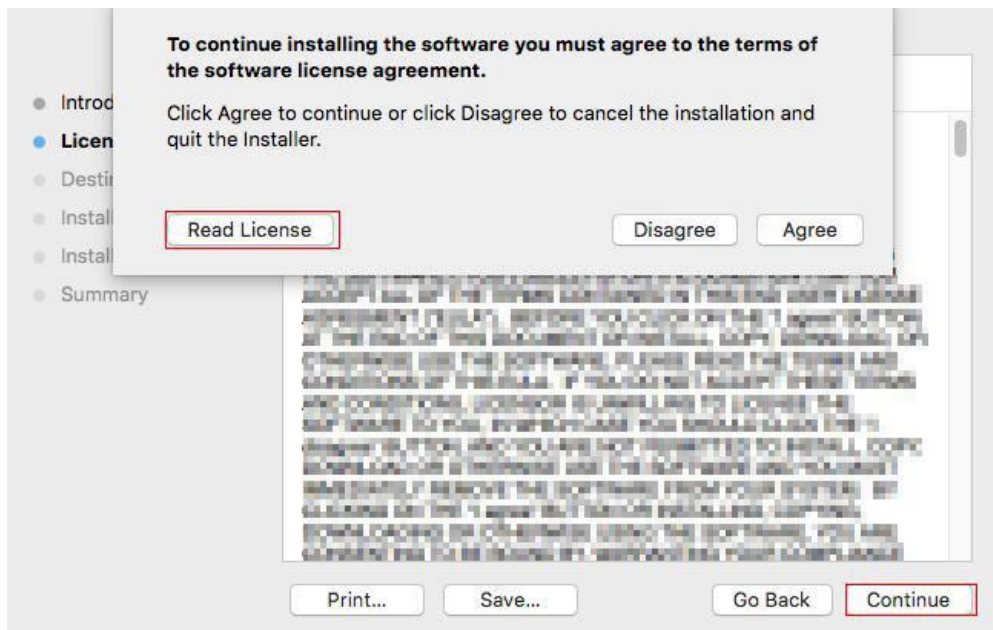

5. Click "Agree" on the prompt window popping out to accept the licensing agreement.


6. Read the Privacy Policy and press "Continue".

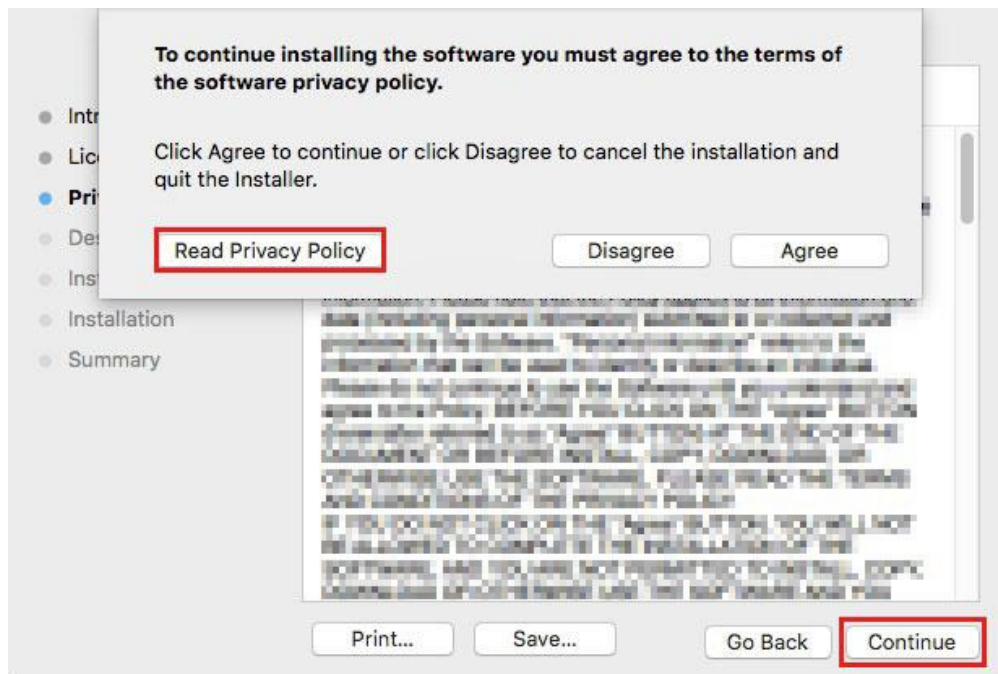

7. In the popped-up prompt window, press "Agree" to accept the Privacy Policy.

8. Click "Install".


9. Input computer password and click “Install Software”.

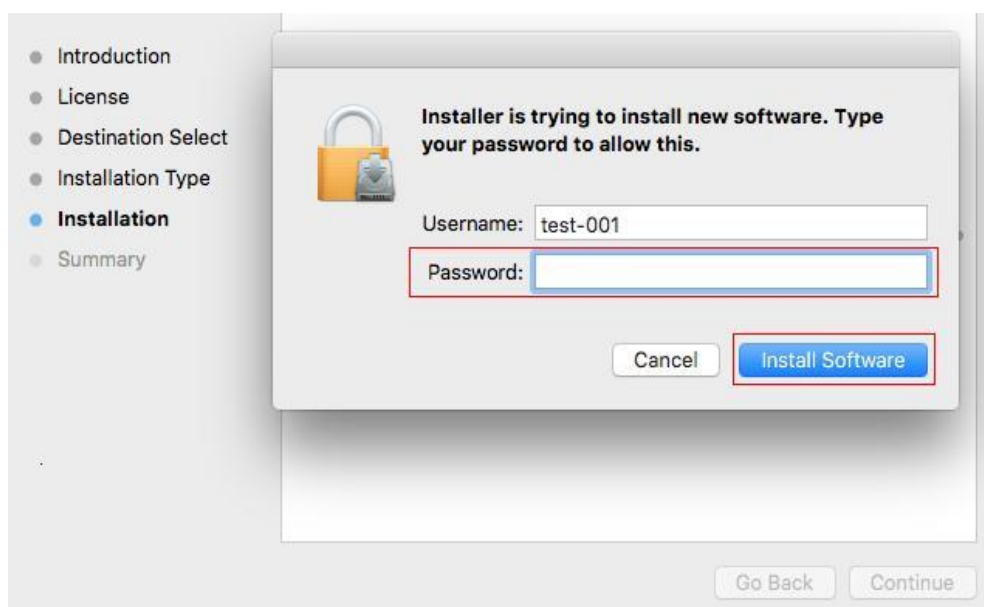

10. Click “Continue Installation” on the prompt window popping out.

11. The system will finish driver installation automatically.

• If using a USB cable to connect a computer with a Wi-Fi model printer, a wireless network configuration prompt window will pop up during driver installation, as shown in following picture.

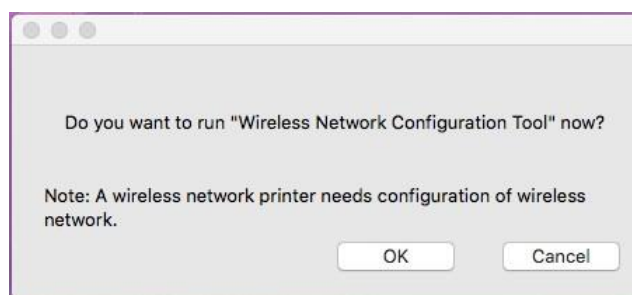

 **Note:** • click “Yes”, you can configure printer’s wireless network via wireless network configuration tool (refer to [Chapter 5.1.1](#) for how to make configuration).When configuration is completed, unplug USB cable, and then on the pop-up “Add Printer” interface, you may add the network-connected printer(refer to [Chapter 3.3](#) for how to add printer).

• Click “No”, you can add a USB-connected printer on the pop-up “Add Printer” interface (refer to [Chapter 3.3](#) for how to add printer).

If using a USB cable to connect a computer with a non-Wi-Fi model printer, a “Add Printer” interface will pop up during the driver installation and you can add a printer here (refer to [Chapter 3.3](#) for how to add printer).

3.3. Add printer to macOS system

3.3.1. Add up the printer via USB

1. Connect the printer to computer with USB cable and then turn power on.
2. Enter the “System Preferences” – “Printers & Scanners” of computer.
3. Click  button to select “Add Printer or Scanner”.
4. Select printer and then select the corresponding printer mode from the “Use” menu popping out.
5. Click “Add”.

3.3.2. Add up the printer via wireline connection

1. Turn the power of printer and computer on.
2. Connect the computer to wired network.
3. Connect the network cable to the network interface of printer, and make sure the printer is connected to the computer network (Please refer to [Chapter 4](#) for network setup).
4. Enter the “System Preferences” – “Printers & Scanners” of computer.
5. Click  button to select “Add Printer or Scanner”.
6. Select printer and then select the corresponding printer mode from the “Use” menu popping out.
7. Click “Add”.

3.3.3. Add up the printer via wireless connection

1. Turn the power of printer and computer on.
2. Make sure the wireless network connection between computer and printer is set up.



Note: • In case of basic structure mode, connect wireless network printer to the access point (wireless router). Please refer to [Chapter 5.1](#) for connection method.

• In case of Wi-Fi Direct mode, connect wireless client to wireless network printer directly. Please refer to [Chapter 5.2](#) for connection methods.

3. Enter the “System Preferences” – “Printers & Scanners” of computer.
4. Click  button to select “Add Printer or Scanner”.

5. Select printer and then select the corresponding printer mode from the “Use” menu popping out.
6. Click “Add”.

3.3.4. Add AirPrint printer

1. Turn the power of printer and computer on.
2. Make sure the connection between printer and computer is set up (USB connection or network connection).
3. Enter the “System Preferences” – “Printers & Scanners” of computer.
4. Click  button to select “Add Printer or Scanner”.
5. Select printer and select “Secure AirPrint” (data encryption) or “AirPrint” (no encryption) in the “Use” option box.
6. Click “Add”.



Note: • When the printer is connected to computer with USB cable, the system will recognize and add AirPrint automatically.

- If AirPrint printer of network connection is added, then the connecting USB cable should be disconnected first before adding the printer.
 - AirPrint printer is named after the ending of "AirPrint".
-

4. Wired network setup (applicable to wired network models)

In case printers support wired network printing, they can be connected to network to control printer to print in wired network mode.

4.1. Set IP Address

The IP address of the printer may be automatically obtained through DHCP function or set manually.

4.1.1. Automatic Setting

DHCP automatic setting function is enabled by default on the printer.

1. Connect the printer to the network through a network cable and complete the startup preparation work.
2. The printer will receive the IP address assigned by server automatically. It may take server minutes to receive IP address under the influence of network environment.

You can check the IP address of printer by printing "Network setup page" out (please refer to [Chapter 11.6](#) for printing method) or check network information by viewing the control panel of printer (please refer to [Chapter 11.4](#) for viewing methods). If the IP address is not listed, please check network environment and then try again after waiting for several minutes.



Note: • If DHCP server fails to assign IP address automatically, the printer will get the link-local address assigned by printer automatically: 169.254.xxx.xxx.


4.1.2. Manual Setting

To set up IP address for printer through the control panel of printer manually, please refer to [Chapter 11.3](#) for details.

To set up IP address for printer through the embedded Web server manually, please refer to [Chapter 6.2.1](#) for details.

5. Wireless network setup (applicable to Wi-Fi models)

Wireless network connection type is divided into basic structure mode and Wi-Fi Direct mode. If you have problems with wireless network setup, please refer to [Chapter 5.3](#) Wireless Network Setup FAQs.

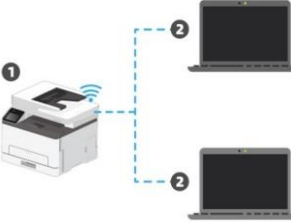	Basic structure mode: connecting to a wireless device via router 1. Access point (wireless router) 2. Wireless network printer 3. Computer connecting to access point via wireless network 4. Computer connecting to access point via network cable
	Wi-Fi Direct mode: wireless client is connecting to a printer with Wi-Fi function 1. Wireless network printer 2. Wireless client is directly connecting to a wireless network printer.

5.1. Basic structure mode

You can connect a computer to your printer via access point (wireless router) as the medium. Access point (wireless router) connection is divided into wireless network setup and Wi-Fi Protected Setup (WPS).

Important: Before wireless network installation, you must learn about the service set identifier (SSID) and password of your access point in order to use them during wireless network setup. If they cannot be determined, please consult your network administrator or access point (wireless router) manufacturer.

5.1.1. Wireless network setup tools

If your computer has been installed with a driver and had been connected to wireless network, but the wireless network was changed, you can set it again with wireless network setup tools.

5.1.1.1. Preliminary preparations

1. Access point (wireless router)
2. A computer that has been connected to network.
3. A printer that has wireless network function.

5.1.1.2. Setup methods of wireless network setup tools


1. Take the wireless network setup tool in computer.

1) **Windows system:** Click the "Start menu" – "All programs" - "Pantum"— Product name – "Wireless network setup tool".

2) **macOS system:** click "Go" - "Applications" - "Pantum" - "Utilities" - "Wireless Network Configuration Tool" on the computer Finder menu bar.


2. Use USB cable to connect and configure.

Select "Yes, I have an USB cable that can be used for installation" in the following interface. Click "Next".

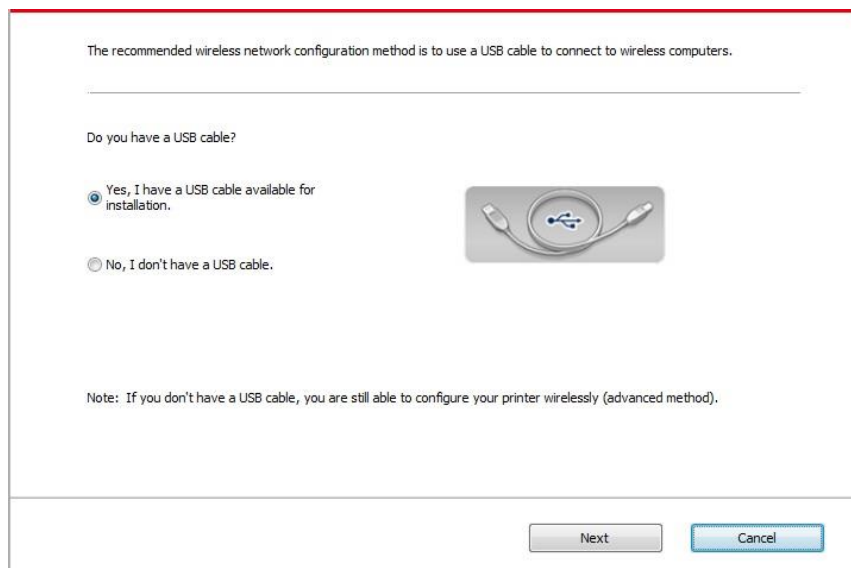

2.1 The computer has been connected to wireless network.

1) The currently wireless network currently connected to computer is selected as wireless network configuration tool by default. Complete configuration according to interface prompt.

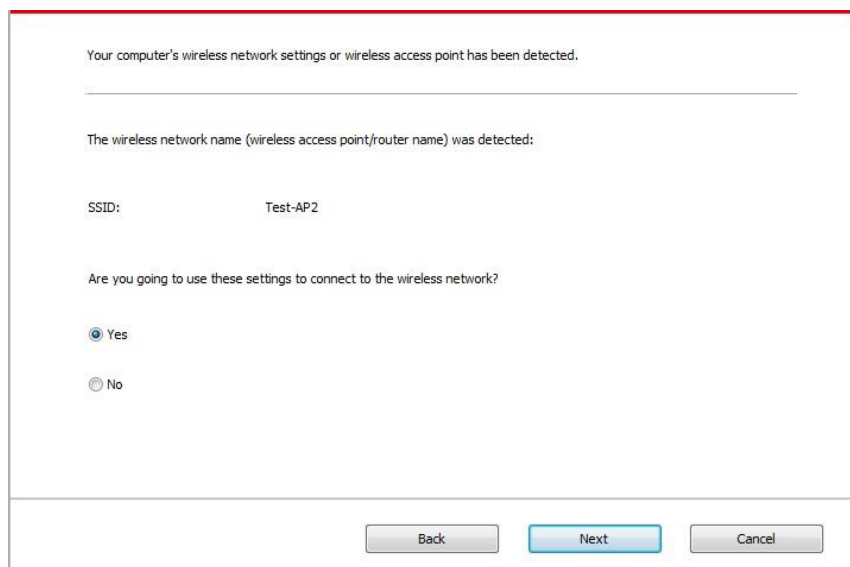

Your computer's wireless network settings or wireless access point has been detected.

The wireless network name (wireless access point/router name) was detected:

SSID: Test-AP2

Are you going to use these settings to connect to the wireless network?

☒ Yes


☐ No

Back Next Cancel



Note: • The SSID you selected should be consistent with the SSID of access point (wireless router) connected to your computer.

2) Please tick “No” to configure other wireless network needed to connect to. Complete configuration according to interface prompt.

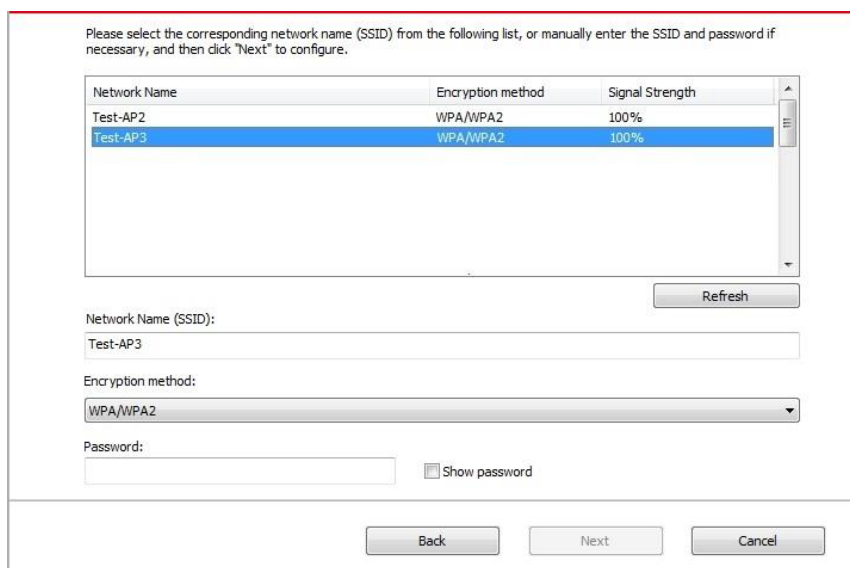

Please select the corresponding network name (SSID) from the following list, or manually enter the SSID and password if necessary, and then click "Next" to configure.

Network Name	Encryption method	Signal Strength
Test-AP2	WPA/WPA2	100%
Test-AP3	WPA/WPA2	100%

Refresh

Network Name (SSID): Test-AP3

Encryption method: WPA/WPA2

Password: ☐ Show password

Back Next Cancel



Note: • At present, the printer supports 3 types of safe modes: none, WEP and WPA/WPA2.

- 1) None: There is no encryption method used.
 - 2) WEP: Send and receive data via security key by using WEP (Wired Equivalent Privacy). WEP key is applicable to 64-digit and 128-digit encrypted network and can contain numbers and letters at the same time.
 - 3) WPA/WPA2: it is the pre-shared key (PSK) of Wi-Fi protected access which connects wireless device and access point via TKIP or AES encryption (WPS-Personal). The working length of WPA/WPA2 is within the PSK of 8-63 characters.
- The display password is not ticked by default; if it is ticked, all passwords input can be seen in clear text.

2.2 The computer is not connected to wireless network.

Input the SSID (case sensitive) and password of access point (wireless router) in the interface below. Complete configuration according to interface prompt.

The image shows a software interface for configuring a wireless network. It contains two main steps:

- Step 1:** "Please click on 'Print wireless network information page' to get the network name and encryption method. Please skip this step if you already know the network name and encryption method." Below this text is a button labeled "Printing wireless network information page".
- Step 2:** "Please enter wireless network user name and password." This section includes:
 - A label "Network Name (SSID):" followed by a text input field.
 - A label "Encryption method:" followed by a dropdown menu currently showing "None".

At the bottom of the interface are three buttons: "Back", "Next", and "Cancel".



Note: • If you do not know the SSID of access point (wireless router), please click "Print Wireless Network Information Page" to view the SSID of the needed access point (wireless router).

- If the printer cannot be used normally after wireless network setup is finished, please install the drive again.

3. Use WPS connection .

Select “No, I don't have a USB cable” in the interface below and then click “Next”.

The recommended wireless network configuration method is to use a USB cable to connect to wireless computers.

Do you have a USB cable?

☐ Yes, I have a USB cable available for installation.

☒ No, I don't have a USB cable.



Note: If you don't have a USB cable, you are still able to configure your printer wirelessly (advanced method).

Next Cancel

1) Use WPS method to perform steps below to start wireless network on printer. (Please refer to [Chapter 5.1.2](#) for detailed WPS configuration)

Use WPS method to perform steps below to start wireless network on printer.

1. Hold Wi-Fi button on printer for 2s.

2. Set the access point to WPS mode.
For details, see the guide provided with the access point.




3. After all of the above are done, please click "Next".

If you encounter any problems in the configuration process, place the printer closer to the location of the Wireless Access Point for the time being.

Back Next Cancel

2) Judge if the printer is successfully connected according to the status of Wi-Fi indicator on printer. If configuration failed, please click "Previous" to configure again; if configuration succeeded, please click "Done" to complete configuration.

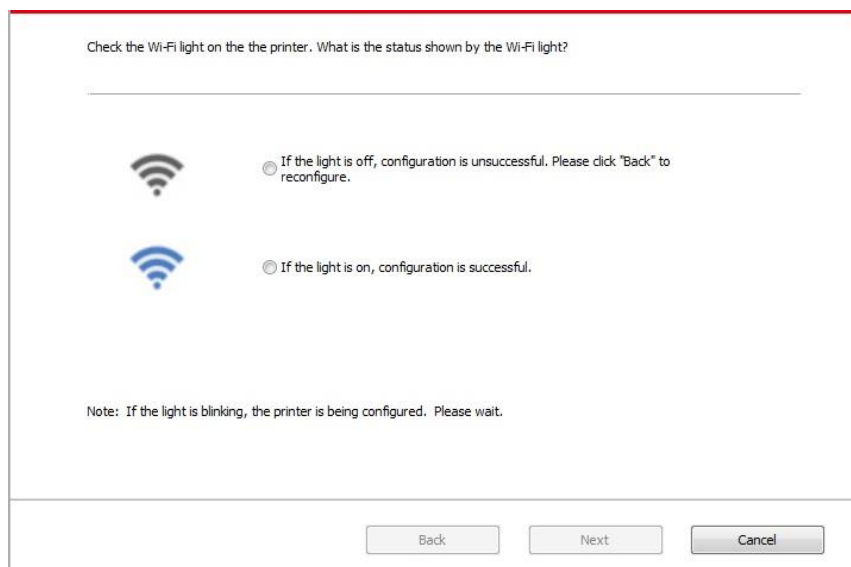

 **Note:** • If the printer cannot be used normally after wireless network setup is finished, please install the drive again.

5.1.2. Wi-Fi Protected Setup (WPS) setup

If the access point (wireless router) supports Wi-Fi Protected Setup (WPS), the Wi-Fi key on the control panel of printer and WPS key on access point (wireless router) can be pressed in order to connect the printer to wireless network.

5.1.2.1. Preliminary preparations

1. The access point (wireless router) supports Wi-Fi Protected Setup (WPS).
2. A printer that has wireless network function.

5.1.2.2. Wi-Fi Protected Setup (WPS) method

1. Turn on the power of printer and access point (wireless router).
2. Make sure the printer is in ready state.
3. From printer control panel navigate to: ""-Network set-Wireless conf.-PBC mode.
4. Operate according to the prompt in printer screen.

5.1.2.3. Use the “Personal Identification Number (PIN)” method

1. Turn on the power of printer and access point (wireless router).
2. Make sure the printer is in ready state.
3. From printer control panel navigate to: ""-Network set-Wireless conf.-PIN mode.
4. Record 8-digit WPS PIN code.
5. Open Web browser, enter IP Add. of access point (wireless router) in Add. field.
6. Access to WPS setting, enter 8-digit PIN code and save.

5.1.3. How to disable the Wi-Fi network connected

1. From printer control panel navigate to: ""-Network set-Wireless conf.-Station.
2. Select “Close” button and save.

5.2. Wi-Fi Direct mode

You can connect wireless client (including the computer and mobile device with wireless network feature) to wireless network printer without using the access point (wireless router).

5.2.1. Preliminary preparations

1. Printer with the Wi-Fi Direct feature.
2. Wireless client (including computer and mobile device with wireless network feature).

5.2.2. Wi-Fi Direct connection

Enable the Wi-Fi direct connection of the printer before Wi-Fi direct connection.




Note: • Klik Wi-Fi icon at the upper right corner of the control panel to ente the Wi-Fi information w indow, click "Print QR Code",andprint the "Mobile Device Wi-Fi Connection Wizard Page" fo Wi-Fi connection of mobile devices.

1. From printer control panel navigate to: ""-Network set-Wi-Fi dir.
2. Select “Custom” (or “Auto”) button and save.


5.2.2.1. Connection method of wireless client that supports Wi-Fi Direct feature (direct invitation to connect)

You must use mobile devices that support Wi-Fi Direct function for Wi-Fi Direct connection. The operating steps may differ because of the mobile device you are using.

1. Turn on printer power.
2. Turn on the mobile device and select setup to enter Wi-Fi connection interface.

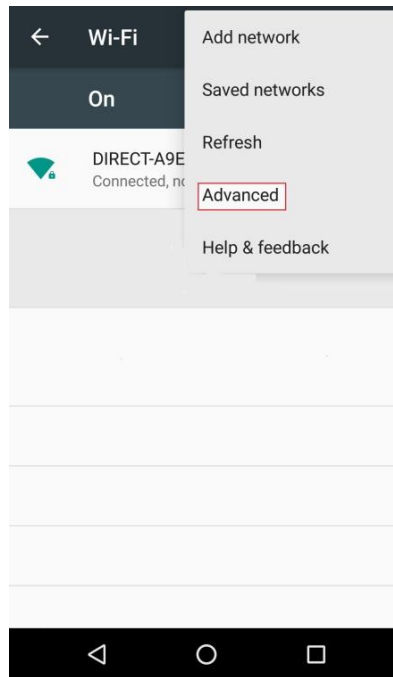

3. Select “Advanced” and then select “Wi-Fi Direct” in advanced WLAN interface.

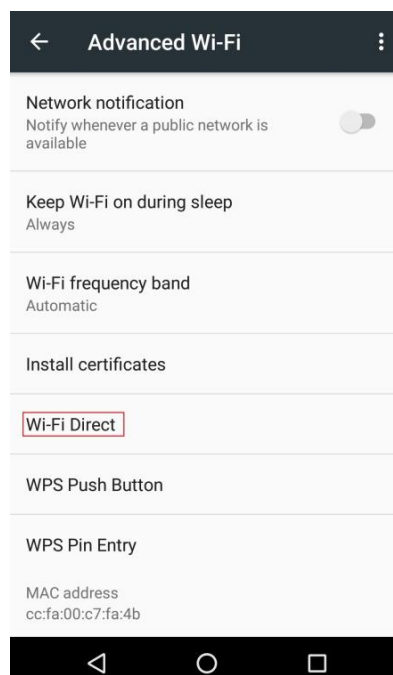

4. Select printer SSID on direct interface to launch a connection invitation.
5. When the panel inquires if connect or not, click “OK” button for confirmation and Wi-Fi Direct.



Note: • In case of auto connection mode, the mobile device will start to connect automatically after initiating connection invitation without panel confirmation.

5.2.2.2. Connection method of wireless client that does not support Wi-Fi Direct function (input password to connect)

1. Turn on printer power.
2. From printer control panel navigate to: ""-Network info-WiFi dir. info to check “Network name” and “Password”
3. Turn on the computer or mobile device with wireless network function; select the SSID of Wi-Fi Direct and input password to connect.



Note: • Initial password of printer for Wi-Fi Direct: 12345678.

5.2.3. How to disable the Wi-Fi Direct

1. From printer control panel navigate to: ""-Network settings-Wi-Fi dir.
2. Select “Close” button and save.

5.3. Wireless network setup FAQs

1. The printer is not found.

- If the power of computer, access point (wireless router) or printer is turned on.
- If the computer is connected to printer with USB cable.
- If the printer supports wireless network connection.

2. SSID cannot be found when network is connected

- Inspect if the power switch of access point (wireless router) is turned on.
- The printer cannot find the SSID of the access point (wireless router) you need to connect, please check the SSID of access point and try to connect again.
- Every time when the setup of access point (wireless router) is changed, you must set up the wireless network of printer again.

3. Connection failure

- Please inspect if the safe mode and password of access point (wireless router) and printer is correct.

- Inspect the wireless receiving around printer. Signal receiving may be affected if the router is away from the printer or there is an obstacle between them.
- Turn the power of access point (wireless router) and printer off and then restart them and set up.

4. The following aspects should be inspected if the printer has problems while they are used in network:

- Inspect if the firewall software blocks communication. If the computer and printer are connected in the same network but they cannot be searched, the communication might be blocked by firewall software. Please refer to the user guide of firewall software to turn firewall off and then try to search the printer again.
- Inspect if the IP address assignment of printer is correct. You can inspect IP address by printing the network setup information page of printer out.
- Please refer to the following steps to check if printer and computer are in the same network:
 - 1) Select "Command prompt" as shown below.
 - a. Windows 8/10 system: Select "Search" button in the Start Menu and input "Command prompt" in search bar, then press the "Enter" button in the keyboard.
 - b. Windows 7/Vista/XP system: click "Start" menu-"All procedures"-"Attachment"-"Command prompt".
 - 2) Input ping and your printer IP address in popup window, and press "Enter" button.
For example: ping XXX.XXX.XXX.XXX ("XXX.XXX.XXX.XXX" is printer IP address)
 - 3) If RTT is indicated in the window, that is to say your printer and computer are in the same network. If RTT is not indicated in the window, please refer to [Chapter 5](#) to re-configure the printer wireless network.



Note: • Please refer to the user guide or consult the manufacturer for information related to access point (wireless router).

6. Web server

You can manage printer setup via the embedded Web server.

6.1. Visit the embedded Web server

1. Turn on the power of printer and computer.
2. Connect the printer to network to ensure that the printer is connected to the network where the computer is connected to (please refer to [Chapter 4](#) or [Chapter 5](#) for network setup method).
3. Input the IP address of printer in the address bar of Web browser to visit the Web server imbedded in printer.

View the IP address of printer via control panel (please refer to [Chapter 11.4](#)) or print the “Network setup page” out to view the IP Address of printer (please refer to [Chapter 11.6](#)).



Note: • Windows users are suggested to use Microsoft Internet Explorer 8.0 (or higher version) or Firefox 1.0 (or higher version), macOS users are suggested to use Safari 4.0 (or higher version). No matter what kind of browser you are suing, please ensure that JavaScript and Cookies are always enabled. Please ensure compatibility with HTTP 1.0 and HTTP 1.1 when other network browsers are used.

- If the computer cannot visit the Web server embedded in printer, then your computer and printer may be connected to different networks. Please inspect your network environment or consult your network administrator.

4. Click “Log in” option, input user name and password (the default user name is admin and the initial password is 000000) and click “Log in”.



Note: • For safety reasons, you are suggested to change the default password, which can be finished in the “User Management” interface.

6.2. Use Web server to manage printer

You can use the embedded Web server to manage printer.

1. View the basic information including product name, printer state and ink cartridge of printer.
2. Set up the network protocol parameters supported by printer.
3. Set up the wireless network connection of printer, and turn on/off wireless network and Wi-Fi Direct function.
4. Set up mail server client and acquire printer state via E-mail notification.

5. It supports to configure e-mail address and FTP address to scan the file to be scanned directly to E-mail box or FTP server.

6.2.1. IP address setup

You need to connect your printer to network before IP address setup.

1. In case of wired network model, connect the printer to wired network by connecting to its network interface with network cable.
2. In case of wireless network model, the printer can be connected to wireless network via wireless network setup tools or Wi-Fi Protected Setup(WPS) (please refer to [Chapter 5.1](#)).

6.2.1.1. IPv4 setup

IPv4 address of the printer is divided into DHCP auto assignment and manual setting, and the DHCP auto assignment function is on by default. You can set up the IPv4 address of printer manually to set up fixed IPv4 address for the printer.

1. Turn on printer power to connect printer to network.
2. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
3. Click “Settings” – “Network settings” – “Protocol Settings” – “Wired IP Configuration”.
4. Set the IPv4 address assignment mode as “Manual”.
5. Input “IPv4 Address”, “Subnet Mask” and “Gateway Address”, and then click “Apply”.

6.2.1.2. IPv6 setup

1. Turn on printer power to connect printer to network.
2. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).

3. Click “Settings” – “Network settings” – “Protocol Settings” – “IPv6”.
4. Tick “Enable IPv6 protocol” and “Enable DHCPv6” (ticked by default) and then click “Apply”.
You can refresh the browser and view the “IPv6 Local Link Address” and “Stateful Address” in “Wired IP Configuration” interface.



Note: The printer supports using the following IPv6 addresses for network printing and management (please refer to [Chapter 11.6](#) and print “Network setup page” view IPv6 address).

- IPv6 local-link address: local IPv6 address set up by oneself (addresses beginning with FE80).
 - Stateful address: IPv6 address set up by DHCPv6 server (if there is no DHCPv6 server in network, the “Stateful Address” cannot be assigned).
 - Stateless address: IPv6 address set up by network router automatically .
-

6.2.2. Wireless setup

You can set up the wireless network, wireless IP setup, Wi-Fi Direct and WPS via wireless setup page. Before setup, please log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).

6.2.2.1. Wireless network

1. Click “Settings” – “Network settings” – “Wireless setup” – “Wireless Network”.
- 1) If you need to set up wireless network, please click the SSID of access point (wireless router) in search list, input secret key and click “Apply”.

6.2.2.2. Wireless IP setup

Only when the wireless network of printer is turned on, the Wireless IP Configuration can be displayed on Web server.

1. Click “Settings” – “Network settings” – “Wireless setup” – “Wireless IP Configuration”.
- 1) DHCPv4 is ticked by default. If IP address needs to be set up manually, please cancel the DHCPv4 checkbox ticked and input the “IPv4 Address”, “Subnet Mask” and “Gateway Address” that you need to set up and then click “Apply”.

6.2.2.3. WPS setup

1. Click “Settings” – “Network settings” – “Wireless setup” – “WPS”.
- 1) Select the “WPS Startup Method” you need, and then click “Apply” and operate according to page prompt.

6.2.2.4. Wi-Fi Direct setup

1. Click “Settings” – “Network settings” – “Wireless setup” – “Wi-Fi Direct”.



Note: • If Auto selected, the mobile terminal will realize automatic connection upon initiating the connection invitation without the need of confirmation on panel.
• If Manual selected, the mobile terminal cannot realize connection until initiating the connection invitation prior to confirmation on panel.

6.2.3. Machine setup

You can add mail address contacts, set up e-mail notification, set up sleep time and recover factory settings via machine setup page.

6.2.3.1. Set up e-mail notification

If you set up e-mail notification, an e-mail will be sent to the mail address specified by you when abnormality such as paper out occurs. You can receive emails only if you made correct email setup. Please consult your network administrator for detailed setup steps. You need to log in the embedded Web server before setting up email notification (please refer to [Chapter 6.1](#) for login method).

I. Set up SMTP client

1. Click “Settings” – “Network settings” – “Protocol Settings” – “SMTP”.
2. On SMTP page, input SMTP server address, set up the mailbox login name and password and then click “Apply”.

II. Add recipient address

1. Click “Settings” – “Machine settings” – “Address Book” .
2. Press “Email Address Book” - “New”, enter the contact name and email address, and then press “Apply”.

III. Set up email notification

1. Click “Settings” – “Machine settings” – “E-mail Notification”.
2. Press  and select the email address to be added in the pop-up contact list.

Or, check “Address X” (e.g. Address 1), and manually enter the email address to be added.

3. Check the desired email address and content of notification, and press “Apply”.

6.2.3.2. Configure the E-mail address book


If you want to scan a file to an e-mail address, you need to configure the e-mail address book first and then scan the file to the assigned e-mail address. The e-mail will not be received before

proper setting on the e-mail box; for specific setting steps, please consult your network administrator.

I. Set the E-mail address book

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click "Settings", "Machine Settings" and then "E-mail Address Book" to enter the setting interface of e-mail address book.
3. Click "Create" to pop out a window as below and edit the contact name and input the e-mail address, and then click "Apply".


 **Note:** • If some groups have been created, you may click to check a corresponding group to add the newly created e-mail address into it.

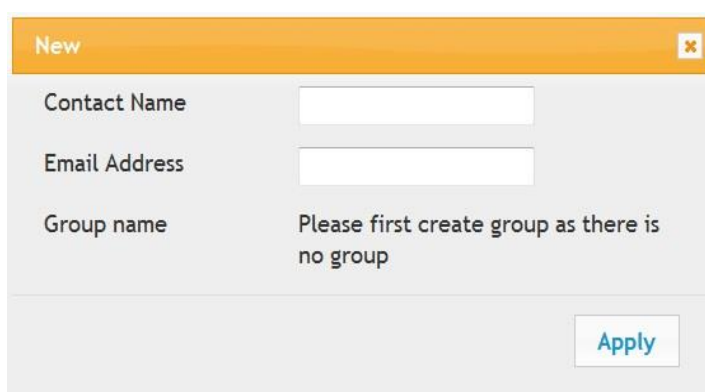

The screenshot shows a 'New' dialog box with an orange header bar containing the title 'New' and a close button. The dialog has three input fields: 'Contact Name' with an empty text box, 'Email Address' with an empty text box, and 'Group name' with a text box containing the message 'Please first create group as there is no group'. At the bottom right, there is an 'Apply' button.

II. Set the e-mail group

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click "Settings", "Machine Settings" and then "E-mail Group" to enter the setting interface of e-mail group.
3. Click "Create" to pop out a window as below and edit the group name and check the e-mail address to be added in the contact name (e-mail address) listbox, and then click "Apply".

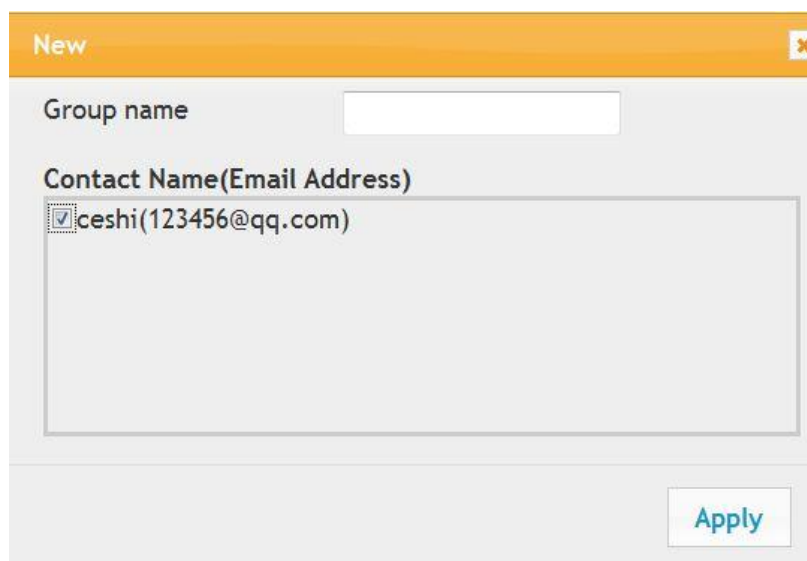


The screenshot shows a 'New' dialog box with an orange header bar containing the title 'New' and a close button. The dialog has a 'Group name' input field with an empty text box. Below it is a section titled 'Contact Name(Email Address)' containing a listbox with one item: 'ceshi(123456@qq.com)', which is selected with a checkmark. At the bottom right, there is an 'Apply' button.

6.2.3.3. Configure the FTP address book

If you want to scan a file to the FTP server, you need to configure the FTP address book first. When scanning, you may send the image scanned to the FTP server. Before configuring the FTP address book, you may need to ask your network administrator for the server IP address, port number, login name, password and server name.

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click "Settings", "Machine Settings" and then "FTP Address Book" to enter the setting interface of FTP address book.
3. Click "Create" to pop out a window as below and set relevant parameters; after settings completed, and then click "Apply".

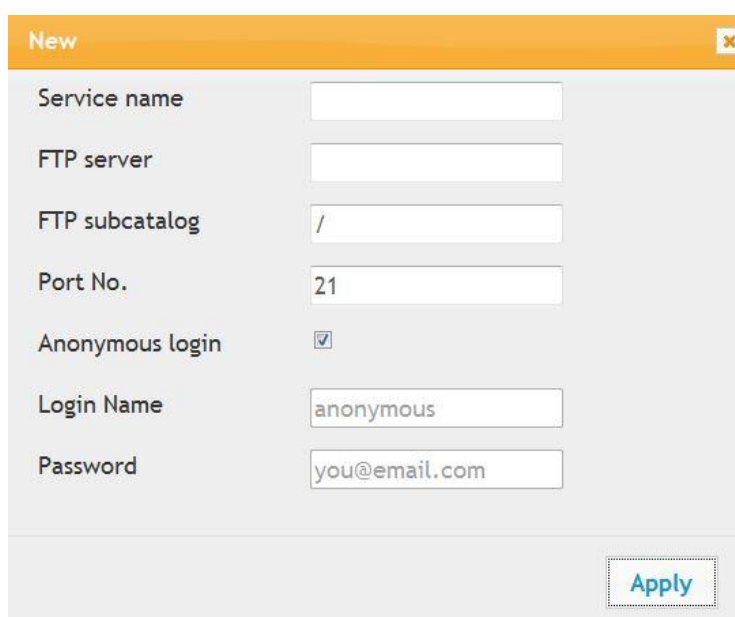

The screenshot shows a 'New' window with a yellow header bar. It contains several input fields for configuring an FTP address book entry. The fields are labeled 'Service name', 'FTP server', 'FTP subcatalog', 'Port No.', 'Anonymous login', 'Login Name', and 'Password'. The 'Anonymous login' field has a checked checkbox. The 'Login Name' field contains the text 'anonymous' and the 'Password' field contains 'you@email.com'. An 'Apply' button is located at the bottom right of the window.

New	
Service name	
FTP server	
FTP subcatalog	/
Port No.	21
Anonymous login	☒
Login Name	anonymous
Password	you@email.com
Apply	

6.2.3.4. Sleep time setup

If you want to change the sleep time of the printer, you can set it via the embedded Web server (the printer installed via network connection).

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click "Settings" – "Machine settings" – "System".
3. Select sleep time according to you need and then click "Apply".

6.2.4. Recover factory settings via Web server

1. Log in the embedded Web server (please refer to [Chapter 6.1](#) for login method).
2. Click “User Management” and then click “Restore to Factory Settings” to recover factory settings. The printer will restart automatically after factory settings recovery is finished.








Note: • After factory settings of printer are recovered, user name of the administrator will be recovered to admin and the login password will be recovered to 000000.
• You can also recover factory settings via keys on the control panel of printer, please refer to [Chapter 11.1.4](#).

7. Print

7.1. Print Function

You can set the print function through "Start"->"Devices and Printers"- select corresponding printer- right click – set print function in "Printing preferences". Some functions are as follows:

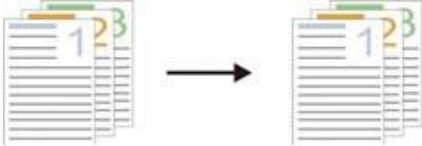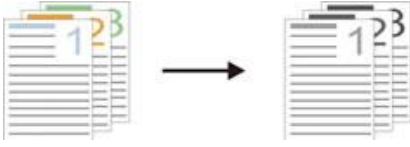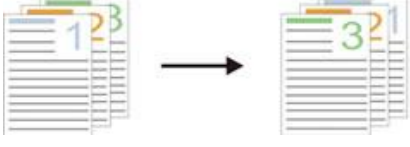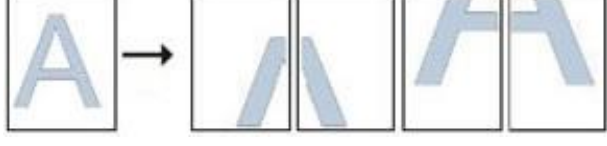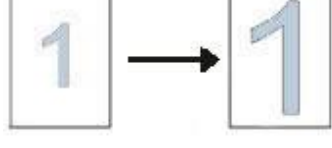Functions	Diagram
Color Printing ¹	
Monocolor printing	
Collate Print	
Reverse Print	
N-in-1	
Poster Print(for Windows Operation System only)	
Zoom Print	
Booklet printing	



Note: • Windows 7 is taken as example in the above description.

- You can realize poster printing feature by selecting 2x2 poster printing in multipage.
- You can enable printing preference and click the help button to view detailed function description. (Please refer to [Chapter 7.2.5](#) for the method to open help document).
- Note 1: When the Cyan (C), Magenta (M) or Yellow (Y) laser toner cartridge cannot be replaced promptly after its life is expired, you can choose to continue printing in black and white.

7.2. Print Settings



Note: • Windows 7 is taken as example for the following operation.

7.2.1. Setting the printing parameters

You can set up printing parameters with the following two methods before sending printing work (such as paper type, paper size and paper source).

Operating system	Temporary printing setup change	Permanent default setup change
Windows 7	1. Click "File" menu – "Print" – "Select printer" – "Printer properties" (the detailed steps may differ because of multiple operating systems).	1. Click "Start" menu – "Control Panel" – "Devices and Printers". 2. Right click on the printer icon, select "Printing preference" and then change setup and save it.
macOS	1. Click "File" menu – "Print". 2. Change setup in the window popping out.	1. Click "File" menu – "Print". 2. Change setup in the window popping out and click to save the preset. (Select preset every time before printing, or print according to default setup.)



Note: • Priority of App setup is senior to printer setup.

7.2.2. Print quality settings

7.2.2.1. Print Color


The printer supports color printing, black-and-white printing, and printing text in black. You can change it through the following steps as necessary.

1. Open the file to be printed, click the “File” menu in the upper left corner, and select “Print” to enable the print driver.
2. Select printer of the corresponding model.
3. Click “Printer Properties/Preferences” to configure printing.
4. Enter the “Quality” option interface.
5. Check the print effect you want according to your need.



Note: • If you don’t check any one of them, the print effect will be output in color mode.

- If you check “Black & White Printing”, the print effect will be output in black mode.
- If you check “Printing Text in Black”, the print effect will be text printed in black, and graphics and images printed in color. If the application recognizes the font as an image, the printer may print the text in color.

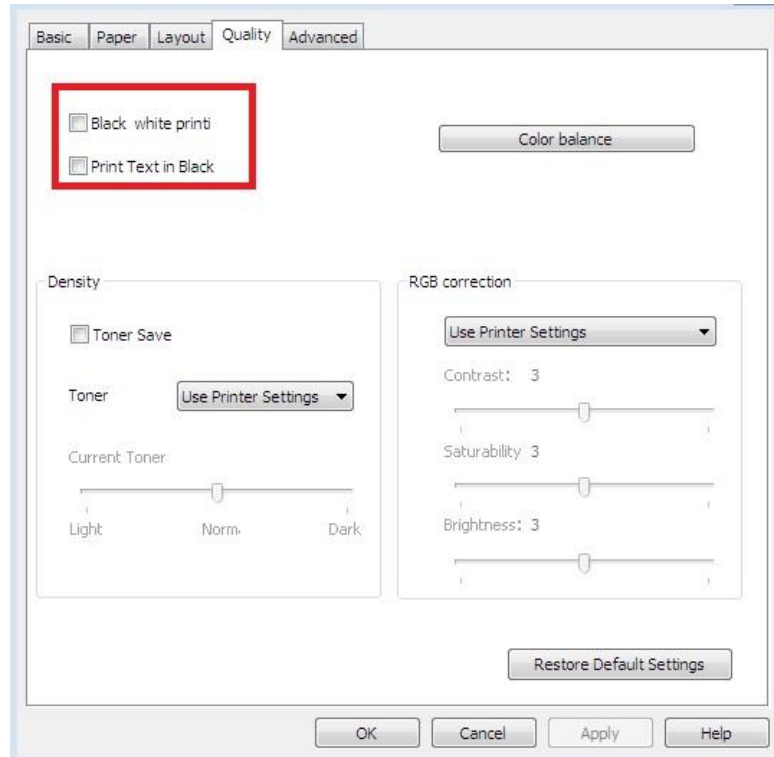


6. Click “OK”/“Apply” in the lower left corner to complete the print settings.
7. Click “Print” to achieve the print effect you want.


7.2.2.2. Color balance

Color balance is used to adjust the amount of toner used for each color. You can change it through the following steps as necessary.

1. Open the file to be printed, click the “File” menu in the upper left corner, and select “Print” to enable the print driver.
2. Select printer of the corresponding model.
3. Click “Printer Properties/Preferences” to configure printing.
4. Enter the “Quality” option interface. Click “Color Balance” .

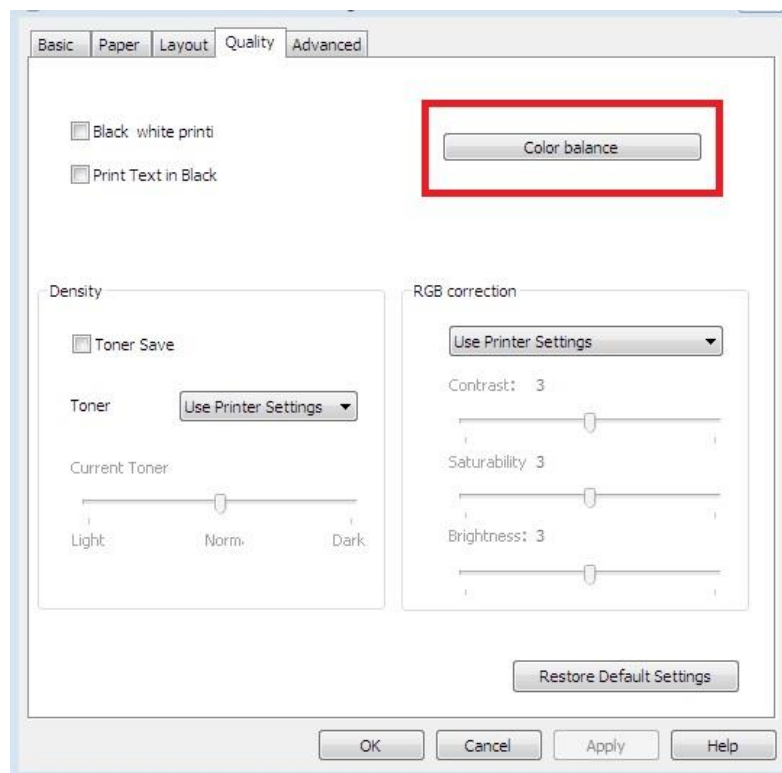

5. Select “Manual” among the options to adjust the parameters for the amount of toner for each color to be used in the printed document.

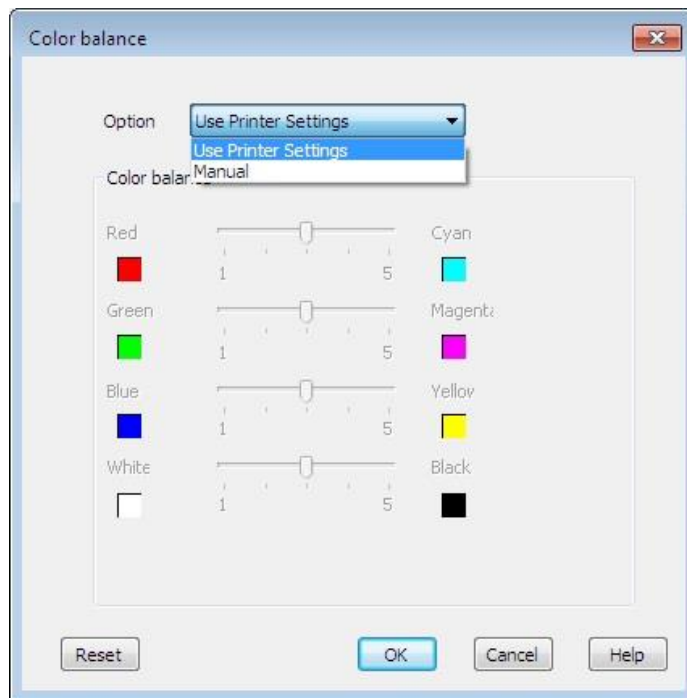


Note: • If you choose “Use Printer Settings”, the parameters in the color balance cannot be adjusted, and the settings specified in the printer are applied.

7.2.2.3. RGB correction

Adjust the contrast, saturability and brightness of the color output. You can change it through the following steps as necessary.

1. Open the file to be printed, click the “File” menu in the upper left corner, and select “Print” to enable the print driver.
2. Select printer of the corresponding model.
3. Click “Printer Properties/Preferences” to configure printing.
4. Enter the “Quality” option interface. In the “RGB Correction” option, select “Manual” to adjust “Brightness”, “Contrast” and “Saturability”.

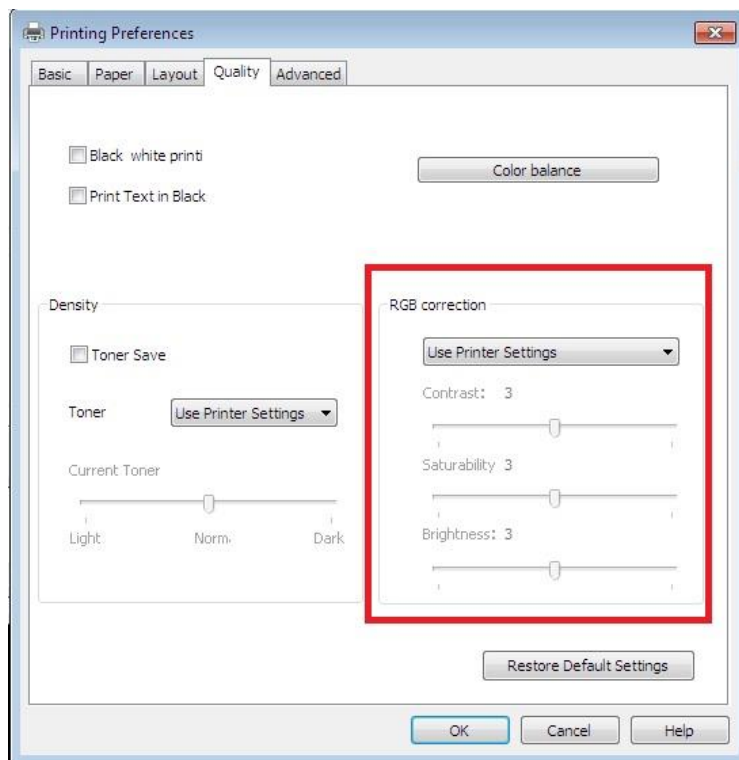

Note: • If you choose “Use Printer Settings”, you cannot adjust the contrast, saturability, and brightness, and the settings specified in the printer are applied.

7.2.3. Duplex

The printer supports duplex printing of plain paper. Paper size supported by the duplex printing: A4, Letter, Legal, Folio, Oficio.




Note: • Some paper media are not suitable for duplex printing, and trying duplex printing may result in damage to the printer.


- Duplex is not available for poster printing.
- Please refer to [Section 2](#) for loading paper and print media in the tray.

Setting steps:


1. Open the print job to be printed from the application (such as a Notepad).
2. Click the “File” menu in the upper left corner, and select “Print” to enable the print driver.

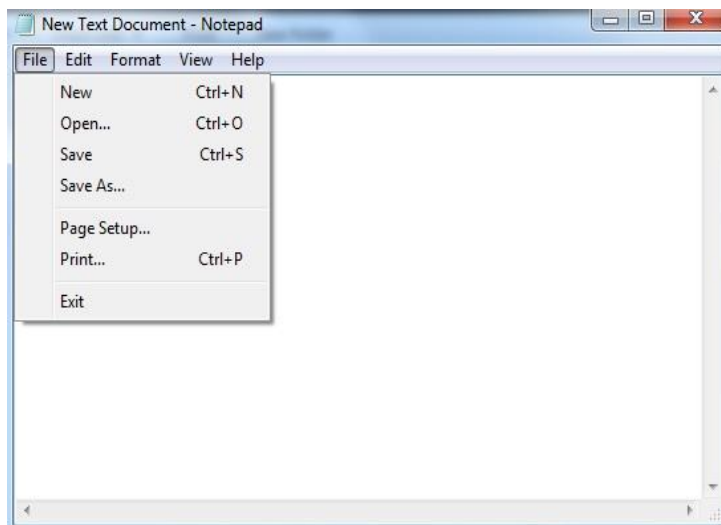


3. Select printer of the corresponding model.

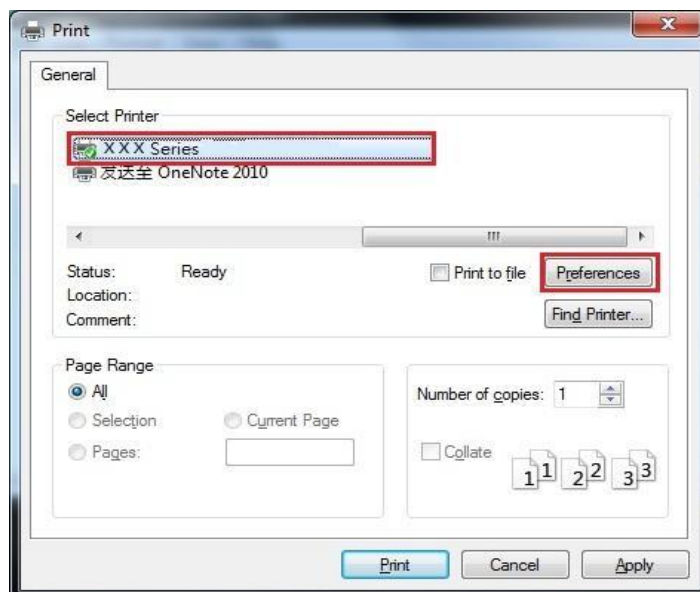

4. Single click “Preferences” for printing setup.
5. Select the “Duplex” in “Basic” tab and then select “Long Edge” or “Short Edge”.

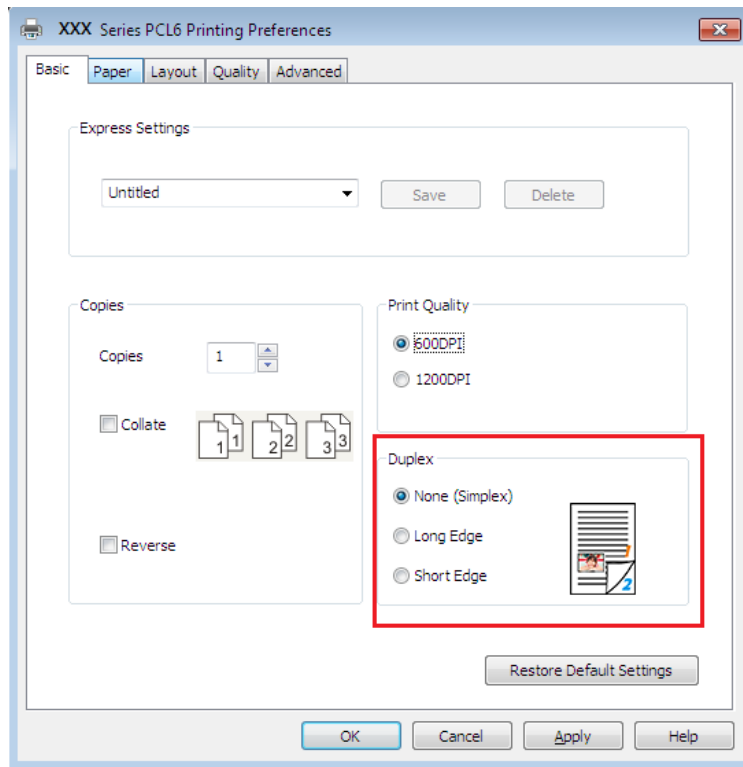

6. Single click “OK” to finish printing setup. Click “Print” to enable duplex printing.

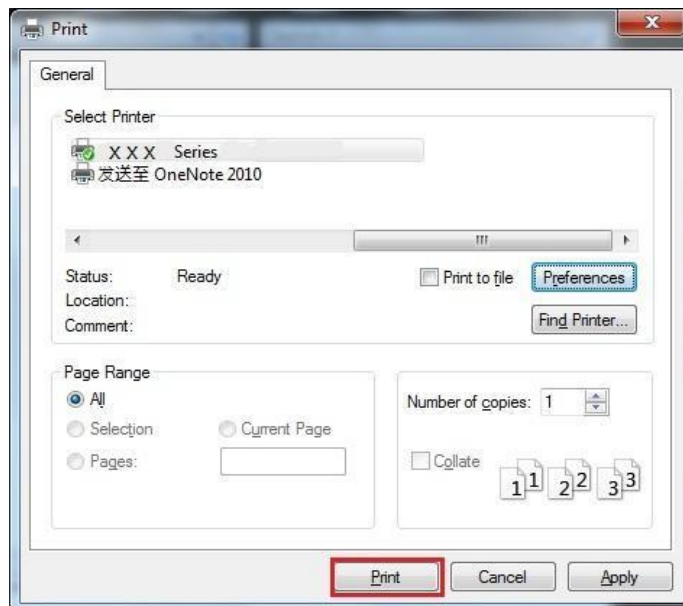

7.2.4. Booklet printing




- Note:**
- "Booklet" cannot be concurrently used with "Multipage" or "Zooming".
 - To enable the Booklet function, please also check "collated".
 - To start a Booklet, please select any of the following paper types: A4, Letter, Legal, Oficio or Folio.
 - Since Booklet always goes with duplex printing, when it is selected, "Duplex" will be checked automatically and cannot be unchecked.

Operating steps for booklet printing:

1. Open the file to be printed, click the "File" menu in the upper left corner, and select "Print" to enable the print driver.
2. Select printer of the corresponding model.
3. Click "Printer Properties/Preferences" to configure printing.
4. Enter the "Layout" option interface and select "Booklet".



- Note:**
- For other settings of booklet printing, click "Booklet Settings...", complete print settings in the "Booklet Settings" interface as needed, and then click "OK".

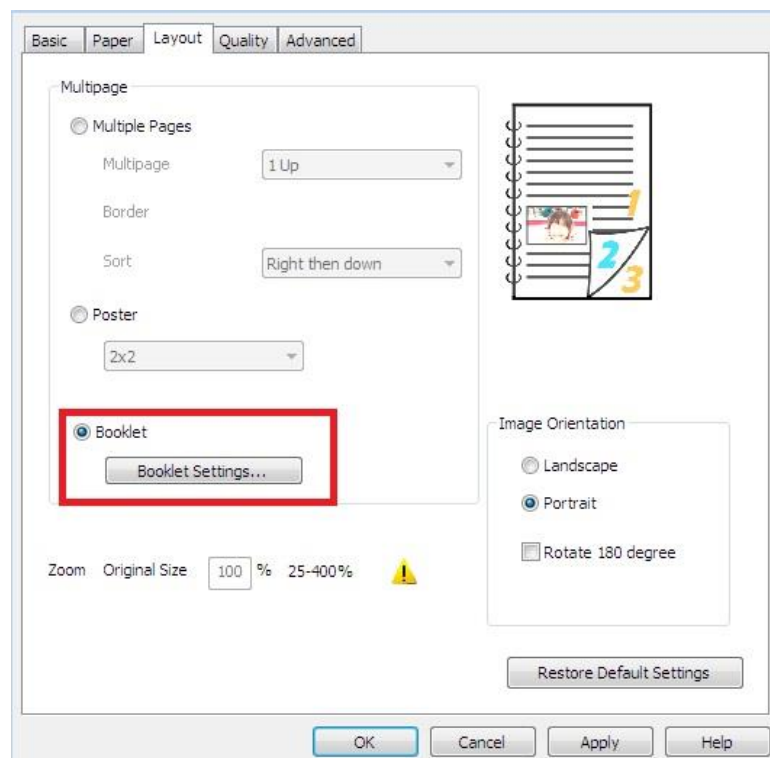

5. Click "OK"/"Apply" to finish printing setup. Click "Print" to print the booklet.



Note: • Documents will be re-paged after selecting booklet printing. It will print two pages on each side of the paper, and then fold out of it to form a book-like booklet.


7.2.5. Set transfer print parameters


If the printed image is mottled or blotchy-looking, you can try to adjust the transfer print parameters through Printer Setup.

The steps are as follows: (Suitable for printers installed via USB connection)

Windows 7 is taken as the example in the following operation. The information on your computer screen may differ because of multiple operating systems.

1. Enter the “Start menu” – “Control Panel” –view “Devices and Printers”.
2. Right click printer and select “Printer properties” in the pull-down menu.
3. Enter “Printer Setup” option.
4. Click “Other Settings” to adjust the transfer print parameters.


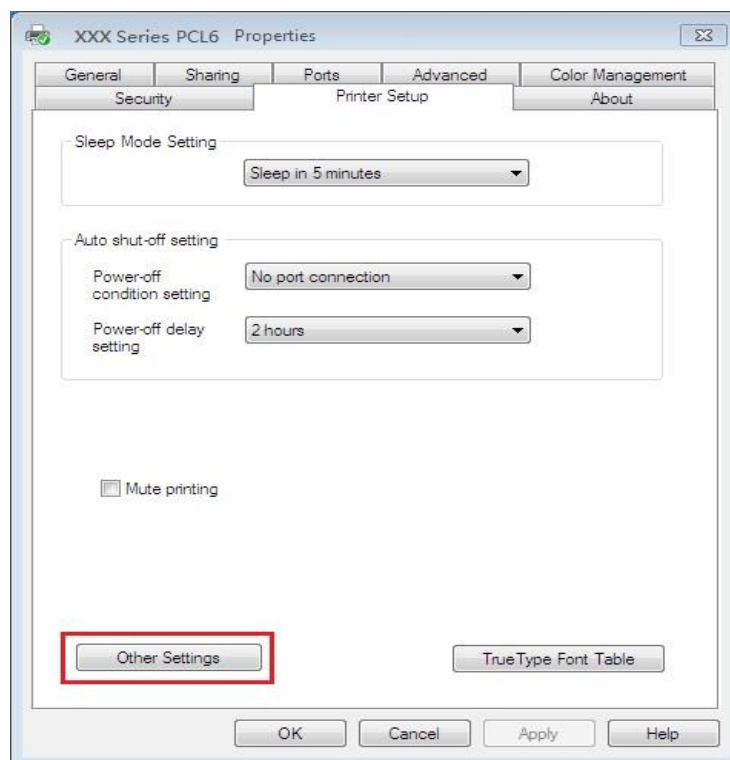


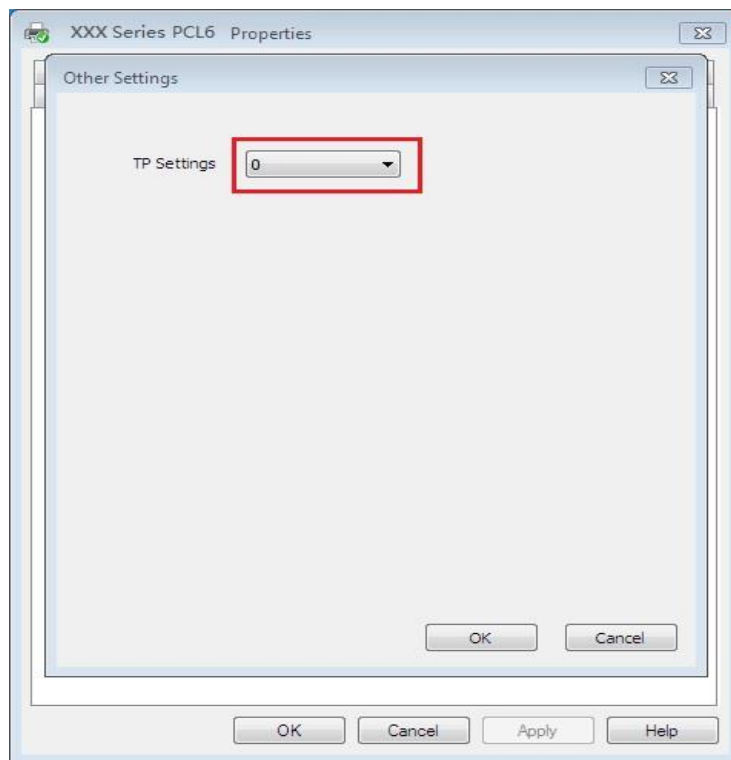

Note: • You can also set transfer print parameters through buttons on control panel.
Please see [Section 11.2.3](#).

7.2.6. Open Help Document

You can open the "Printing preferences" and click "Help" button (for Windows Operation System only). The help document contains the user guide where you can find the information on print settings.

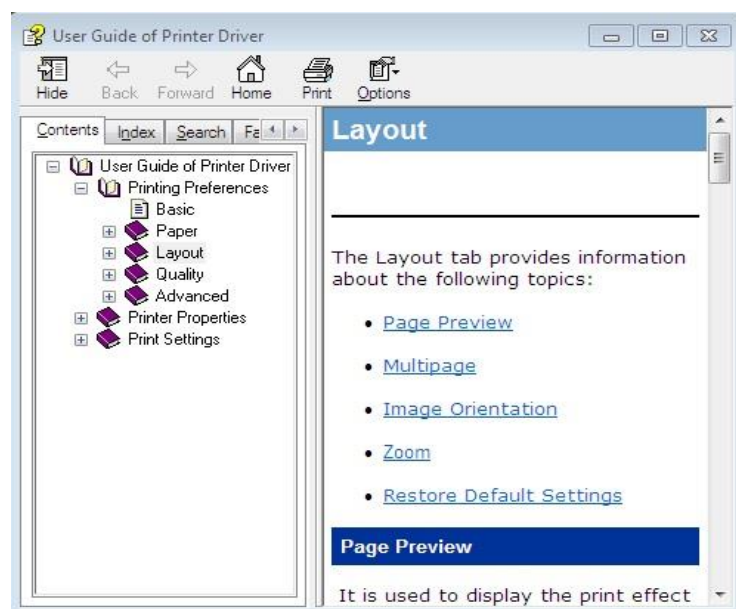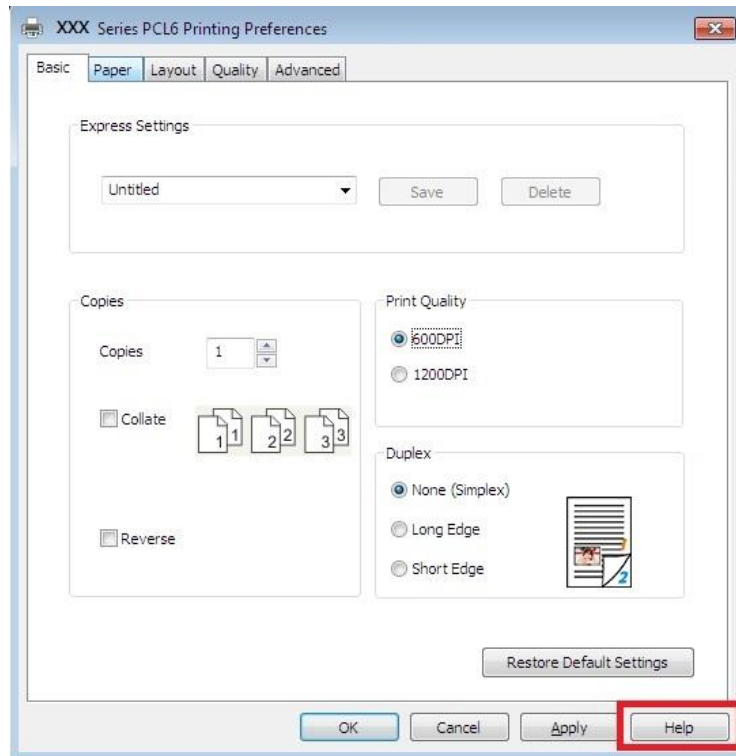

7.3. Printing Mode

The printer can print with auto feed tray and manual feed tray. The defaulted state is auto selection, and if there is printing medium in the manual feed box, papers in manual feed tray will be used with priority.

7.3.1. Printing with the Automatic Feeder Tray

Before printing, please make sure mediums of corresponding quantity have been installed inside the auto feed tray, and there is no printing medium in the manual feed tray.



Note: • For precautions on loading paper, see [Chapter 2](#) .

• For the type of media to be printed with the automatic feeder tray, see [Chapter 2.2](#) .

7.3.2. Printing with manual feed tray

When you put paper into the manual tray, the printer will automatically print with the paper in the manual tray first.



Note:

- Only one sheet can be loaded into the manual tray at a time.
- Please refer to [Chapter 2](#) for putting papers inside manual feed tray.
- Please refer to [Chapter 2.2](#) for type of mediums that can be printed via manual feed tray.

7.4. Cancel printing

If you want to cancel the job during printing, please press “Cancel” button on the control panel.

8. Copying

8.1. Copying function

Copying function		Instructions
Common copying	Copy source	Set the paper size of the originals.
	Copy To	Set the paper size and type of the specified tray.
	Resizing	Reduce or enlarge the size of image copied.
	Intensity	Adjust deep-light copying effect by setting intensity.
	Duplex copying	It supports manual duplex copying for originals.
	Color	It is used for color or monochrome copying.
	Image quality	Set the definition mode to improve the copying effect.
	Multipage	Print a multi-page document to a piece of paper.
	Clone	Print several identical images to a piece of paper.
	Poster	Print a one-page original to pieces of paper.
	Collated copy	Collate copies of an original.
ID copy	Arrangement mode	Set the Layout for Copying ID Card
	Paper Size	Set the paper size.
	Intensity	Adjust deep-light copying effect by setting intensity.
	Color	It is used for color or monochrome copying.
Receipt copying	Paper Size	Set the paper size.
	Intensity	Adjust deep-light copying effect by setting intensity.
	Color	It is used for color or monochrome copying.

8.2. Copying method

1. Click “Copy” button/“ID copy” button/“Bill copy” button in control panel.
2. Put an original into the ADF with its front upward (only for plain copying) or on the glass platen with its front downward. (For how to put an original, please see [Chapter 2.5](#)).
3. Click “Copy” button to copy.

8.3. Common copying setting

Change related setting through setting menu for better copy result.

1. Select “Copy” button in printer control panel;
2. Determine copy setting, click “Copy” button to copy.



Note: • Luminosity. Once the option is set,, it will remain effective until it is changed.

- Image Quality, Zoom, N-in-1, Clone, Poster, Collate and Duplex Copy settings. When the copying is finished, switch by pressing the button on the panel, or restart the printer, the settings will restore to default.

8.3.1. Image quality

Select corresponding image quality mode for original document used in order to improve copying effect.

There are 4 modes in total:

Auto: default mode, applicable to text and image originals.

Text + image: applicable to originals with mixed text and image.

Image: applicable to original image.

Text: applicable to original text.



Note: • If the setting is “Poster”, the Image Quality mode only supports automatic adjustment.

8.3.2. Intensity

Adjust deep-light copying effect by setting intensity.

8.3.3. Resizing

Through zoom setting, the image to be copied can be zoomed by 25%~400% of the original document size.

You can press “+” or “-” in the “Zoom” region to decrease or increase the value by 5% per step.



Note: • When the original is in the ADF, manual zooming is not allowed.


8.3.4. Multipage

With setting on all-in-one feature, a 2- or 4-page document could be copied to one piece of paper.

Copying with the ADF and the glass platen are both supported.

The multipage includes 3 modes:

(1) Two-in-one:

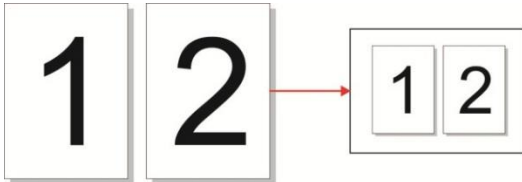

(2) Horizontal four-in-one:



(3) vertical four-in-one:






Note: • "Multipage" and "resizing function" cannot be set at the same time.

8.3.5. Clone

Through setting on clone feature, you may print multiple original images on one piece of paper.

Copying with the ADF and the glass platen are both supported.

The clone copying includes 3 modes:

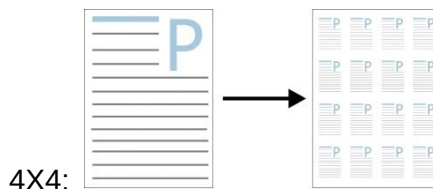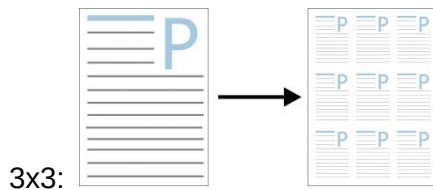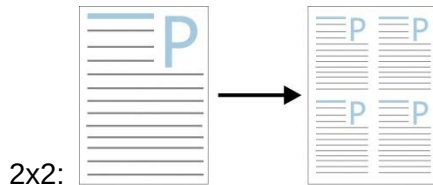

Note: • The “clone” and “resizing function” cannot be set at the same time.

8.3.6. Poster

Poster setting enables the printing of one piece of original document on several pieces of paper.

The "Poster" feature supports only copying with the glass platen.

There are 2 poster copy modes:




Note: • The “poster” and “resizing function” cannot be set at the same time.

8.3.7. Collated copy

The "Collated Copies" feature supports only copying with the automatic document feeder (ADF).





The collated copy includes 2 modes:

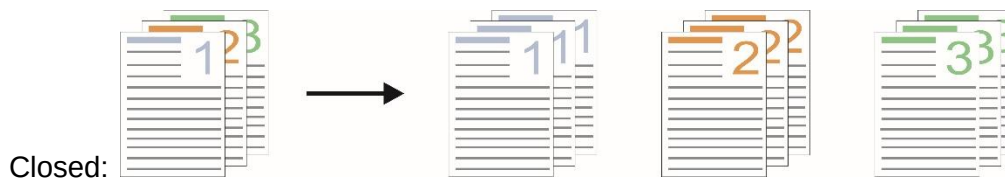

8.3.8. Duplex copying

You may use the glass platen or the ADF for duplex copying. The followings are examples of copying with the ADF.


There are 4 modes in total for duplex copying:

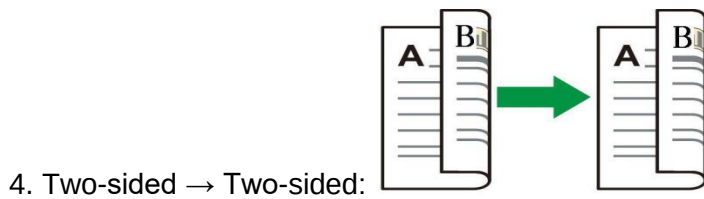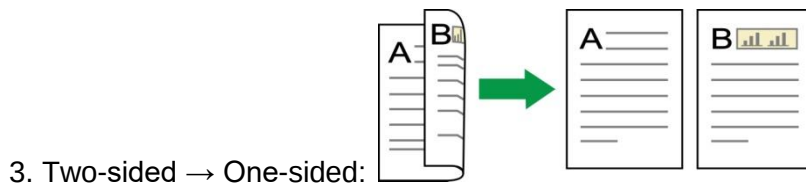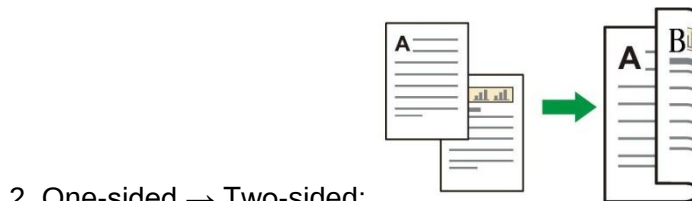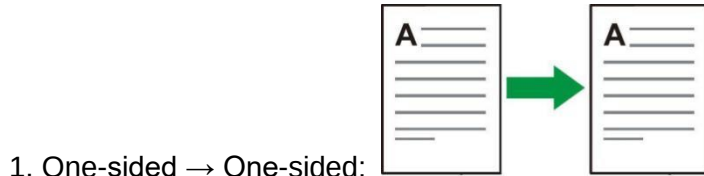

8.3.8.1. Steps to use Manual Duplex Original Copying

Manual Duplex printing steps are as follows. Take “Duplex→Duplex” mode as example.

1. Put an original into the ADF with its front upward and its top fed first; meanwhile, make sure there are some paper in the carton.

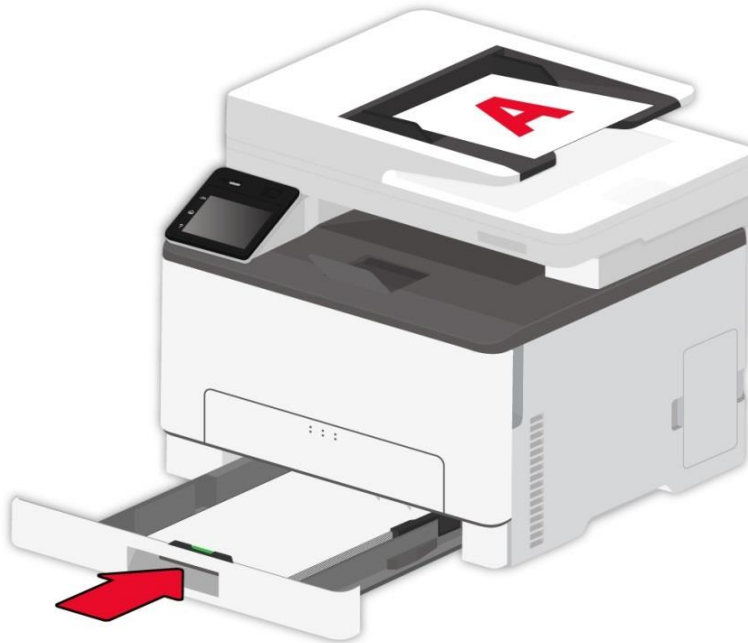

2. Follow the steps set forth in [Chapter 8.3](#) Select “Duplex→Duplex” printing mode, click “√” and save the settings.

3. Click “Copy” button to copy.

4. Paper exited should be with the direction as shown in the figure:



5. After completion of copying one side, put the paper into the entrance as shown in figure (without turnover or rotation).



Note: • If the turnover prompt on panel times out, the machine will execute one-sided copying automatically.



6. Press “Start” to copy the second side.


8.4. ID copy settings

Change related setting through setting menu for better copy result.


1. Select “ID Copy” button in printer control panel;
2. Determine copy setting, click “Copy” button to copy.

8.4.1. Arrangement mode


ID copy supports four layouts:

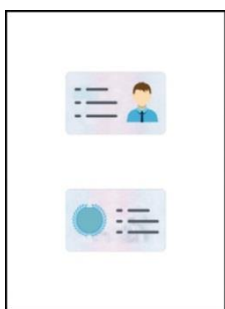


Whole page up-down

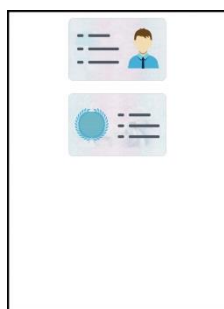

Half page up-down

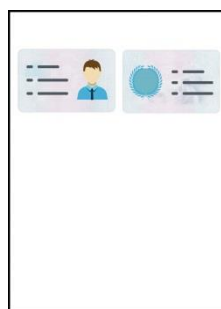

Half page left-right

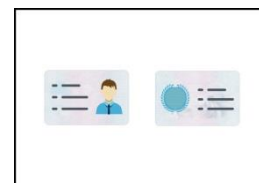


A5 left and right

Position:

Half page up-down: default mode; put ID card at “orange left half area” of glass platform.

Half-page up and down, half-page left and right or A5 left and right: put the ID card in the "blue area" in glass platen.

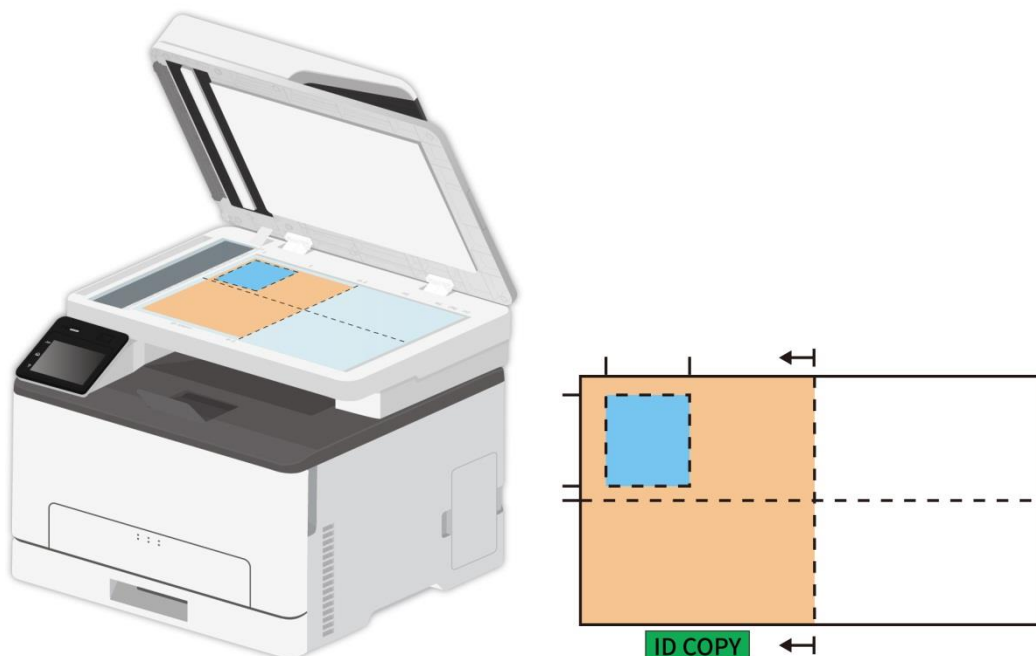

 **Note:** • After setting, the arrangement mode can keep valid before startup; after startup, the arrangement mode will recover to default setting.

8.4.2. Intensity

Adjust deep-light copying effect by setting intensity.

8.4.3. Paper Size

If arranged in modes of "Full Page Up and down", "Half-page Up and down" and "Half-page Left and right", the paper size supports "A4" and "Letter" only; if arranged in mode of "A5 Long Edge", the paper size supports "A5" only. Please follow instructions on panel to put the paper vertically for printing.

8.5. Receipt setting

Change related setting through setting menu for better copy result.

1. Select “Bill copy” button in printer control panel;
2. Determine copy setting, click “Copy” button to copy.

8.5.1. Intensity

Adjust deep-light copying effect by setting intensity.

8.5.2. Paper dimension

The receipt copying supports A4, Letter, B5, A5, A6 and Executive paper dimension.

8.6. Copying cancel

To cancel copying, press “Cancel” on the control panel of the printer to cancel the current operation.

9. Scan

This printer provides two types of scan: "Push Scan", which means scanning through the printer's Control Panel operations; "Pull Scan" which means scanning through PC terminal scanning the application. Before scanning, please be sure a printer driver has been installed in the computer.

9.1. Scanning mode

9.1.1. Windows system scan

You may scan with the scanning application in PC via USB, wired or wireless connection. Please be sure the printer has been properly connected before scanning.


9.1.1.1. Pantum Scan Application

Operation Steps:

1. Double click on "Pantum Scan Application" on the computer, the icon is shown as below:



2. The prompt window is shown as below:

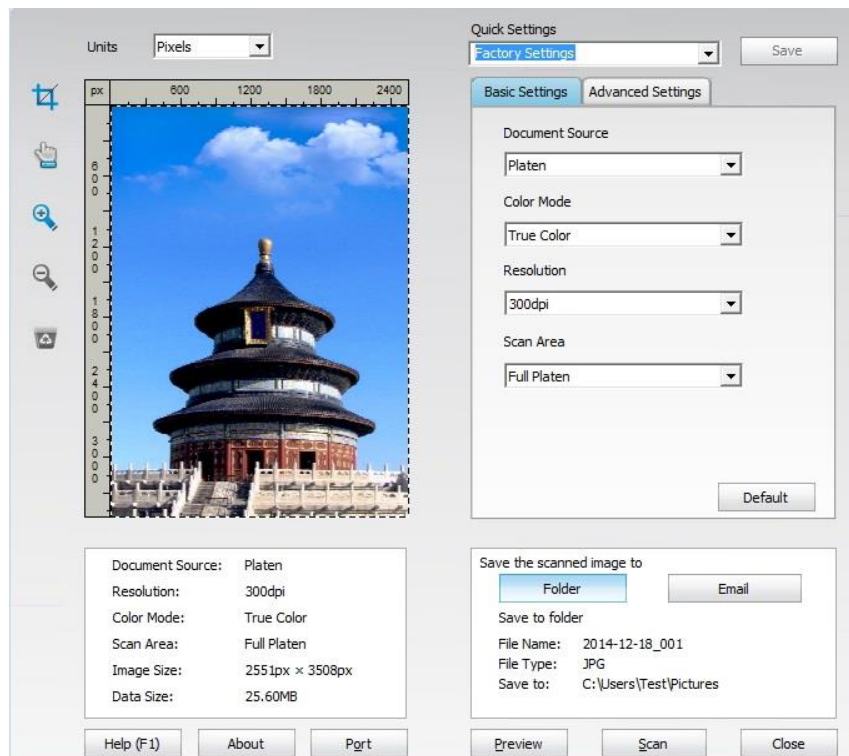

3. Set Scan in the right list. Click "Scan" on the bottom right corner and start scan.

 **Note:**• Images scanned by Pantum scanning application software support six file types: BMP, JPG, TIF, PDF, PNG and OFD.

- You may click "Help (F1)" to open the help document of the scanning application to learn more scanning setting information.


his product complies with the TWAIN and Windows Image Application (WIA) standard. If using the application which supports TWAIN and WIA standard, users can use the scan function and directly scan the images to the open application. The handbook requires Office Software (Word and Excel) and Photoshop ,for example, to show the operation.

9.1.1.2. TWAIN Scan Driver


9.1.1.2.1. Office Software (Word and Excel)

Operation Steps:


1. Open the Office software (Word or Excel).
2. Keyboard shortcuts: Alt+I+P+S to open the application's window.

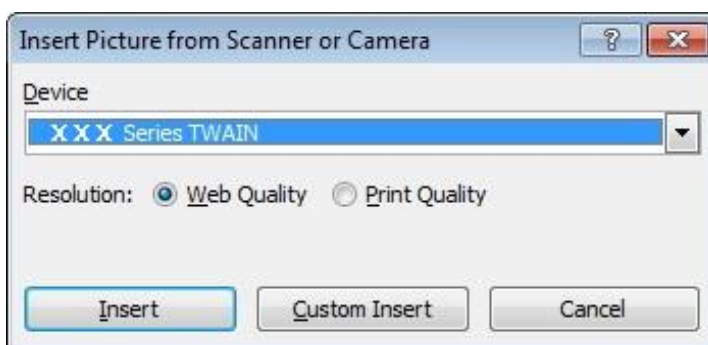


3. Click on "Device" option and select TWAIN Scan, click the "Custom Insert" button below.

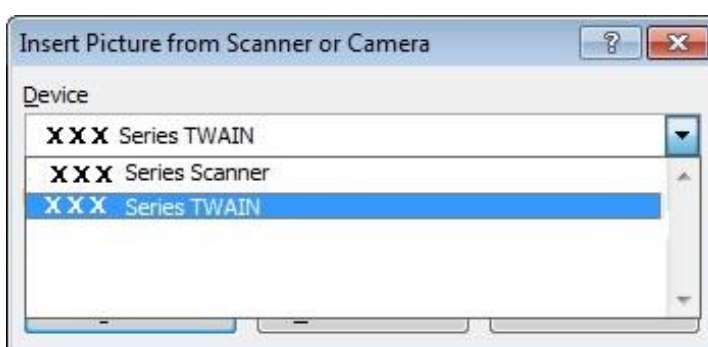

4. After the window pops up, set the scan information in the right list of "Basic Setting" and "Advanced Setting". Click on "Scan" and start scan.

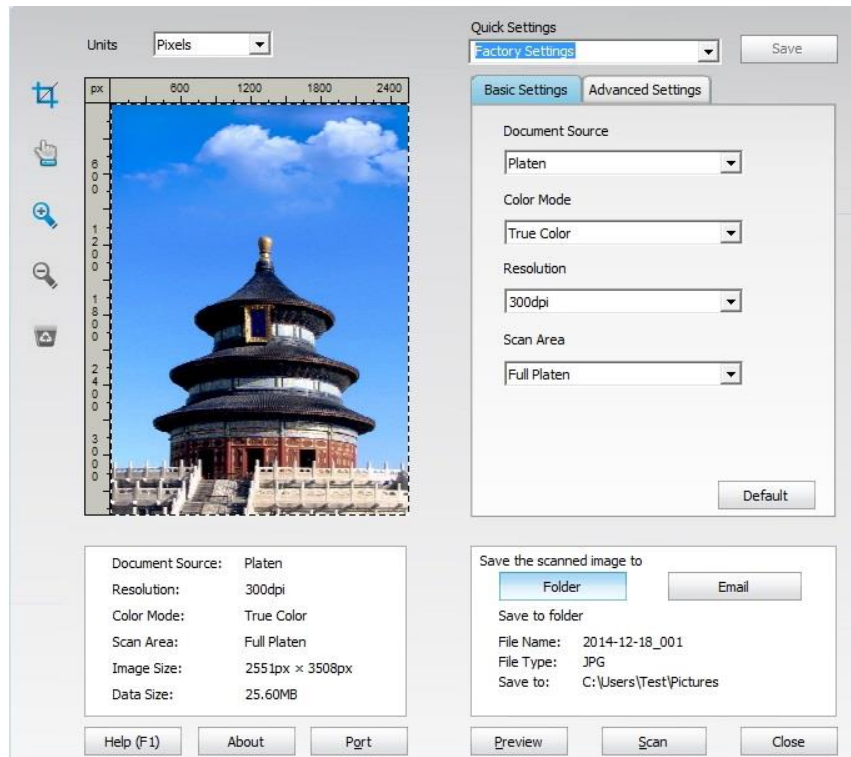


If you desire to change a scanning port, please click "Port" at the lower part of above picture to select a scanning port, as shown below:

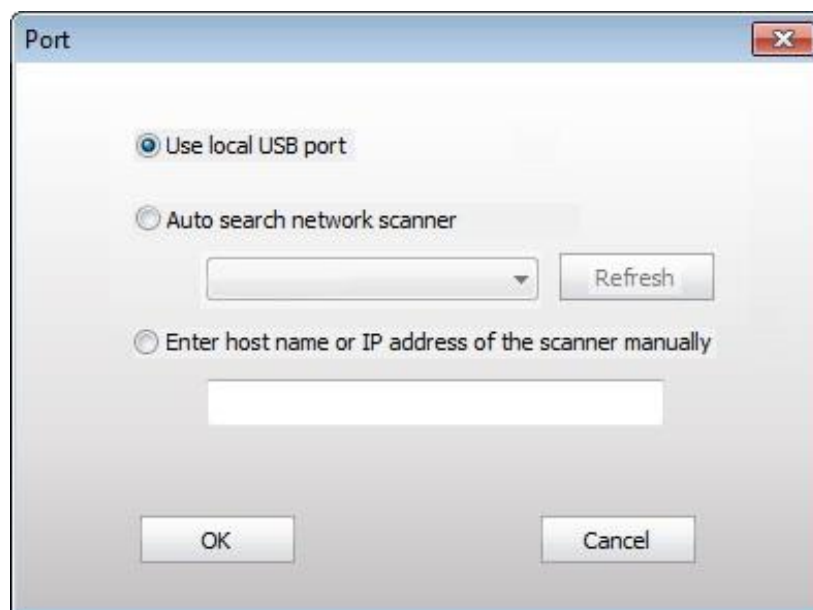

9.1.1.2.2. Photoshop

Operation Steps:

1. Launch Photoshop, click on "File" – "Import" on the top left corner and select TWAIN Scan, as is shown below:

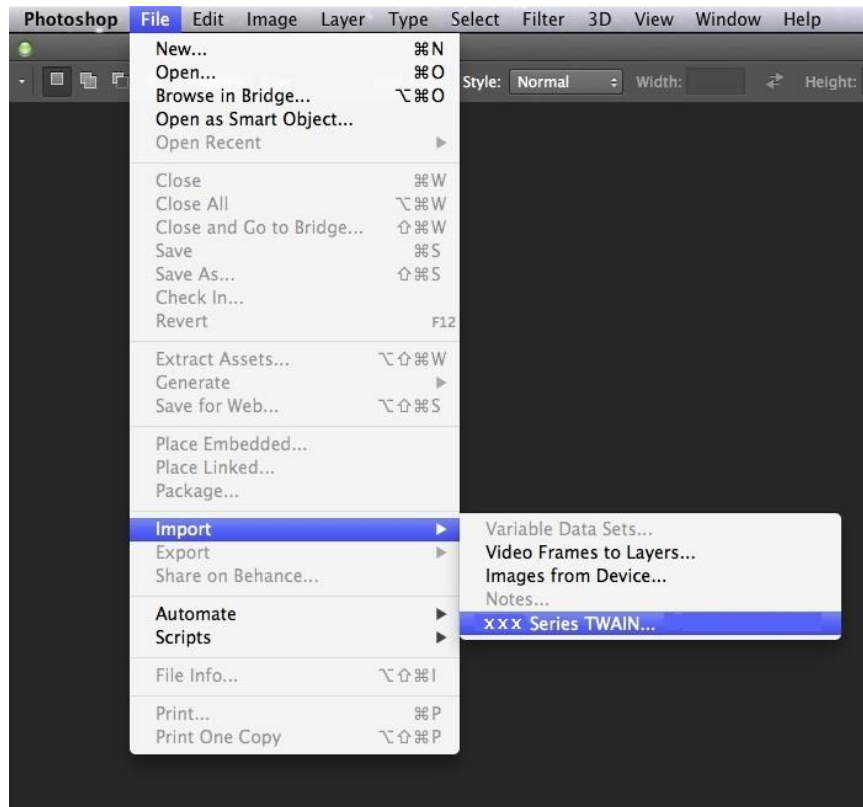

2. After the window pops up, please refer to Step 4 of [9.1.1.2.1](#) to see the specific operation steps.

9.1.1.3. WIA Scan Driver


9.1.1.3.1. WIA1.0 Scan (Windows XP / Windows Server 2003)

1. Office Software (Word and Excel)


Operation Steps:

- 1) Open the Office software (Word or Excel).


2) Keyboard shortcuts: Alt+I+P+S to open the application's window.

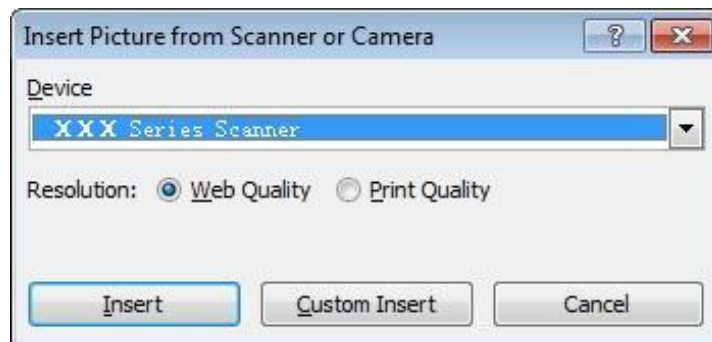


3) Click on "Device" and select WIA Scan,click the "Custom Insert" below.

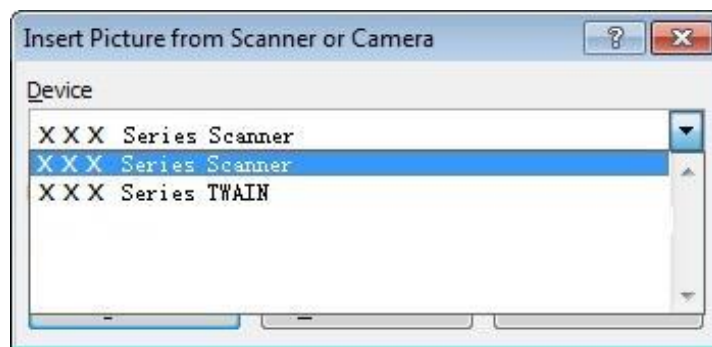

4) The prompt window as is shown below, set the scan information.

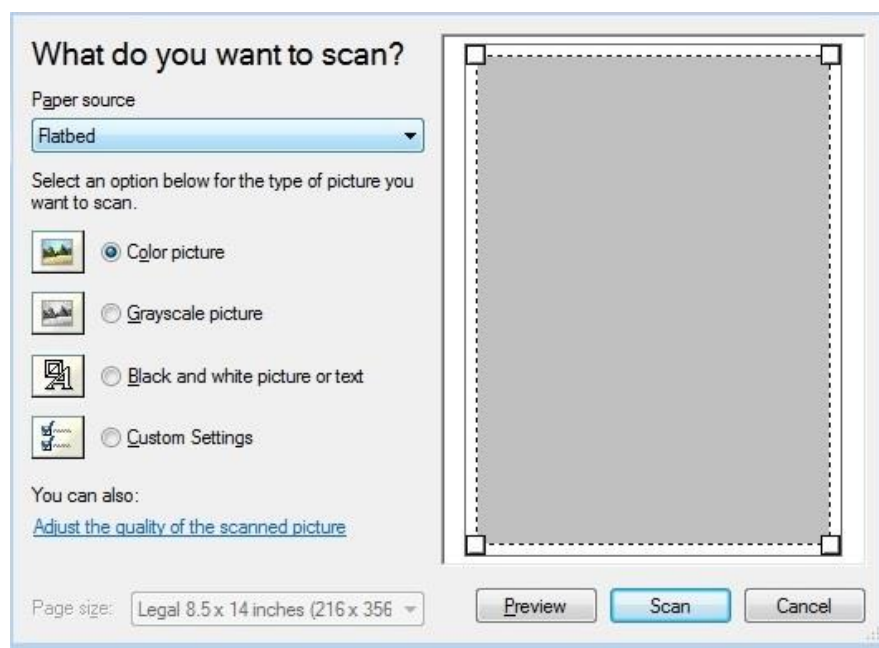


5) Click on "Adjust the Scanned Image Quality" on the bottom left corner of the above picture, the advanced properties interface will pop up, then users can set the scan; After finishing the settings, click on the "OK" button, then "Scan" button to start scan.

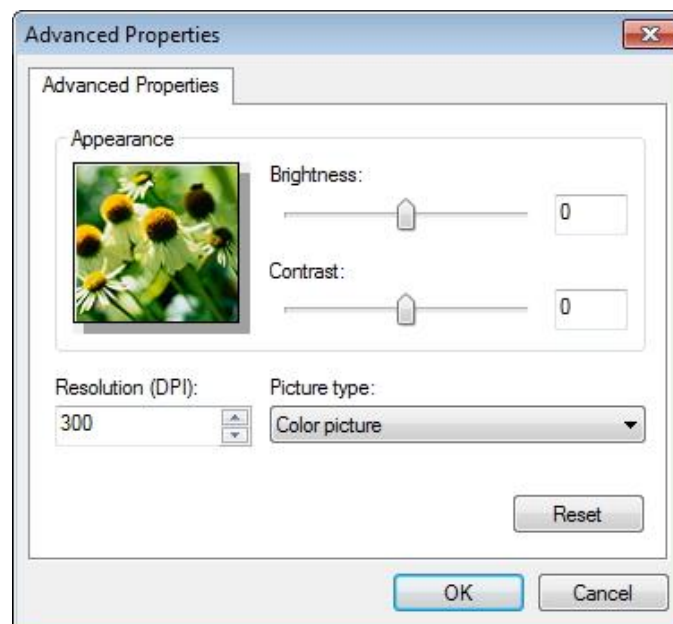

2. Photoshop

Operation Steps:

1) Launch Photoshop, click "File"- "Import" on the top left corner and select WIA Scan, as is shown below:

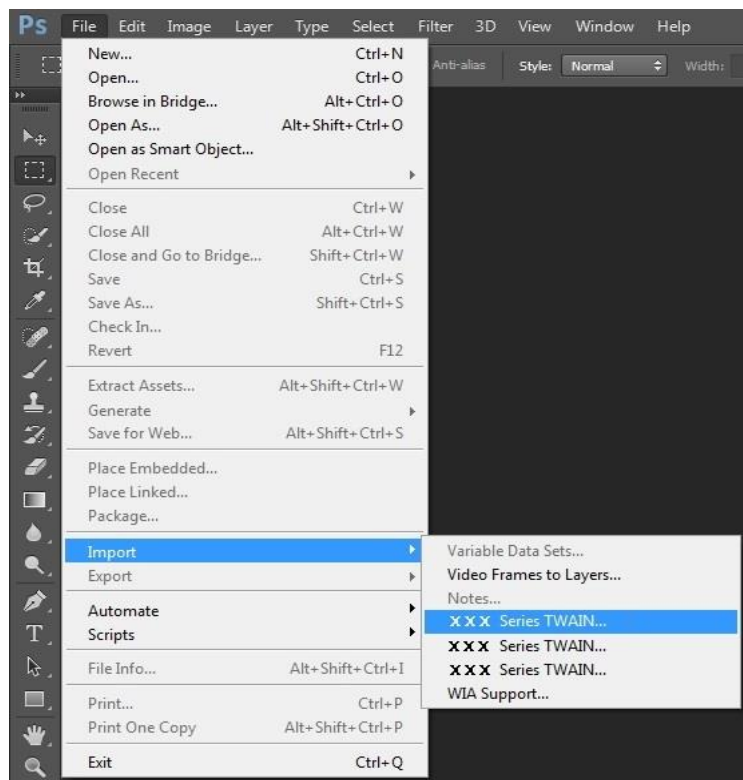


2) After the window pops up, please refer to Step 4 and Step 5 of [9.1.1.3.1](#) to see the specific operation steps.


9.1.1.3.2. WIA 2.0 Scan (Windows Vista / Windows Server 2008 and later versions)

Operation Steps:


1. Click on "Start"- "All Programs"- "Device and Printer" on the left bottom of the desktop.

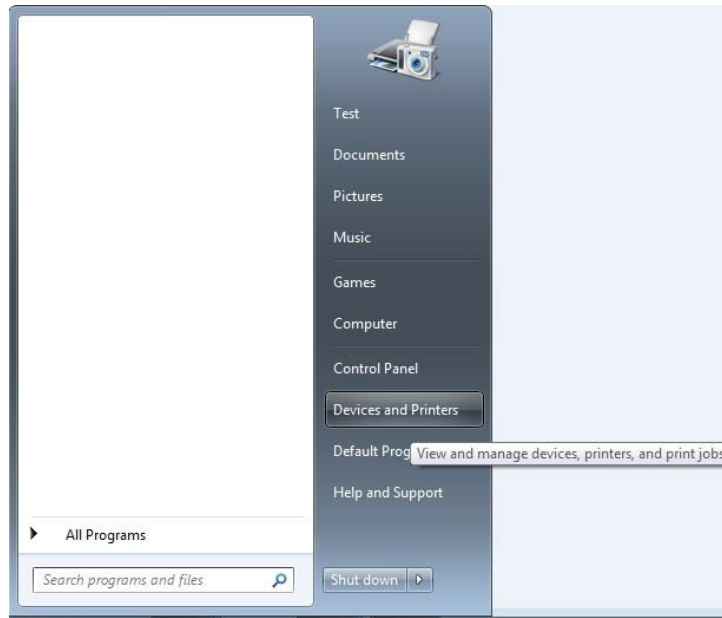


2. When the pop-up window appears, select the printer you want to use, and right click the mouse.

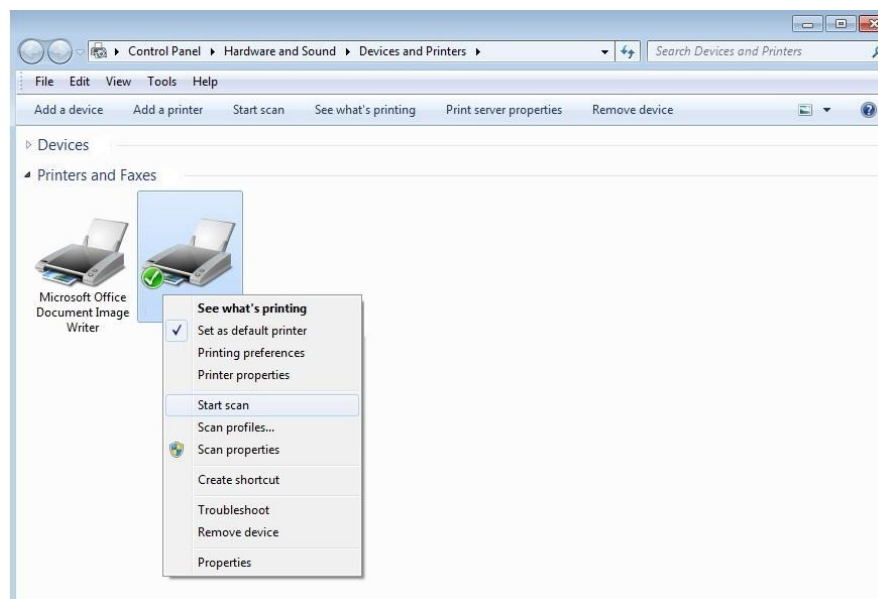

3. Click on "Start Scan" in the above option bar.

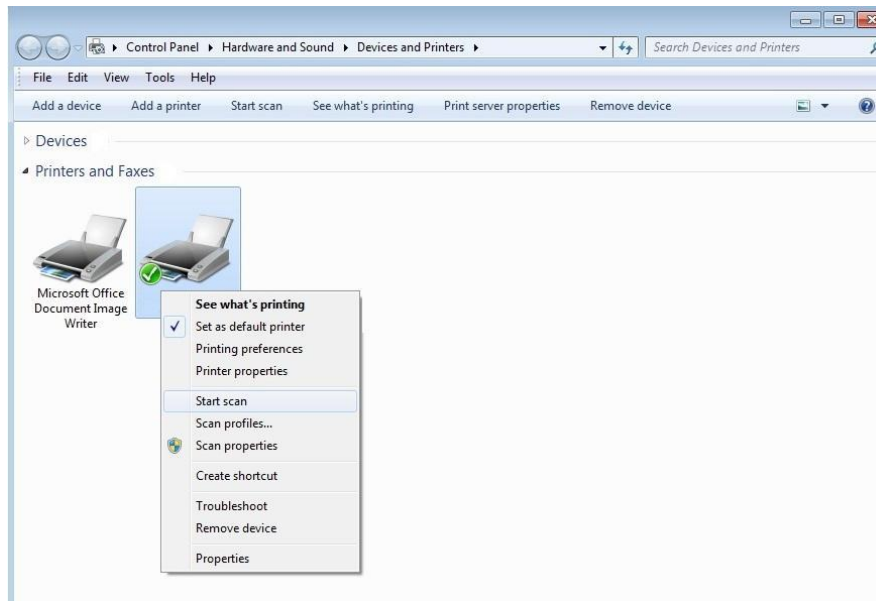

4. After the window pops up, set the scan and click "Scan" on the bottom right corner and start scan.

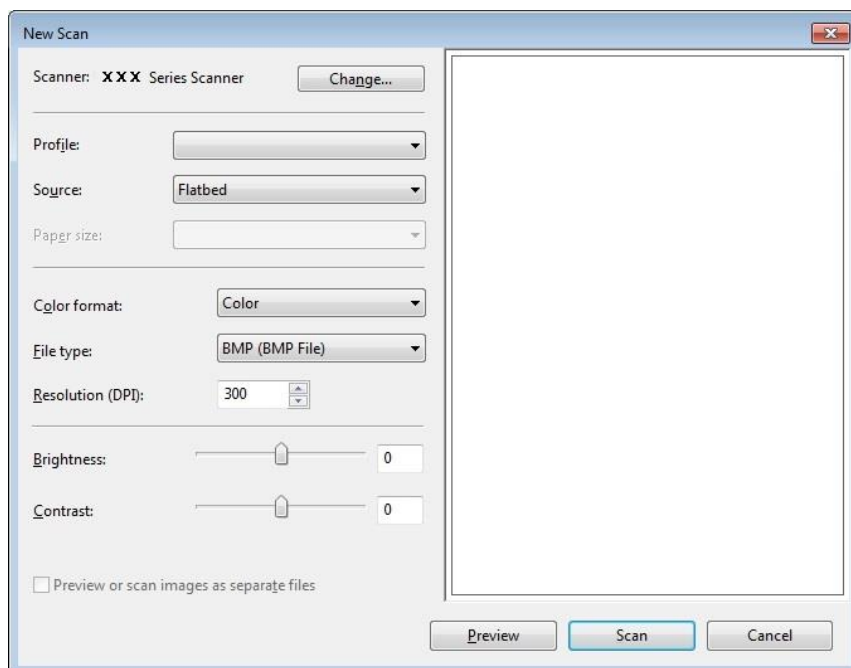

9.1.2. macOS System Scan

9.1.2.1. ICA Scan


9.1.2.1.1. Open ICA via "Print and Scan"

Operation Steps:


1. After installing the printer driver, click "System Preferences" icon on the bottom left corner of the computer desktop.




2. After the window pops up, click on "Print and Scan".

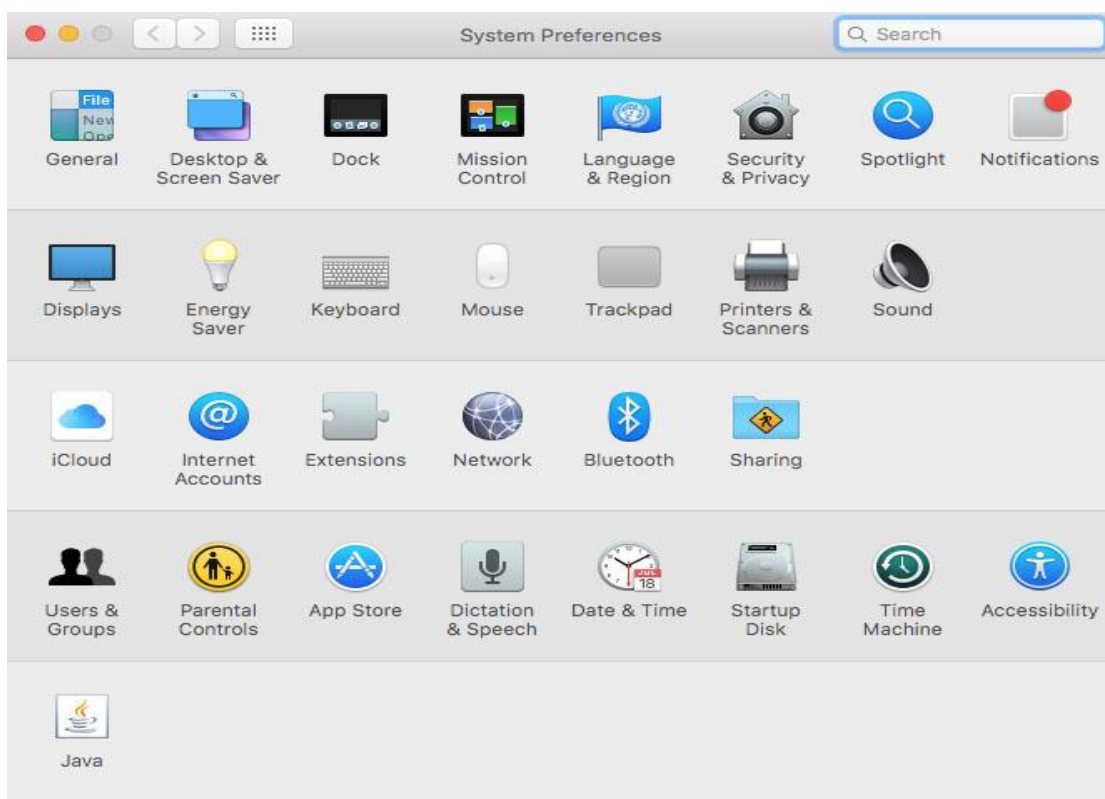


3. After the window pops up, click on "Scan".

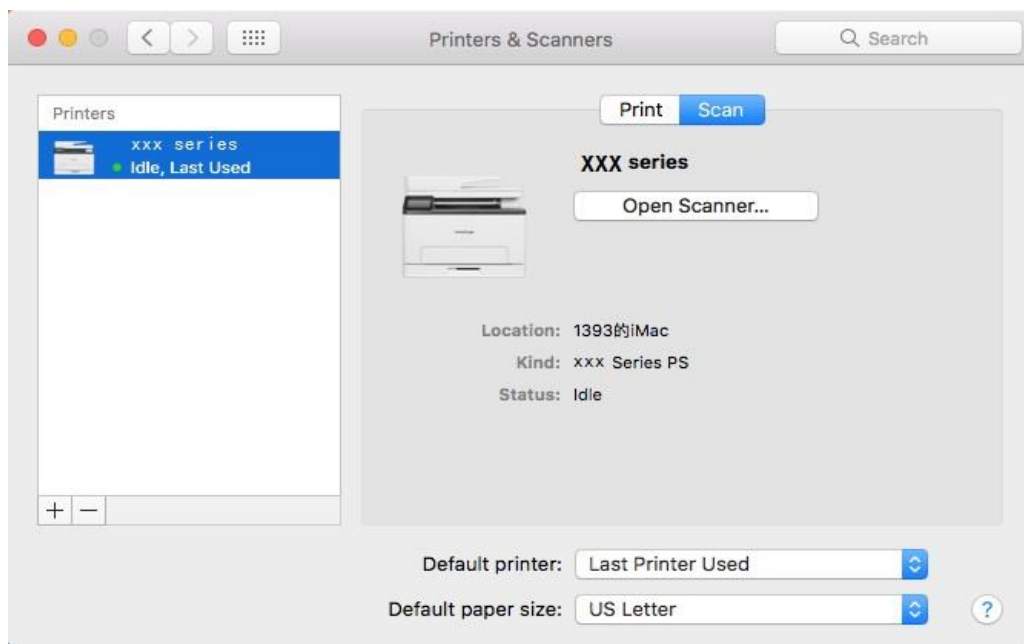

4. Click on "Open Scanner" and the scan window will pop up.

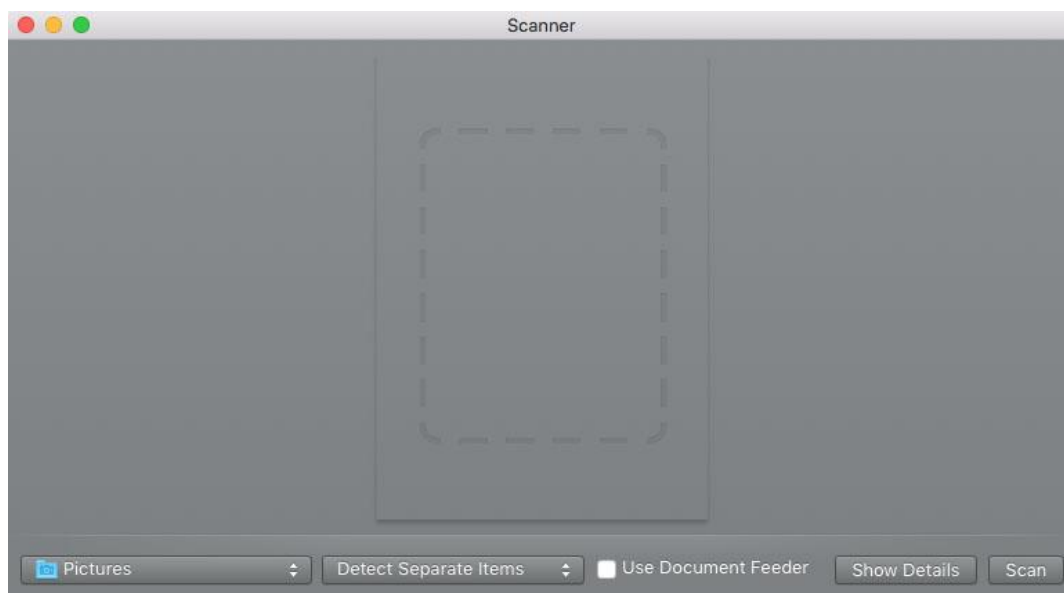

5. Click on "Show Details" on the bottom right corner to set the scan parameters.

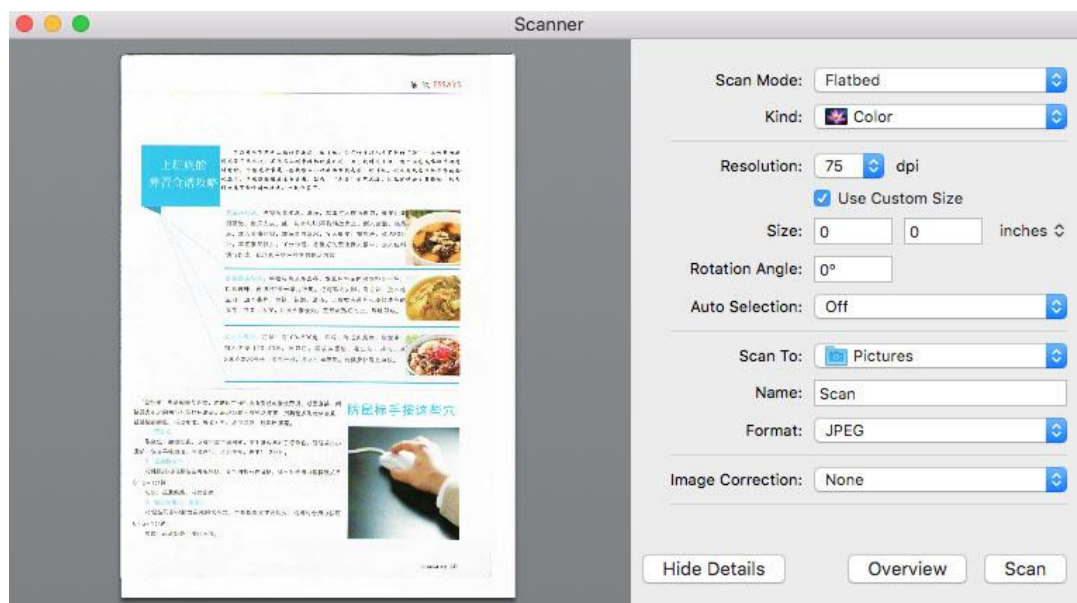

6. Click on "Scan" on the bottom right corner and start scan.

9.1.2.1.2. Call CIA through applications

Operation Steps:

1. Click on "Finder" icon on the bottom left corner of the computer desktop, or use keyboard shortcuts command+shift+C to open the window. Find "Image Capture" in "Applications" (or conduct keyboard shortcuts command+shift+A to directly switch to "Applications") and click to launch the application.



2. After selecting the printer in the left list, set the scan parameters in the right list. Click on "Scan" on the bottom right corner and start scan.




9.1.2.2. TWAIN Scan

Take Photoshop as an example.

Operation Steps:

1. Launch Photoshop, click on "File" – "Import" on the top left corner and select TWAIN Scan, as is shown below:

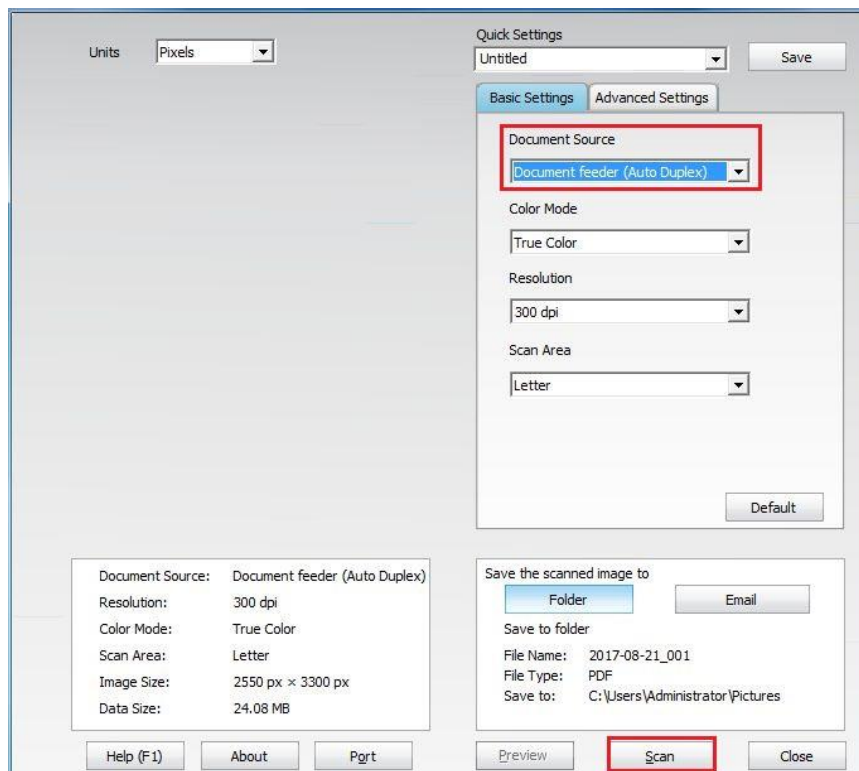

2. After the window pops up, please refer to Step 4 of [9.1.1.2.1](#) to see the specific operation steps.

9.1.3. Push Scan

This section is mainly to introduce how to scan files to PC, E-mail, FTP and USB with the printer's control panel.



Note: • Files supported in scanning into the PC/Email/FTP/USB flash disk: PDF, TIFF, and JPEG.

9.1.3.1. Scan to PC

You may operate the printer's control panel to scan a file to PC. (Only support connection method of USB connection line.)

1. Be sure the printer and the computer are both switched on and connected with each other properly.
2. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
3. Click “Scan-Scan to PC” in printer control panel.
4. Select proper scan setting, click “Scan” button to make a scan.

9.1.3.2. Scan to E-mail

You can scan the file as an attachment into the email application. The steps are as follows:

1. Make sure that the printer and computer have been turned on and connected to the same network.
2. Please see [Chapter 6.2.3.1](#) to configure the SMTP Client.
3. Please see [Chapter 6.2.3.2](#) to configure the e-mail address book.
4. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
5. Click “Scan-Scan to Email” in printer control panel.
6. Select proper scan setting, click “Scan” button to make a scan.

Please follow these instructions on the settings for group emails:

Set the group name for group e-mail sending by webpage, and set the members, i.e. the receivers, in the group of group email. After finishing scanning, firmware will send the scanned documents to the mail server. Then mail server sends the documents to every member of the group

9.1.3.3. Scan to FTP

Be sure the user is in an Internet-connected environment in scanning files to FTP server. If you want to scan large files, you may need to input the server address, user name and password to log in the server, with specific operation steps as below:

1. Make sure that the printer and computer have been turned on and connected to the same network.
2. Please see [Chapter 6.2.3.3](#) to configure the FTP address book.
3. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
4. Click “Scan-Scan to FTP” in printer control panel.
5. Select proper scan setting, click “Scan” button to make a scan.

9.1.3.4. Scan USB drive

This printer supports scanning files to USB without a computer. Before operation, please make sure the USB has enough storage space. The specific operation steps are as follow:

1. Insert the USB into the printer's front USB interface.



2. Put an original on the glass platen or into the ADF (please see [Chapter 2.5](#) for how to put an original).
3. Click “Scan-Scan USB” in printer control panel.
4. Select proper scan setting, click “Scan” button to make a scan.

A “PantumScan” folder will be created in the USB flash disk. The scanned file will be saved in the PDF, TIFF or JPEG format.



Note: • USB formats supported: FAT and FAT32 for Windows system and MS-DOS (FAT) for macOS system.

9.2. Scan

9.2.1. Manual duplex scan

9.2.1.1. Duplex scanning in Windows system


This printer supports ADF manual duplex scanning. Take Pantum scanning application software as an example:

1. Put an original into the ADF with its front upward and its top fed first; meanwhile, make sure there are some paper in the carton.



2. Call up "Pantum Scanning Application Software" (see [9.1.1](#)).

3. Select “Document Feeder” under “Document Source” on the right in the pop-up scan setting window, and check “Manual Duplex”.

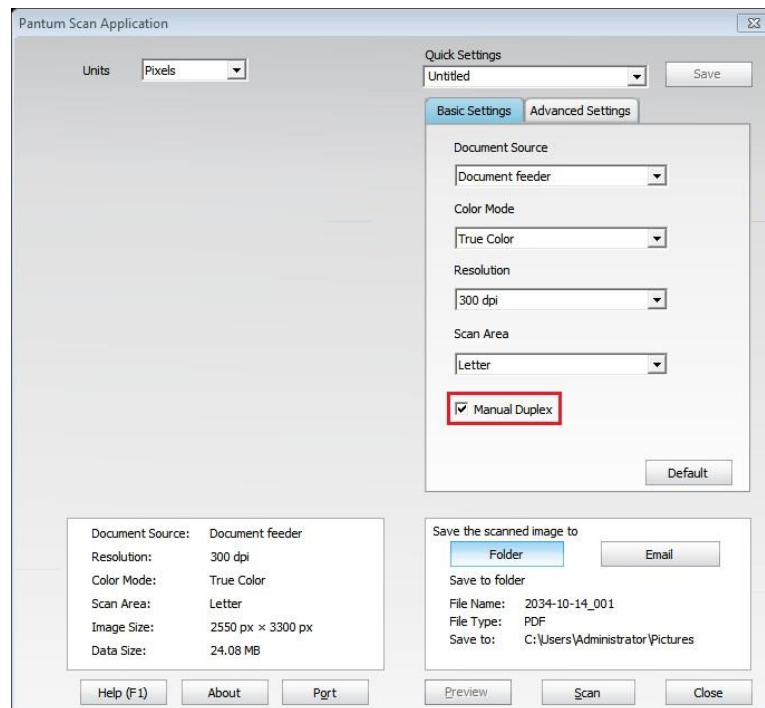

4. After scan setting, press “Scan” in the lower right corner to start scanning.

5. Paper exited should be with the direction as shown in the figure:



6. After scanning the first side, put paper into the inlet as indicated in the figure (no need to flip or rotate).



Note: • If there is a prompt of waiting timeout when pages are turned on the panel, a single-page image will be automatically generated.



7. Press “Start” to scan the second side.



Note: • This machine also supports ADF manual duplex scanning. You can “Enable” or “Disable” this function in the scan setting interface of the control panel.

9.2.1.2. Push Scan

This machine supports ADF manual duplex scanning. Take “Scan to PC” as an example.

1. Put an original into the ADF with its front upward and its top fed first; meanwhile, make sure there are some paper in the carton.



2. Press “Scan - Scan to PC” in the control panel of the printer, and enable “Manual Duplex”.
3. Select proper scan setting, click “Scan” button to make a scan.
4. After scanning the first side, follow the steps 5, 6 and 7 in [Section 9.2.1.1](#).



Note: • Scanning to Email, FTP and USB flash disk also supports the manual duplex mode.

9.3. Cancel scanning

During the scanning, two ways are available to cancel the job:

Method 1: Press “Cancel” on the control panel of the printer to cancel scanning.

Method 2: Click “Cancel” in the scanning progress bar interface of the PC to cancel scanning.

10. Mobile Print/Scan (for models with WiFi function only)



Note: • Some functions are not available depending on different printer models. If you have any questions, please contact the Customer Service.

10.1. "Pantum" APP

"Pantum App" is a free application supporting mobile printing and scanning functions. You can print documents, photos and web pages, or scan photos and documents directly from the mobile terminal. Your printer may not support all of the above functions, please use the relevant functions of the "Pantum App" according to your model. Please make sure that the application has been installed before use and wireless network correctly connected.

10.1.1. Operating systems supported

"Pantum Print" APP is applicable to Android OS 5.1-10.0, and iOS 9.0-14.0 or later.

10.1.2. How to download Pantum App

How to download it for Android mobile device:

1. You can click "APP" in the upper right corner on the web page <http://www.pantum.com>, to view details and check, download and install the APP.
2. You can use Google Play Store > Apps > to search Pantum Mobile Printing > Download and install.

How to download it for iOS mobile device:

Click the App Store icon > Search interface > input "PANTUM" or "Pantum print" in the search bar > Download and install on the interface of iOS device to download.

10.1.3. How to use this "Pantum" APP

10.1.3.1. For Android Devices

10.1.3.1.1. Preliminary preparations

1. A printer that has wireless network function.
2. Android mobile device.

10.1.3.1.2. Operation steps

1. Turn on printer power.

2. For an Android mobile device, tap the “PANTUM” icon on the main screen to enter the first interface of “PANTUM”.
3. Select the connection method according to your habit to connect the printer.
4. Select the function you need and set it up to meet your function needs.



Note: • If printing fails, please inspect if the Android device is connected to the wireless network where the printer is connected to.

- If the Android mobile device did not detect any printer, check whether the printer is powered on and the printer is turned on.
- For more details, please refer to the mobile print user guide attached.

10.1.3.2. For iOS Devices

10.1.3.2.1. Preliminary preparations

1. A printer that has wireless network function.
2. iOS mobile device.

10.1.3.2.2. Operation steps

1. Turn on printer power.
2. For an iOS mobile device, tap the “PANTUM” icon on the main screen to enter the first interface of “PANTUM”.
3. Select the connection method according to your habit to connect the printer.
4. Select the function you need and set it up to meet your function needs.



Note: • If printing fails, please inspect if the iOS device is connected to the wireless network where the printer is connected to.

- If the iOS mobile device did not detect any printer, check whether the printer is powered on and the printer is turned on.
- For more details, please refer to the mobile print user guide attached.

10.2. Mopria mobile print

Mopria mobile print requires installing Mopria Print Service on the Android device. You can print photos, emails, webpages and files.

10.2.1. The operating systems and applications which support Mopria mobile printing

1. Mopria mobile printing is suitable for Android 4.4 or higher version.

2. Mopria mobile printing is supported by applications, e.g. Microsoft Office 1.01(16.0.4201.1006) or higher version, Adobe Reader (V11.7.1) or higher version.

For more information about applications which support Mopria printing, please visit:

<http://mopria.org/spotlight-wall>

10.2.2. How to download Mopria Print Service

1. Download Mopria Print Service from Google Play and install it on the Android device.
2. For Chinese users, please download the Mopria printing service at <http://cn.mopria.org> for downloading and installing this APP.

10.2.3. Preliminary preparations

1. A printer that has wireless network function.
2. Android mobile device.

10.2.4. How to use Mopria mobile printing

Before printing, please set the Mopria print service as "On".

1. Tap the "Settings" of the Home Screen on Android mobile device, and select "Print".
2. Set the "Mopria print service" as "On".

All other printing plug-ins should be shut down when you use Mopria mobile printing function. The printing steps may varied by applications, taking Adobe Reader as an example for explanation.

1. Turn on printer power.
2. Connect the Android mobile device with wireless network of the printer (Please refer to [Chapter 5](#) for how to connect).
3. Open the files you need to print with Adobe Reader on the Android device.
4. Click .
5. Tap "Print".
6. Please make sure the Pantum printer is selected.

If you selected other printer (or failed to select any printer), please tap the pull-down menu of printer, and select your Pantum printer.

7. Set printing parameters, e.g. print pages.
8. Tap "Print".



Note: • If printing fails, please inspect if the Android device is connected to the wireless network where the printer is connected to.

• If the Android mobile device did not detect any printer, check whether the printer is powered on and the printer is turned on.

10.3. AirPrint mobile print

Only printers that support AirPrint function can realize AirPrint printing. Please check if there is AirPrint mark on the packaging of the printer, in order to identify if the printer supports AirPrint function.

10.3.1. Operating systems supported by AirPrint mobile print

Applicable to iOS 7.0 or higher versions.

10.3.2. Preliminary preparations

1. A printer that has wireless network function.
2. iOS mobile device.

10.3.3. How to use AirPrint mobile printing

The printing steps may varied by applications, taking PDF as an example for explanation.

1. Turn on printer power.
2. Connect the iOS mobile device with wireless network of the printer (Please refer to [Chapter 5](#) for how to connect).
3. Open the files you need to print in the format of PDF on the iOS device.
4. Click .
5. Tap "Print".
6. Please make sure the Pantum printer is selected.
If you select other printers (or no printer), please click printer option and then select your Pantum printer.
7. Set printing parameters such as number of copies to print.
8. Tap "Print".



Note:

- If printing fails, please inspect if the iOS device is connected to the wireless network where the printer is connected to.
- If the iOS mobile device did not detect any printer, check whether the printer is powered on and the printer is turned on.

11. General Settings

This Chapter mainly introduces some general settings.



Note: • The panel appearance may be a little different due to difference in type or function.
All diagrams are only for reference.

11.1. System Setting

11.1.1. Language Setting

Language Setting is used to select the language to be displayed on the control panel.


1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "System Setting"- "Language set" to set language.



11.1.2. Sleep Time Setting

Sleep mode can reduce the energy consumption of printer effectively, and "Sleep time setting" can be made in the idle time before the device enters sleep mode.

1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "System Setting" - "Sleep time set" to set sleep time.

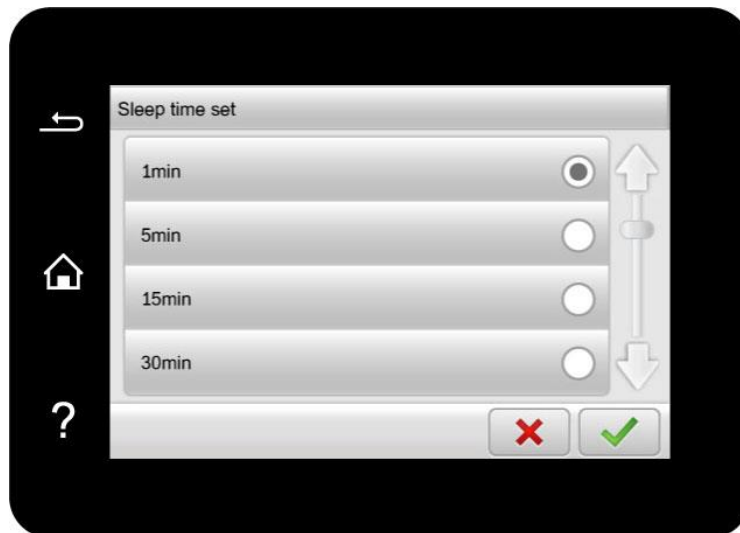


Note: • When the printer is in sleep mode, press any button to wake it up.

11.1.3. Ink saving setting

You can select the save toner mode which can reduce toner consumption and reduce printing cost. When save toner mode is "on", the printed color will be lighter. Save toner mode is "off" by default.


1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "System Setting"- "Toner save set" to turn toner saving mode on.

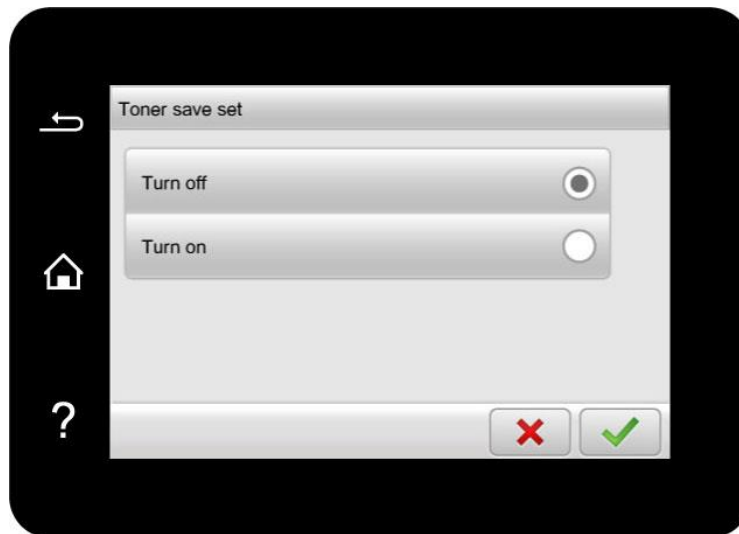

11.1.4. Restore Factory Settings

"Restore factory settings" is used to recover the default settings of printer. The printer will restart itself automatically after recovering factory settings.


1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "System Setting"- "Restore set" to reset to defaults.

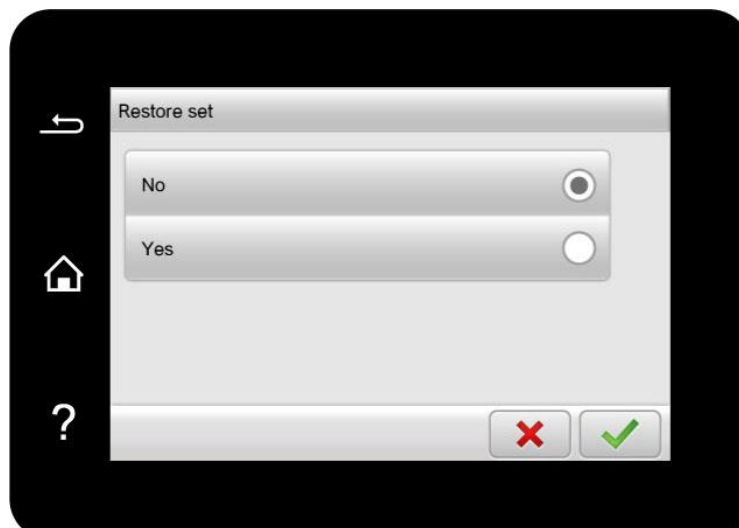

11.1.5. Mute printing

Set mute mode to realize low speed printing with low noise. When mute mode is "on", printing will be in a low speed. This mode is "off" by default.

1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "System Setting" - "Mute printing" to turn silent print mode on.

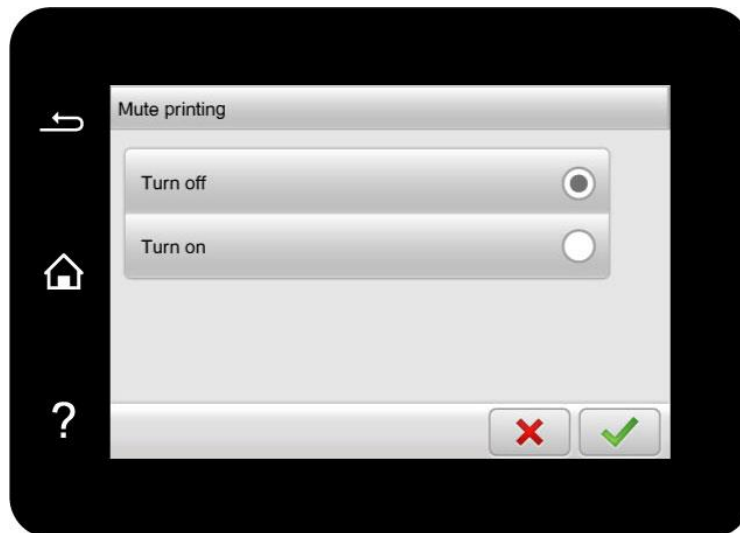

11.1.6. Screen brightness


1. Click " " button in control panel to enter "Menu Setting" interface.
2. Press "System Setting" - "LCD back light" to set the brightness.



11.1.7. Auto shut-off setting

"Auto shut-off setting" to set off condition and off delay of printer.

1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "System Setting"- "Auto off set" to set off conditions and delay.

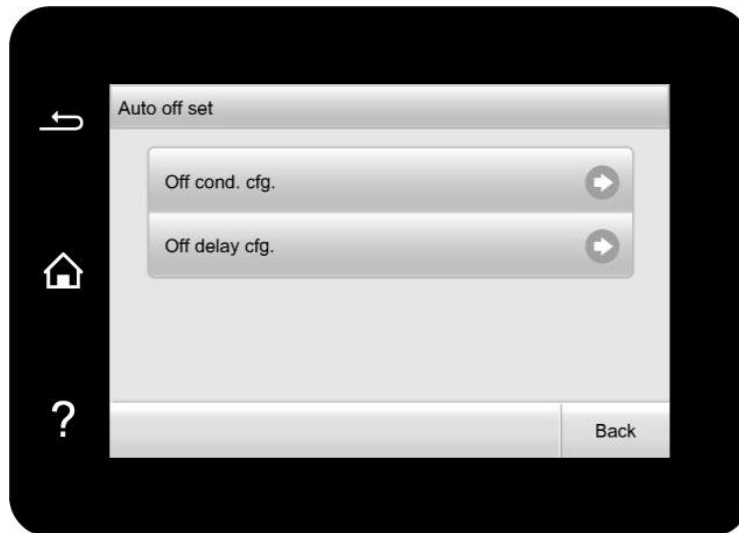

Note: Set auto off condition:

- Shutdown under no-port state (default configuration. : no port is connected, Wi-Fi function deactivated, printer is under standby or sleep mode.
- Shutdown under idle state: the printer is under standby or sleep mode.
- If auto off condition is satisfied, printer will be off at the preset time.
- After printer is off, power consumption is 0.5W or lower.
- Individual countries (or regions) do not support auto off setting.

11.1.8. Panel energy saving settings


Set the panel energy-saving function on the control panel to save the power consumption of the printer.



Note: • When the panel energy saving mode is "Enabled" and the printer is in the sleep mode, the touch screen of the printer will not take up by starting printing or scanning from the PC.



1. Click " " button in control panel to enter "Menu Setting" interface.
2. Press "System Setting" - "PNL Eco Settings" to enable or disable the panel energy saving function.

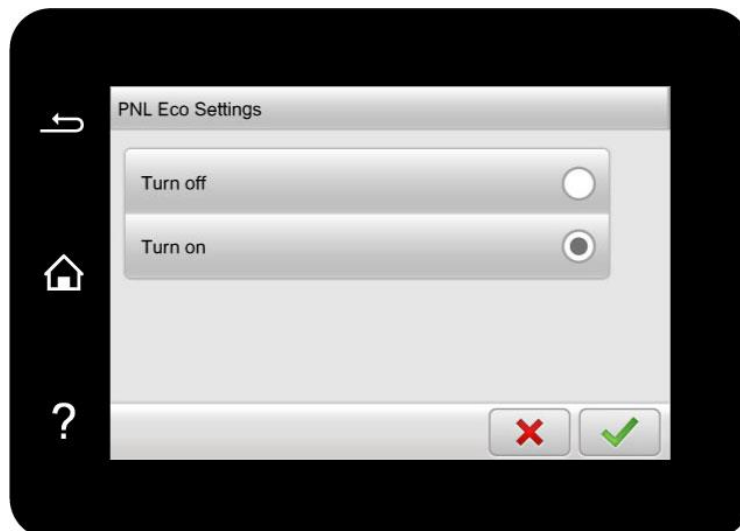


11.2. Print Settings

11.2.1. Print Density

You can set the toner density to make the print effect pale or dark.


1. Click " " button in control panel to enter "Menu Setting" interface.
2. Press "Print Setting" - "Print Density" to adjust the print density.

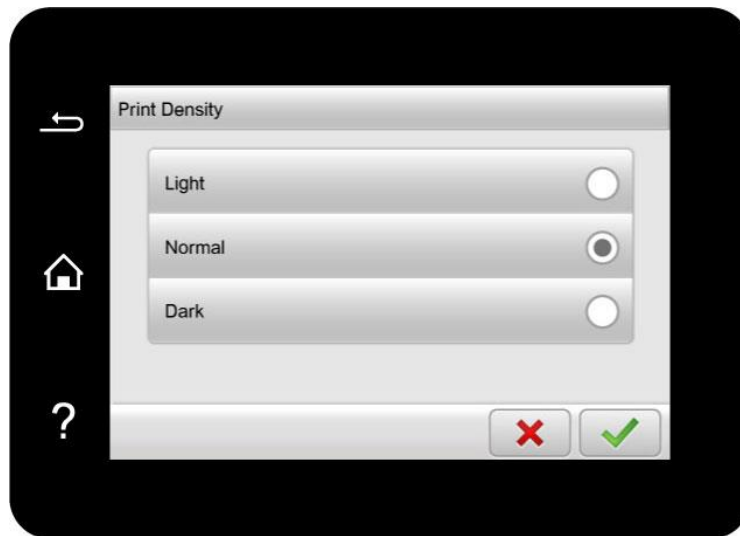

11.2.2. Color Calibration

When the environment where your printer is used changes greatly, the printer may automatically perform color calibration for better printing results. In case of ghosting or large color difference, you can manually calibrate colors as follows:

1. Click " " button in control panel to enter "Menu Setting" interface.
2. Press "Print Setting" - "ColorCalibration" to carry out "FullyCalibrate" and "MarginCalibrate".

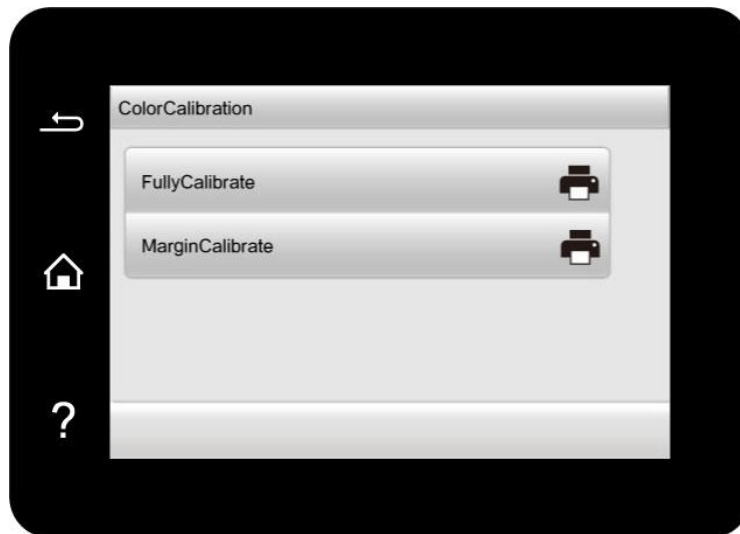


Note: • When your printer performs a certain amount of print jobs, it will automatically perform color calibration.

• When you replace the laser toner cartridge with a new one, the printer will automatically perform color calibration.

11.2.3. Transfer Print Settings

If the printed image is mottled or blotchy-looking, you can manually adjust the parameters under Transfer Print Settings in the following way:

1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click "Print Settings" - "Other Settings" - "TP Settings" to adjust the parameters under "Transfer Print Settings".

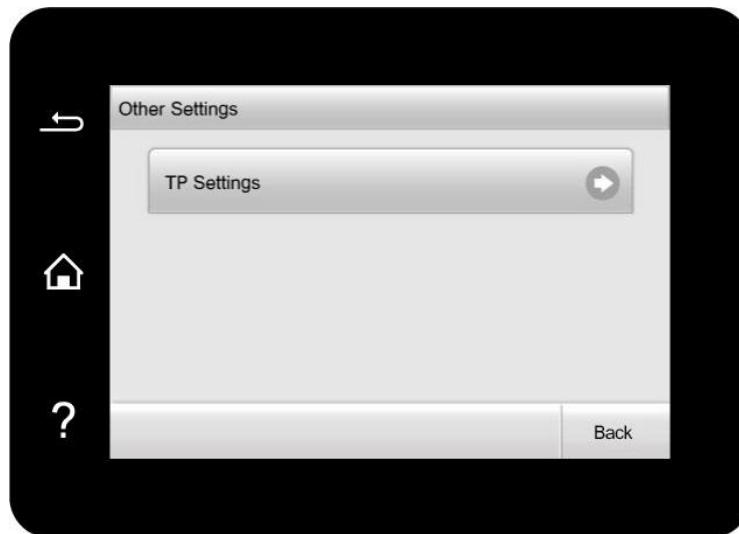


Note: • You can also set the transfer parameters through the printer setup interface on computer. Please see [Section 7.2.5](#).

11.3. Network Settings

You can check or set network through Network set.


1. Click " " button in control panel to enter "Menu Setting" interface.
2. Press "Network set" to set the following options: "Wired config.", "Wireless conf.", "Wi-Fi Dir set." and "Set SMTP Para.".

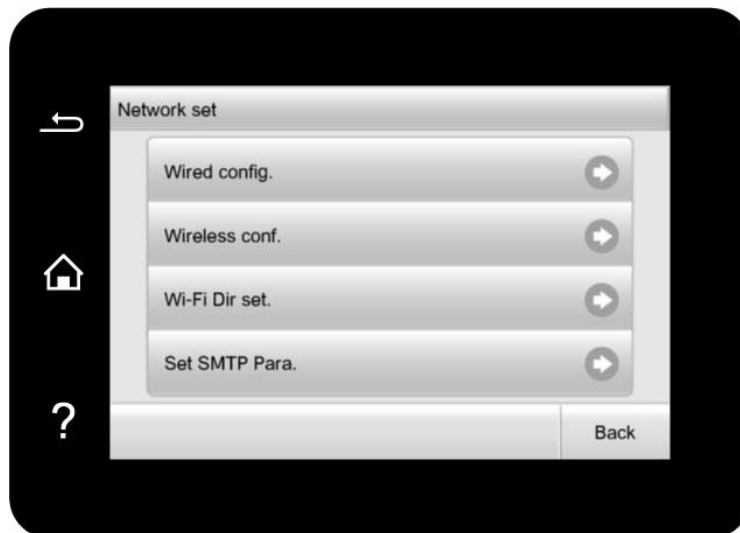

11.4. Network Information

You can check the network status through Network Information..


1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "Network info" to check "Wired Info", "Wireless Info" and "Wi-Fi dir. info".

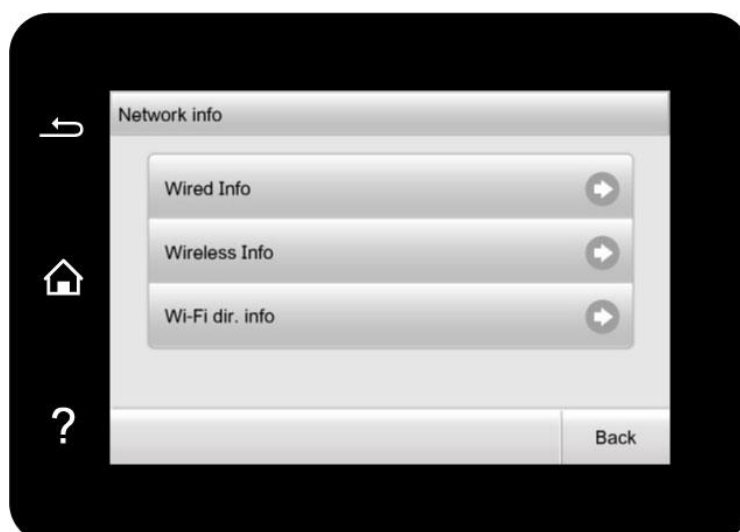

11.5. Online upgrade

This printer supports firmware upgrade with its control panel without a computer.

1. Switch on the printer and then connect it to network.
2. Click " " button in control panel to enter "Menu Setting" interface.
3. Press "Online upgrade" to upgrade firmware.

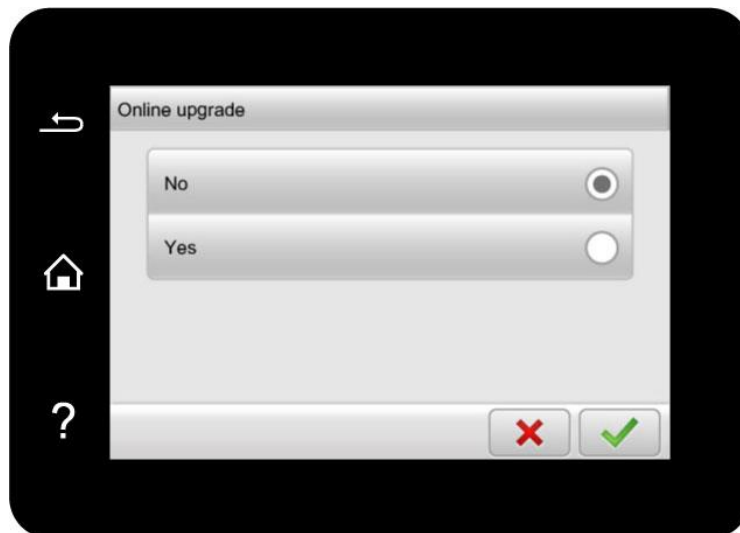

Note: • Perform upgrading according to the prompts and restart the printer. If the firmware download fails, restart the printer and then perform operation again.

11.6. Information report

You can print information report by operating control panel. These pages can help you to learn about product information, and diagnose and solve product failures.

1. Click " " button in control panel to enter "Menu Setting" interface.
2. Click and select "Info. report" to enter Info. report print, thus you can print product report as required.



Printable product reports include Demo pages, information pages, log information pages, menu structure pages, quality test pages, network configuration, email address, group mails, FTP address, Wi-Fi hotspot, etc.




Note: • The product report above is the most complete version, and may be different from the product report of model that you actually use.

11.7. Consumable information




You can view the consumable information via the control panel of the printer.

1. Click "" button in control panel to enter "Menu Setting" interface.
2. Press to choose "Consumable info." to check the remaining amount of toner, status of waste toner bottle, etc.

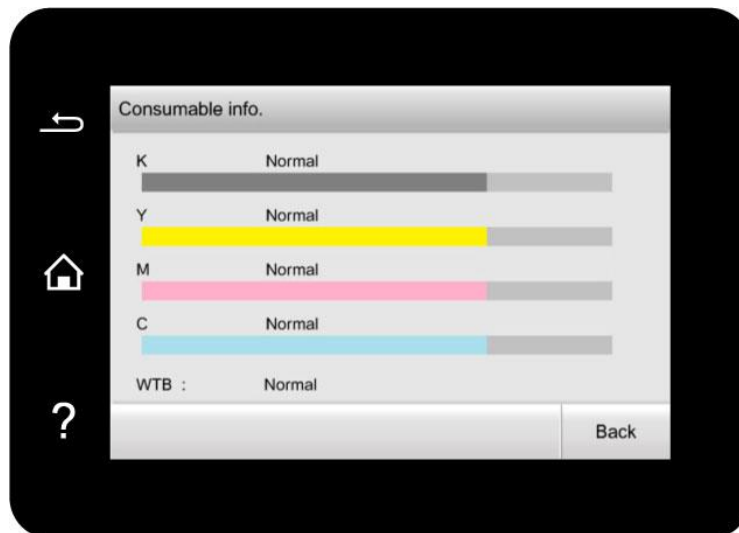


11.8. Configure the e-mail address book

1. Press to choose “Scan” - “To Email” - “Scan to” on the control panel to enter the “Scan to Email” setting interface.

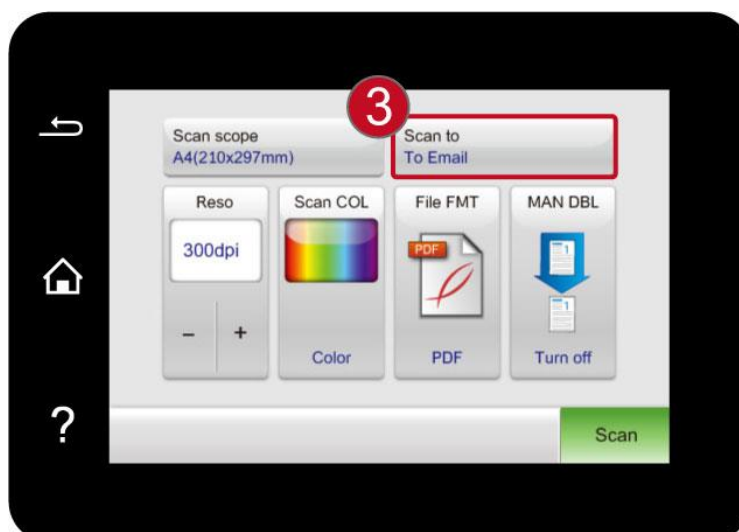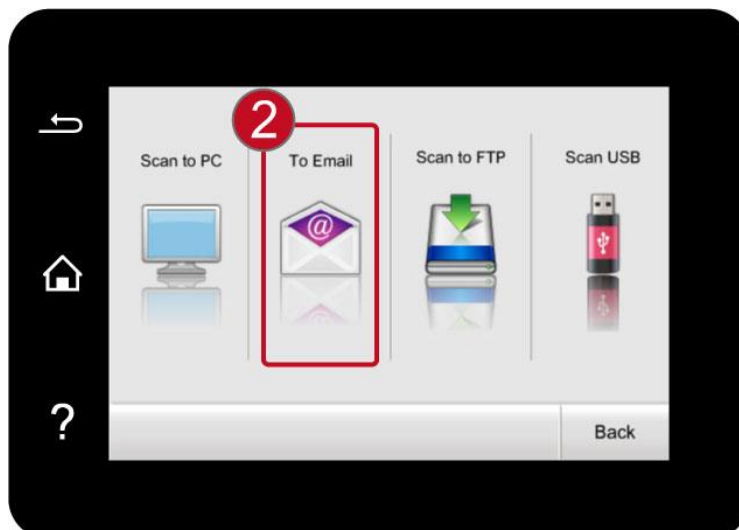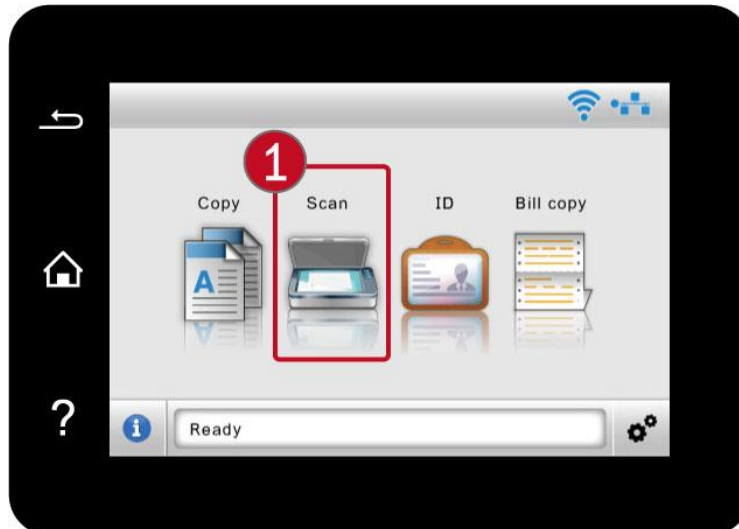

2. Press to choose “Custom Add.”, enter the email address in the input box, and then press “√” to save the settings.

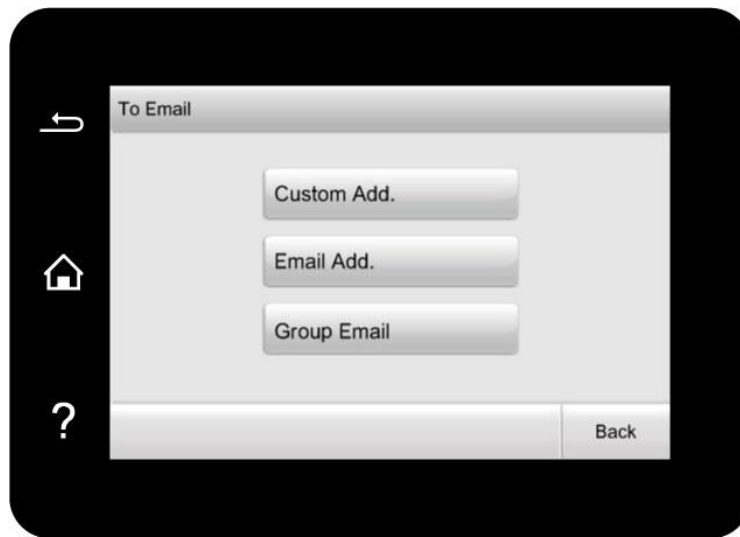

3. Click and select “Email Add.” to check, edit, delete and add Email Add. to group.

4. Click and select “Group Email” to check, establish, edit and delete group Email.






Note: • the address book members cannot be added to the group before creating a group e-mail.


- You will not receive the e-mail without proper settings on your e-mail box. For specific setting steps, please consult your network administrator.

11.9. Configure the FTP address book

1. Press to choose “Scan” - “Scan to FTP” - “Scan to” on the control panel to enter the “Scan to FTP” setting interface.

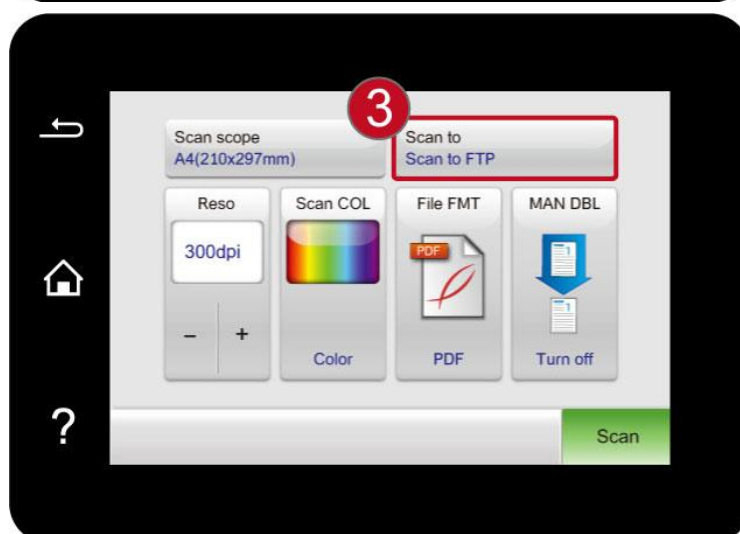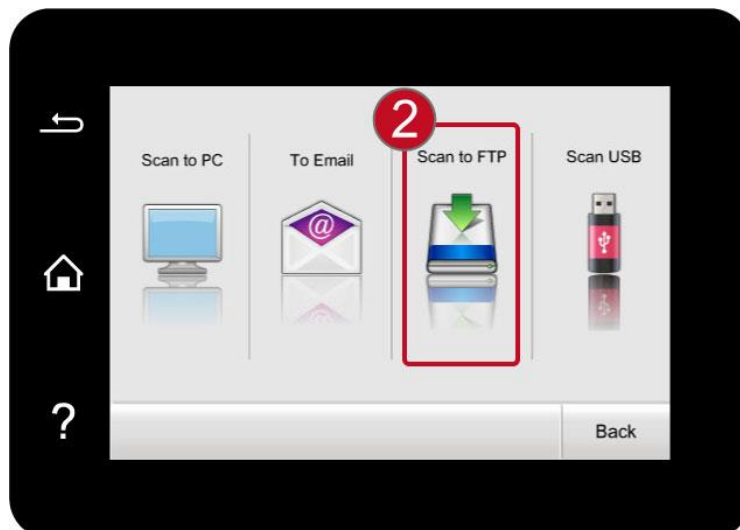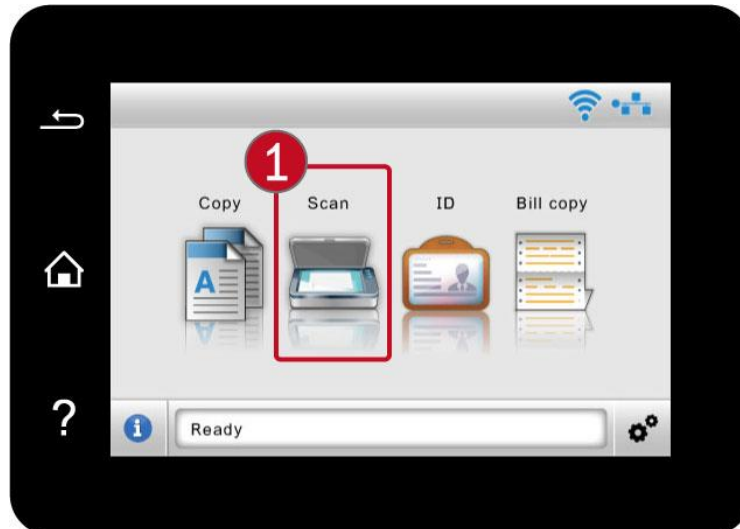

2. Enter FTP Add., FTP port, user name and password into input box, click “Custom Add.” button to add FTP Add. into FTP Add. book.

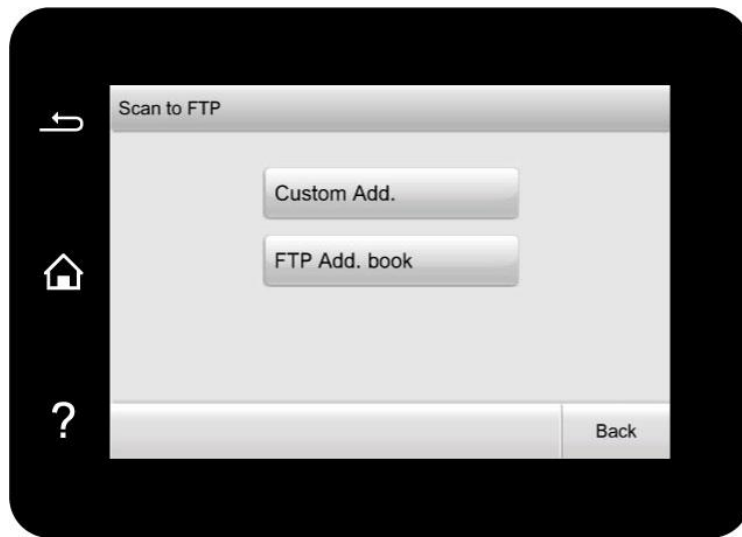

3. Click and select “FTP Add. book” to check, edit and delete.



Note: • before configuring the FTP address book, you may need to consult your network administrator for the server IP address, port number and FTP name.

12. Routine Maintenance




Note: • Printer appearance may differ because of different models and functions, so the schematic diagram is only for your reference.

12.1. Cleaning the Printer



:Some parts of the printer are still in high temperature within a short time after use. To prevent burns, please don't directly touch places labeled with high temperature warning in contact with internal components after opening the printer's front or rear cover.

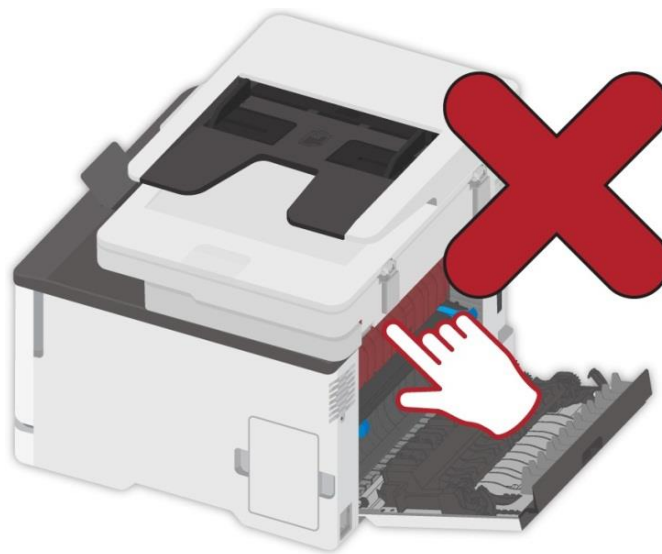

Note: • Disconnect the printer before cleaning.

- Please use mild detergents.
- Use caution when using the printer display to prevent pressing or damaging the touch display. Please use a soft dry cloth or dip in a neutral detergent or ethanol to clean the display surface. Do not use any organic solvents, acidic or alkaline solutions for cleaning.

12.1.1. Please use mild detergents.



:To avoid the risk of electrical shock when cleaning the exterior of the printer, unplug the power cord from the electrical outlet and disconnect all cables from the printer before proceeding.



Note: • Please perform this job every few months.
• Damage to the printer caused by improper handling is not covered by the printer warranty.

1. Turn off the printer, and then unplug the power cord from the electrical outlet.



2. Remove the paper from the standard exit and feed tray.

3. Remove any dust, lint, and pieces of paper around the printer using a soft brush or vacuum.

4. Wipe the outside of the printer with a damp, soft, lint-free cloth



Note: • Do not use household cleaners or detergents, as they may damage the surface of the printer.

• Make sure that all areas of the printer are dry after cleaning.

5. Connect the power cord to the electrical outlet, and then turn on the printer.



:To avoid the risk of fire or electrical shock, connect the power cord to an appropriately rated and properly grounded electrical outlet that is near the product and easily accessible.

12.1.2. ADF cleaning



Note: • the machine with the ADF should be regularly cleaned, removing dirt on the top cover of the ADF. Please wipe the place as shown in figure with a soft cloth.



1. Use a soft cloth to wipe the outside of the printer clean.



2. Open the scanner cover and then wipe the glass platen gently with a soft cloth.



12.2. Replacing parts and consumables

1. Use and maintenance of toner cartridge.

Please use the original toner cartridge for better printing quality.

Please pay attention to the following items while using the toner cartridge:

- Please keep the toner cartridge in a dry and dark place.
- Do not refill the toner cartridge without permission; otherwise, the damages caused will not be included in the scope of warranty of the printer.
- Please place the toner cartridge in cool and dry places.
- Please do not place the toner cartridge near ignition sources, as the toner inside it is inflammable and may cause fire.
- Please pay attention to toner leakage while it is taking out or disassembled. In case of toner leakage, skin contact with toner or spattering into eyes or mouth, please wash it with clear water immediately, or see a doctor if feeling unwell.
- When placing the cartridge, please stay away from children may contact area.

2. Service life of toner cartridge


- The service life of toner cartridge is depending on the toner quantity needed by printing.
- When the touch screen shows “Toner Cartridge Exhausted”, it means that the toner cartridge is nearly exhausted. Please replace the toner cartridge.

12.2.1. Replacing the toner cartridge




Note: • If the tray is unfolded, remove it before replacing the toner cartridge.



1. Open the front cover, and then push it down hard.

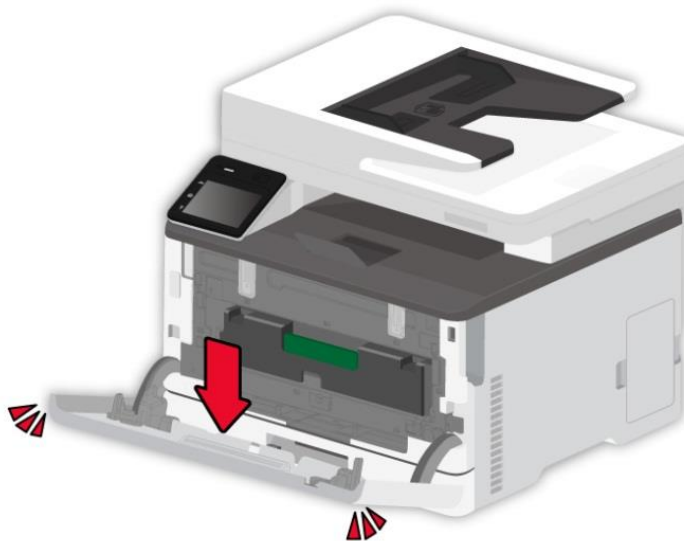

2. Pull out the toner cartridge tray.

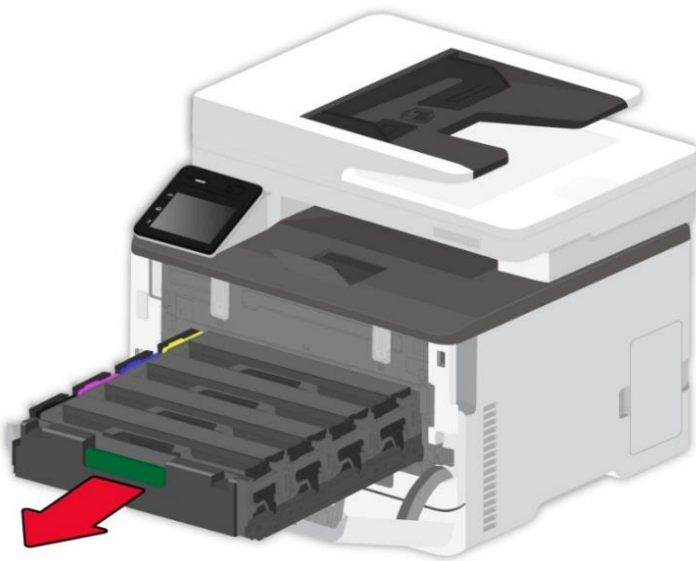

3. Remove the used toner cartridge.

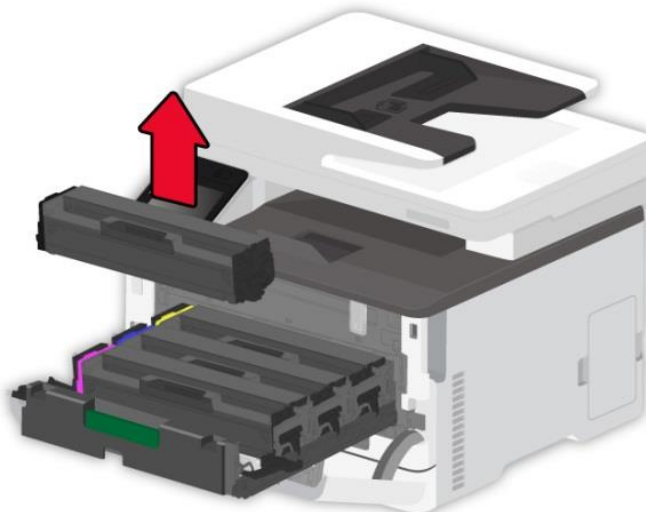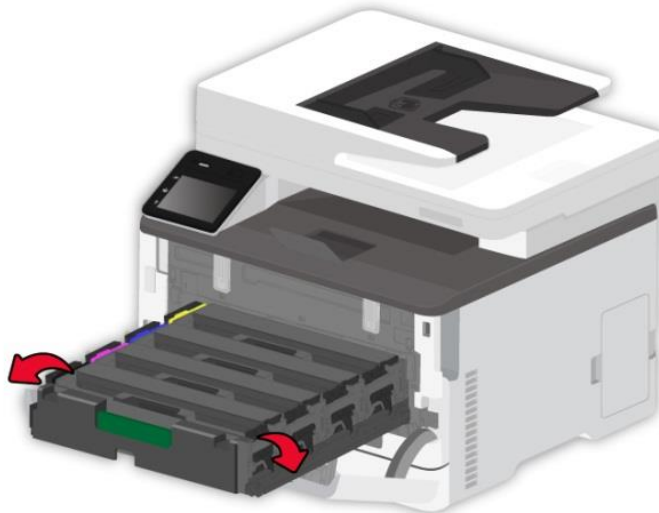

4. Unpack the new toner cartridge.





Note:



- Do not expose the bottom of the toner cartridge to direct light. Prolonged exposure to light may cause print quality problems.
- Do not touch the bottom of the toner cartridge. Otherwise it will affect the quality of future print jobs.



5. Insert a new toner cartridge.

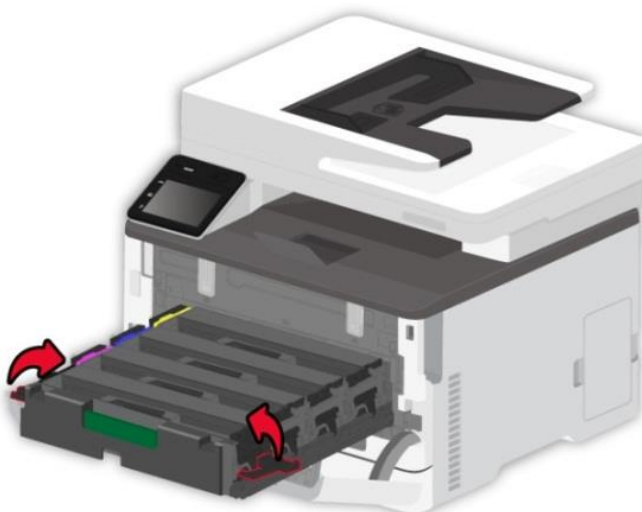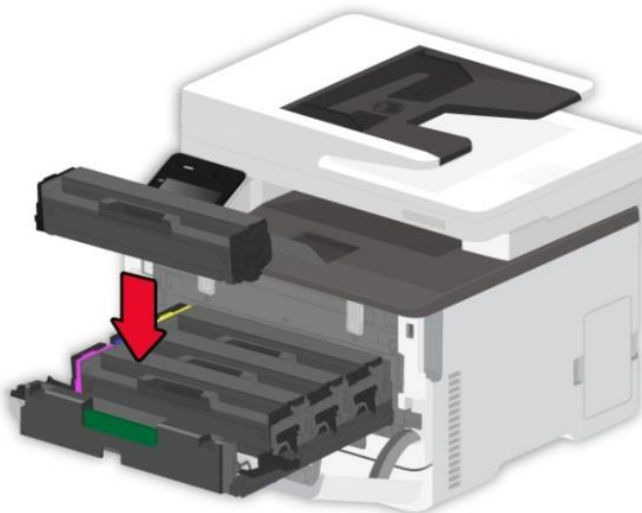

6. Insert the toner cartridge tray, and then close the cover.

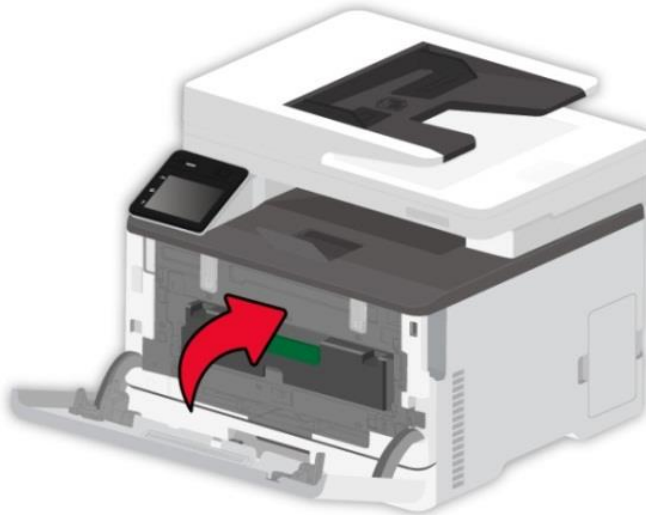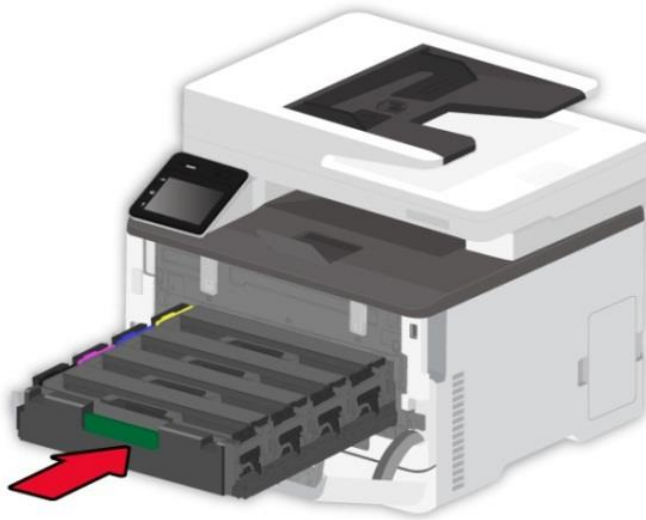

12.2.2. Replacing the waste toner bottle

1. Remove the used waste toner bottle.



Note: • To avoid toner leakage, keep the waste toner bottle upright.

2. Unpack the new waste toner bottle.
3. Insert a new waste toner bottle.



12.2.3 Replace the tray

1. Remove the used tray.



2. Unpack the new tray.
3. Insert a new tray.



12.3. Move the printer

12.3.1. Move the printer to another location



:To avoid the risk of electrical shock, do not place or use this product near water or wet locations.



:If the printer weighs more than 18 kg, then it requires two or more trained personnel to lift it safely.



:To avoid the risk of fire or electrical shock, use only the power cord provided with this product or the manufacturer's authorized replacement.



:When moving the printer, follow these guidelines to avoid personal injury or printer damage:

- Make sure that all covers and trays are closed.
- Turn off the printer, and then unplug the power cord from the electrical outlet.
- Disconnect all cords and cables from the printer.
- If the printer has casters on its base, then carefully move it to the new location. Use caution when passing over thresholds and breaks in flooring.
- Always use the handholds on the printer to lift it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer.
- Keep the printer upright.
- Avoid violent vibrations when moving.
- Make sure that your fingers are not under the printer when you set it down.
- Make sure that there is adequate clearance around the printer.



Note: • Damage to the printer caused by improper handling is not covered by the printer warranty.

12.3.2. Transporting the printer

When transporting the printer, use the original packaging.

13. Troubleshooting

Please read this section carefully. It may help you to solve common problems encountered during the printing process. If the problems persist, please contact Pantum Aftersales Service Centre.


Prior to handling common problems, first check that:

- The power cord is connected correctly and the printer is powered on.
- All of the protective parts are removed.
- The toner cartridge is installed correctly.
- The paper is correctly loaded into the tray.
- The interface cable between the printer and the computer is connected correctly.
- The correct printer driver has been selected and installed properly.
- The computer port is properly configured and is connected to the correct printer port.

13.1. Avoiding jams

13.1.1. Correct loading of paper

- Make sure that the paper lies flat in the tray.

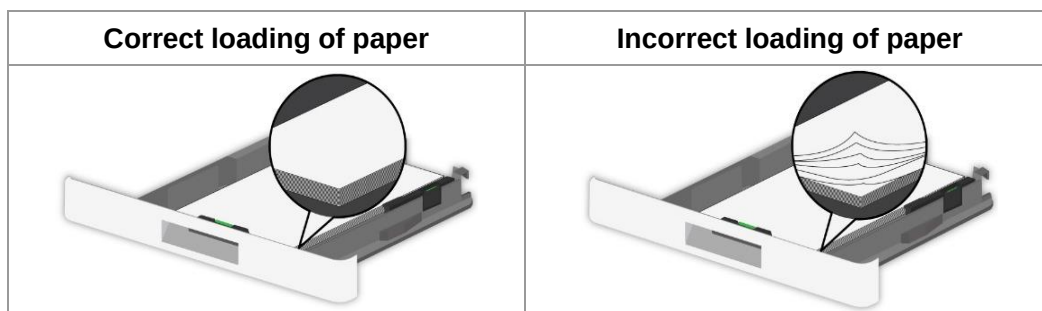


- Do not load or remove a tray while the printer is printing.
- Do not load too much paper. Make sure that the stack height is below the maximum paper fill indicator.
- Do not slide paper into the tray. Load paper as shown in the figure.



- Make sure that the paper guides are positioned correctly and are not pressing tightly against the paper or envelopes.
- After loading the paper, push the tray into the printer.

13.1.2. Use recommended paper

- Use only recommended paper or special media.
- Do not load paper that is wrinkled, creased, damp, bent, or curled.
- Flex, fan out and align the paper edges before loading.

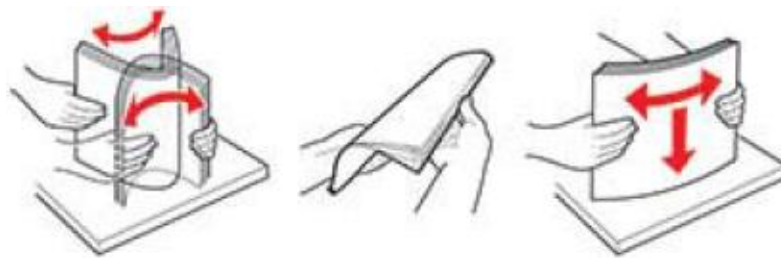

- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray
- Make sure that the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

13.2. Locate jammed paper



No.	Paper jam locations
1	Standard exit
2	Manual feed tray
3	Automatic Feeder Tray
4	Automatic document feeder
5	Rear cover

13.3. Cleaning Jammed Paper

13.3.1. Paper jam in the automatic tray


1. Remove the tray.



2. Remove the jammed paper.



Note: • Make sure that all paper fragments are removed.

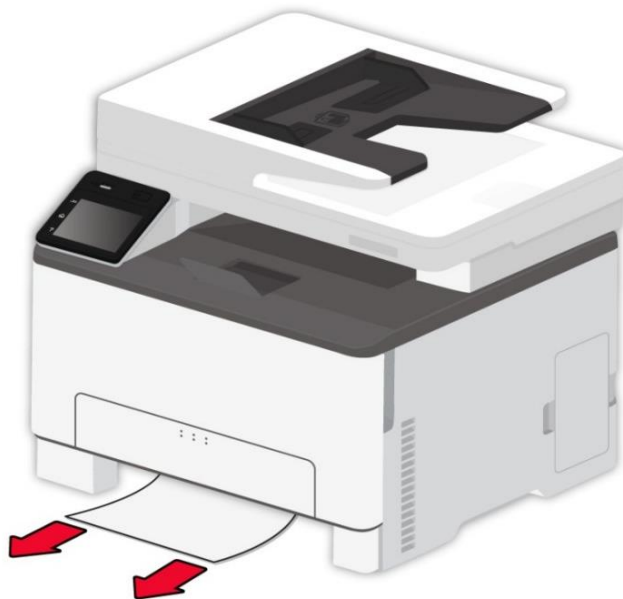


3. Insert the tray.

4. Open the rear cover.




The inside of the printer might be hot. To reduce the risk of injury by a hot component, allow the surface to cool before touching it.

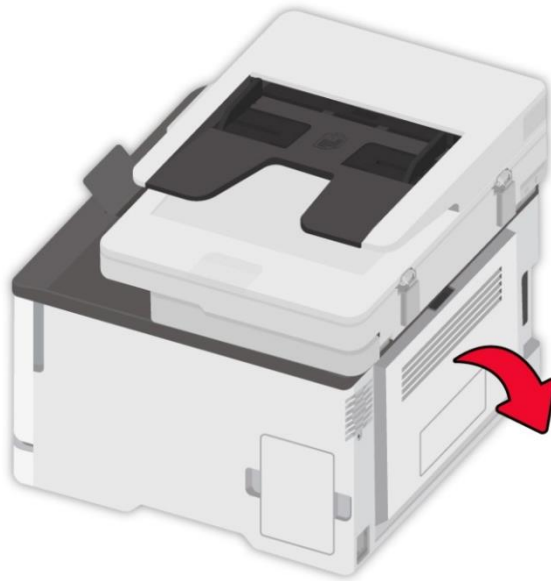

5. Remove the jammed paper.




Note: • Make sure that all paper fragments are removed.

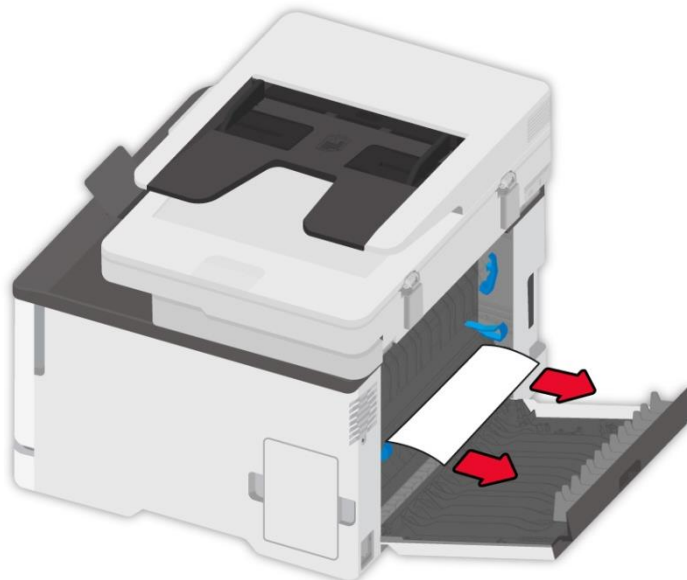

6. Close the cover.

13.3.2. Paper jam in the manual tray


1. Open the front cover, and then push it down hard.

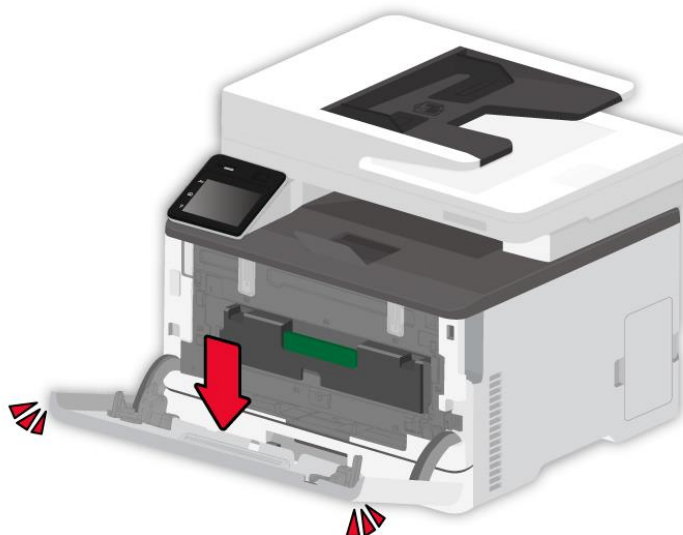

2. Remove the jammed paper.



Note: • Make sure that all paper fragments are removed.

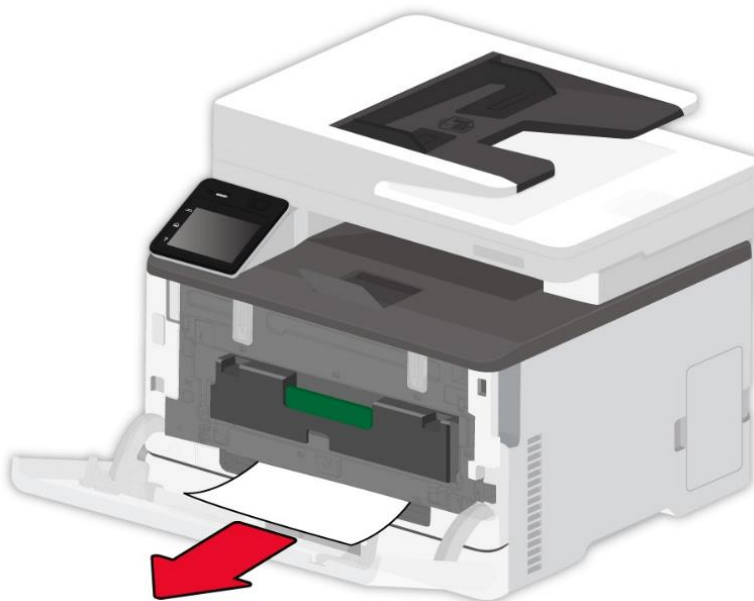

3. Close the front cover.




Note: • If the problem still cannot be solved, please contact the customer services center.

13.3.3. Paper jam in the rear cover

1. Open the rear cover.



:The inside of the printer might be hot. To reduce the risk of injury by a hot component, allow the surface to cool before touching it.


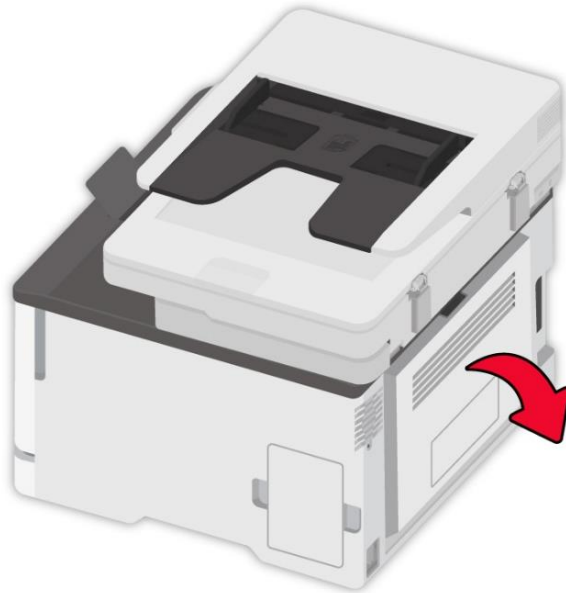


2. Remove the jammed paper.





Note: • Make sure that all paper fragments are removed.


- Fuser area

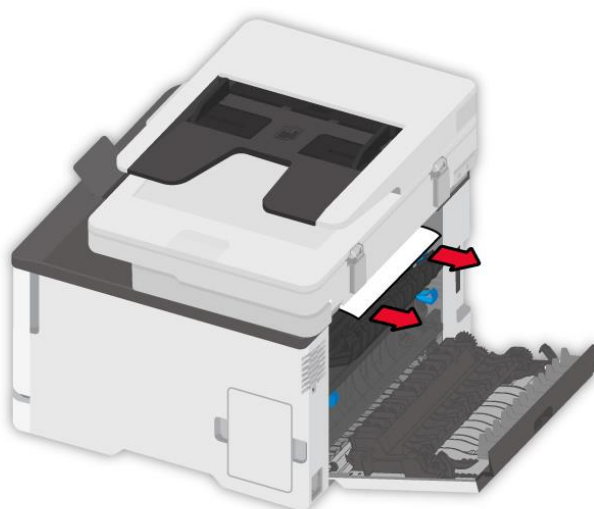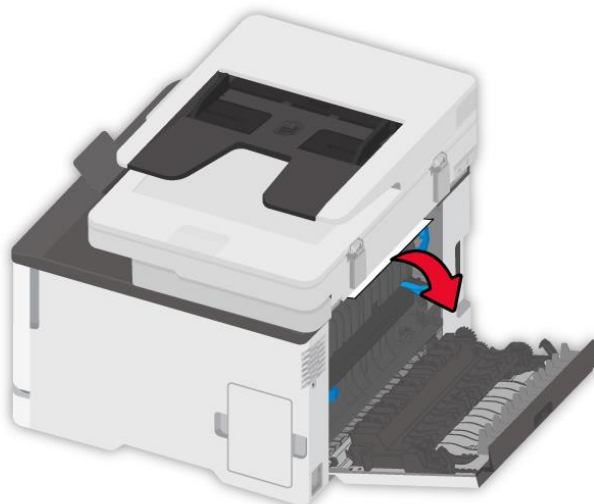

- Below the fuser area

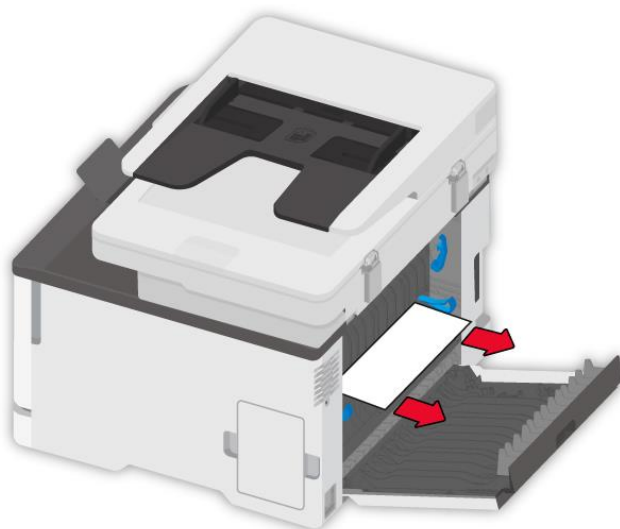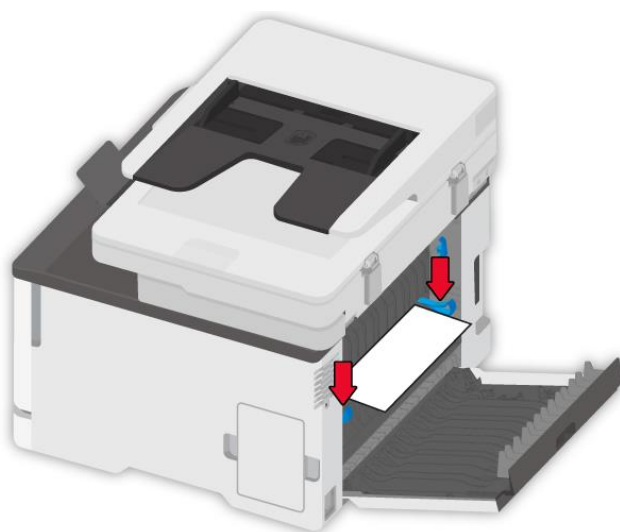

- Duplex unit

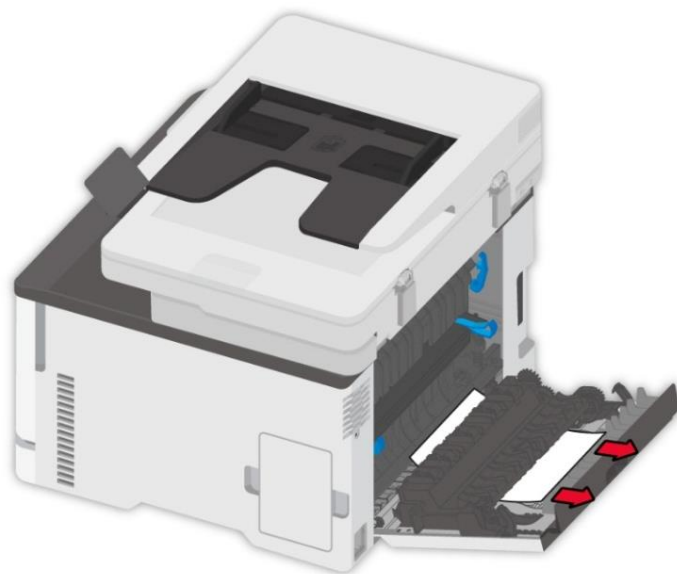

3. Close the cover.

13.3.4. Paper jam in the automatic document feeder (ADF)

1. Open the ADF's top cover.



2. Remove the paper jammed from the ADF.



3. After removing the paper jammed, close the top cover and then the printer will be back to the ready state.



4. If it is difficult to remove the paper jammed, please try to open the scanner cover and remove it from the pressing block.



13.4. Software Failure

Problem	Solution
The printer icon is not displayed in the "Device and Printer" folder.	Reinstall the printer driver. Ensure that the USB interface cable and the power cord are properly connected.
The printer is in Ready mode but it will not perform any print job.	If the failure still exists after restarting the printer, please reinstall the printer driver. Make sure the network cable of USB cable is connected correctly.
Failed to install the driver	Check whether the print spooler service is enabled. Check the power supply and the connection of the printer.
The driver cannot be used if the IP address of the printer has been changed	Modify the port IP address of the printer driver. If the above method does not work, please reinstall the printer driver. It is recommended that a fixed IP address should be set to the network printer. In the DHCP network, it is recommended to bind the IP address with the MAC address of the printer.

13.5. Error Message

Error Message	Cause	Measure
No toner cartridge is installed.	The toner cartridge is not installed correctly or the toner cartridge is damaged.	Install the toner cartridge correctly or replace it with a new one.
Toner Low	Any toner cartridge is running low on toner.	Please prepare a corresponding new toner cartridge.
Cartridge Err	The printer does not support the toner cartridge.	Please replace the toner cartridge supported by the printer.
Toner life end	Toner has been used up.	Replace the toner cartridge.

Feed Failure	Paper is not installed correctly. Paper is beyond the specification.	Please install the paper correctly.
Paper settings mismatched	Paper size or paper type at drive end mismatches setting on printer's control panel.	Please change paper size or paper type at printer end.
Paper jam in printer	Paper is not installed correctly.	Please install the paper correctly.
Waste toner bottle is nearly full	Waste toner bottle works under capacity.	Please prepare a new waste toner bottle.
The waste toner bottle is full.	Waste toner bottle is full.	Please replace the waste toner bottle.
No waste toner bottle is detected.	The waste toner bottle is not installed correctly.	Please remove and reinstall the waste toner bottle.
Scanner is Busy	With other scan jobs.	Please cancel the current scan job or wait for the completion of other scan jobs.
Scan failed	Scanner internal failure.	Please contact Pantum Customer Service.
No paper in ADF	If you have selected ADF as the scan source, this message appears when you start a copy or scan job without loading paper in the ADF.	Please put in the original properly.
Paper jam occurred on ADF	This prompt appears when there is a feed jam or feed failure in copying or scanning with the ADF.	Please remove the paper jam, arrange well and put originals into the ADF for scanning again.



Note: • If the problem still cannot be solved, please contact the customer services center.

13.6. Common Troubleshooting

13.6.1. Common Problems

Trouble Type	Problem	Cause	Solution
Problems in printing	Poor print quality	• See the image defect in Section 13.6.2.	• See the image defect in Section 13.6.2.
	Failed to copy	• The scanner is damaged.	• Please contact Pantum Customer Service.
Problems in copying	Copy Image Abnormal	• The scanner is dirty or defective. • The toner cartridge is dirty or damaged.	• Clean the scanner. • It is suggested to replace the original toner cartridge.
			• Ensure proper connection of the power cord.
		• Power cord of the device is not properly connected. • The cable between the computer and the printer is not connected properly. • Error in specifying the print port. • The printer is offline and User Guide of Printer is checked. • The printer has not recovered from an internal error, such as a paper jam, paper empty, etc. • Driver program of printer is not installed correctly.	• Disconnect and then reconnect the printer cable. • Check the Windows printer settings to ensure that the print job has been sent to the correct port. If the computer has more than one port, make sure that the printer is connected to the correct port. • Make sure that the printer is in the normal online status. • Please eliminate errors so that the printer can recover to its normal state. • Unload and reinstall the driver program of printer.
Problems with the Printer	The printer does not work		
Problems in scanning	Scanning error	• Data cable of the device is not properly connected. • The scan driver is installed	• Ensure proper connection of the data cable. • Reinstall the scan driver.

incorrectly.

- The LCD screen prompts error messages.

Problems with Paper Handling	Paper feed failure	• The print media has been loaded incorrectly. • The print media is out of the supported media range. • The feed roller is dirty. • Too many papers in paper tray.	• Please install printing medium correctly; please print with manual feed tray if special printing medium is used to print. • Please use the print media within the specification range. • Clean the feed roller. • Remove excess paper from the tray. For printing on special print media, use the manual tray.
	Paper Jam	• Too many papers in paper tray. • The print media is out of the supported media range. • There is foreign matter in the paper path. • The feed roller is dirty. • Internal parts failure.	• Remove excess paper from the tray. For printing on special print media, use the manual tray. • Make sure to use the paper that meets specifications. For printing on special print media, use the manual tray. • Clean the paper path. • Clean the feed roller.
	Print multipage feed	• Excessive static electricity on the print media. • The print media is damp and is sticking together. • Internal parts failure.	• Separate the print media to eliminate some static electricity. It is suggested that you use the recommended print media. • Separate the print media or use better quality and dry print media.



Note: • If the problem still cannot be solved, please contact the customer services center.

13.6.2. Image Defects



Note: • Before the problem is solved, please print the “Print Quality Test Page”. For the way to print the quality test page, please refer to [Section 11.6](#).

Problem	Cause	Solution
 Blank or white pages	• Toner cartridge is not installed properly.	• Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
 Dark print	• A higher density is set when printing. • The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough. • The paper used has been stored in the air for a prolonged time.	• Adjust the toner density from “Printing Preferences” according to your operating system, or by selecting “Print Density” on the control panel, see Section 11.2.1 for details. • Please correctly use the medium conforming to the specifications. See Section 2. • Keep the paper in its original wrapper before use. • Perform the “Fully Calibrated” setting, please refer to Section 11.2.2 for the setting mode.
 Ghost images	• The tray fails to load the media properly. • Toner cartridge is not installed properly.	• Load correct paper. Please refer to Section 2.4 for the way to load paper correctly. • Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray. • Perform the “Margin Calibrated” or “Fully Calibrated” setting, please refer to Section 11.2.2 for the setting mode.



Gray or colored background

- Toner cartridge is not installed properly.
- The paper path is dirty.
- Scanning exposure.
- If a gray or colored background appears during copying or scanning, the glass platen may be dirty.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Clean the paper path.
- Please close the cover on the manuscript, and then carry out copying and scanning.
- Clean the platen glass.



Incorrect margins

- The tray fails to load the media properly.
- The print margin is set incorrectly.
- Load correct paper. Please refer to [Section 2.4](#) for the way to load paper correctly.
- Please set the correct print margin.
- Perform the “Margin Calibrated” or “Fully Calibrated” setting, please refer to [Section 11.2.2](#) for the setting mode.



Light print

- A lower density is set when printing.
- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- The resolution in the print program is set too low, and the density is set too low.
- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.
- Toner Save set is checked.
- Please correctly use the medium conforming to the specifications. See [Section 2](#).
- Adjust the toner density from “Printing Preferences” according to your operating system, or by selecting “Print Density” on the control panel, see [Section 11.2.1](#) for details.
- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please check whether the Toner Save mode is enabled.
- Perform the “Fully Calibrated” setting, please refer to [Section 11.2.2](#) for the setting mode.



Missing color

- Toner cartridge is not installed properly.
- The developing unit of the missing color is not installed properly.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please remove the developing unit of the missing color and re-insert it.



Mottles and spots

- The toner cartridge is dirty or leaks toner.
- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.
- The print mode is set incorrectly.
- The paper path is dirty.
- If toner spots appear when copying and scanning, the platen glass may be dirty.
- The scanner is dirty or damaged.
- Please contact the customer service center.
- Please correctly use the medium conforming to the specifications. See [Section 2](#).
- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please set another print mode.
- Clean the paper path.
- Clean the platen glass.



Paper crooked

- The tray fails to load the media properly.
- The paper used has been stored in the air for a prolonged time.
- Load correct paper. Please refer to [Section 2.4](#) for the way to load paper correctly.
- Keep the paper in its original wrapper before use.



Print is crooked or skewed

- The tray fails to load the media properly.
- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- The paper used has been stored in the air for a prolonged time.
- The paper path is dirty.
- Load correct paper. Please refer to [Section 2.4](#) for the way to load paper correctly.
- Please correctly use the medium conforming to the specifications. See [Section 2](#).
- Keep the paper in its original wrapper before use.
- Clean the paper path.



Single color or black images

- Toner cartridge is not installed properly.
- If all-black image appear when copying and scanning, maybe it is scanning exposure, and the cover on the manuscript is not properly closed.
- The scanner is damaged.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please close the cover on the manuscript, and then carry out copying and scanning.
- Please contact Pantum Customer Service.



Text or image cut off

- The tray fails to load the media properly.
- Toner cartridge is not installed properly.
- There are foreign objects inside the printer.
- Load correct paper. Please refer to [Section 2.4](#) for the way to load paper correctly.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Please contact the customer service center.



Toner comes off easily

- Print media that does not meet the specifications is used. For example, the media weight is not supported by the printer.
- The paper used has been stored in the air for a prolonged time.
- Please correctly use the medium conforming to the specifications. See [Section 2](#).
- Keep the paper in its original wrapper before use.



Uneven print density

- Toner cartridge is not installed properly.

- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Perform the "Fully Calibrated" setting, please refer to [Section 11.2.2](#) for the setting mode.



Horizontal dark lines

- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.

- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.



Vertical dark lines

- The paper used has been stored in the air for a prolonged time.
- Toner cartridge is not installed properly.
- The paper path is dirty.
- If black vertical stripes appear when copying or scanning, the scanner or the platen glass may be dirty.
- Scanner Light bulb has smudges.
- The scanner is damaged.

- Keep the paper in its original wrapper before use.
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.
- Clean the paper path.
- Clean the scanner or the platen glass.
- Please contact Pantum Customer Service.



Horizontal white lines

- Toner cartridge is not installed properly.

- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.



Vertical white lines

- The print media does not meet the usage specification. For example, the print media is textured, damp, or too rough.
- Toner cartridge is not installed properly.
- Please correctly use the medium conforming to the specifications. See [Section 2](#).
- Pull out the toner cartridge tray, remove the toner cartridge, then insert the toner cartridge, and insert the toner cartridge tray.



Repetitive defects

- The toner cartridge is damaged.
- The print quality test page does not meet any of the following measurements:
- Cartridge:
- 25.70mm
 - 35.30mm
 - 75.6mm
 - 26.7mm
- Fuser:
- 56.5mm
- Transfer module:
- 25.10mm
 - 59.70mm
 - 28.30mm
 - 65mm
 - 65mm
- It is recommended to replace with the original toner cartridge.
 - Please record the data and contact the customer service center.



Note: • Failures above can be improved by cleaning or replacing toner cartridge. Please contact customer services center if the problem can still not be solved.

14. Product Specifications

-  **Note:** • Specification values vary slightly from printers with different models with different functions, and product specifications vary from different countries and regions.
- These values are based on the initial data. For more information about the latest specifications, please visit: www.pantum.com.

14.1. Overview of the Specifications

Product Size(W*D*H)	401mm*411mm*358mm
Product weight (including cartridge, excluding the package)	19.4KG
Product weight (including cartridge and package)	22.1KG
Print Environment	Optimal Printing Temp Range: 10-32°C
	Print humidity range: 20%RH~80%RH
Power Voltage	110V Model: AC110-127V,50Hz/60Hz,7A
	220V Model: AC220-240V,50Hz/60Hz,3.5A
Noise (SPL)	Standby: ≤30dB(A)
	Print/scan: ≤52dB(A)
	Copy: ≤54dB (A)
	Mute mode:≤ 47dB (A)
Enter network standby time	1 minutes
Power Consumption	Shutdown: ≤0.15W
	sleep: ≤1W
	Standby: ≤10W
	Network standby: ≤2W
	TEC: conforming to requirements of Chinese energy efficiency rating
Operating system	Microsoft Windows XP/ Windows 7/ Windows 8/ Windows 8.1/ Windows 10/Windows Server 2012/Windows Server 2016 (32/64 Bit)
	macOS 10.9/10.10/10.11/10.12/10.13/10.14/10.15
	Linux(Ubuntu 16.04/ Ubuntu 18.04)
	iOS 9.0-14.0
	Android 5.1-10.0

Communication interface	USB 2.0 (High Speed)
	IEEE802.3 10Base-T/100Base-Tx
	IEEE802.11b/g/n (support WPS)
	Operation Frequency: 2412Mhz - 2472Mhz
	RF output power: ≤20dBm

14.2. Print Specifications

Print Speed	18ppm(A4)/19ppm(Letter)
Print Time of First Page	Black & White: ≤10s
	Color: ≤12s
Print Language	PDL

14.3. Copy Specifications

Copy Speed	Black & White: 18cpm
	Color: 18cpm
FCOT	FB: ≤16s
	ADF: ≤18s
Other Copy Functions	ID Printing, Document Printing, N-in-1 Printing, Clone Printing, Poster Printing, Collated Printing

14.4. Scan Specifications

Scan Type	Flatbed + ADF
Scanning speed	18ipm
Maximum Scan Size	Flatbed: 216×297mm
	ADF: 216×356mm
Scan Mode	Color/Grey/Black & White
Scan Output Function	Scan to E-mail, PC, FTP and USB

PANTUM